



HP Pavilion N3350 RAM Replacement

This guide will show you how to replace your HP Pavilion N3350 RAM.

Written By: Brandon Boisclair



INTRODUCTION

If your computer spends a lot of time rebooting, freezing, or shows the 'Blue Screen of Death', it is possible that your Random Access Memory (RAM) is to blame. A replacement will be necessary. Follow these steps after purchasing a new RAM to replace.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)

Step 1 — RAM




- Locate the RAM on the bottom side of the laptop, the cover is secured by a 6 millimeter screw. Remove this with a Philips #1 screwdriver.

Step 2

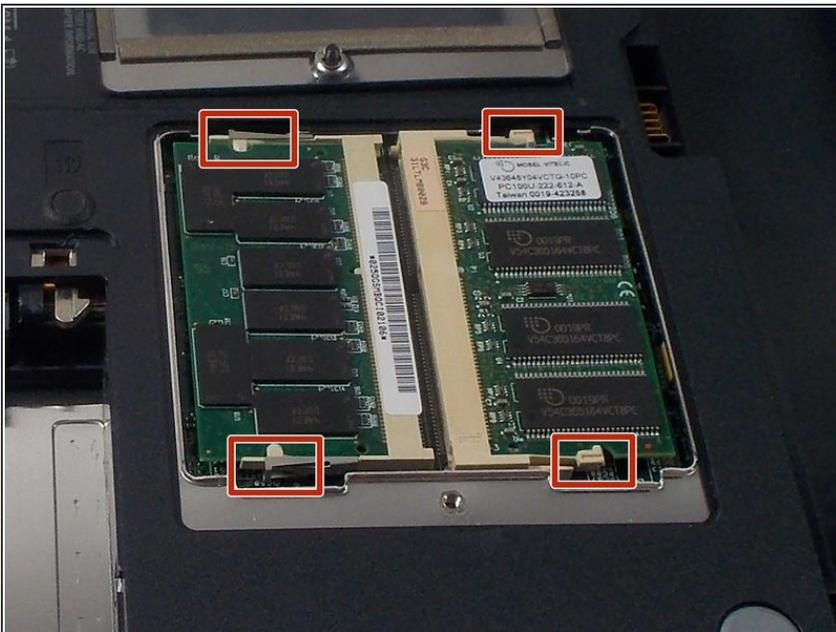


- Underneath are the RAM boards. They are secured by two plastic clips each. Locate these to continue removal.

Step 3

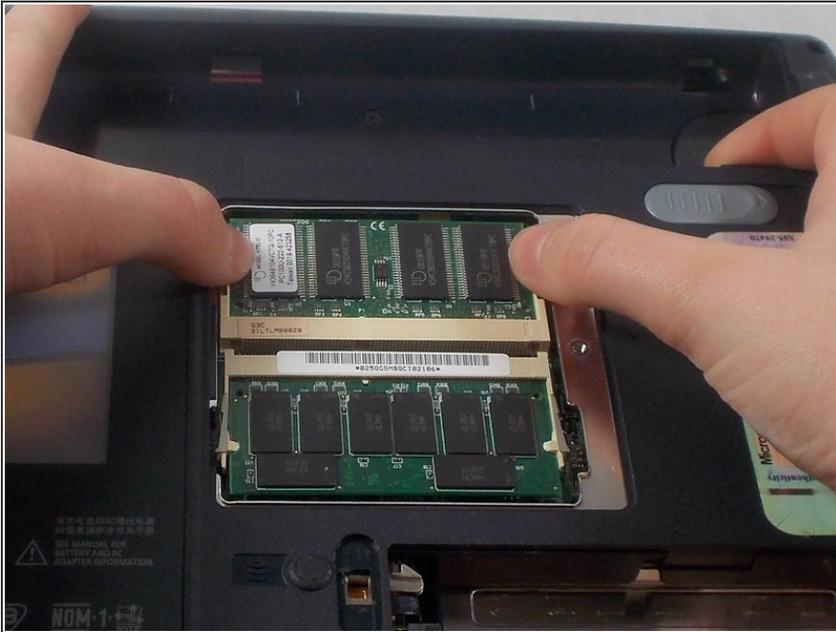

- Place your thumbs on two of the clips securing one board. Push outwards on the clips. This should pop the board up.

Step 4

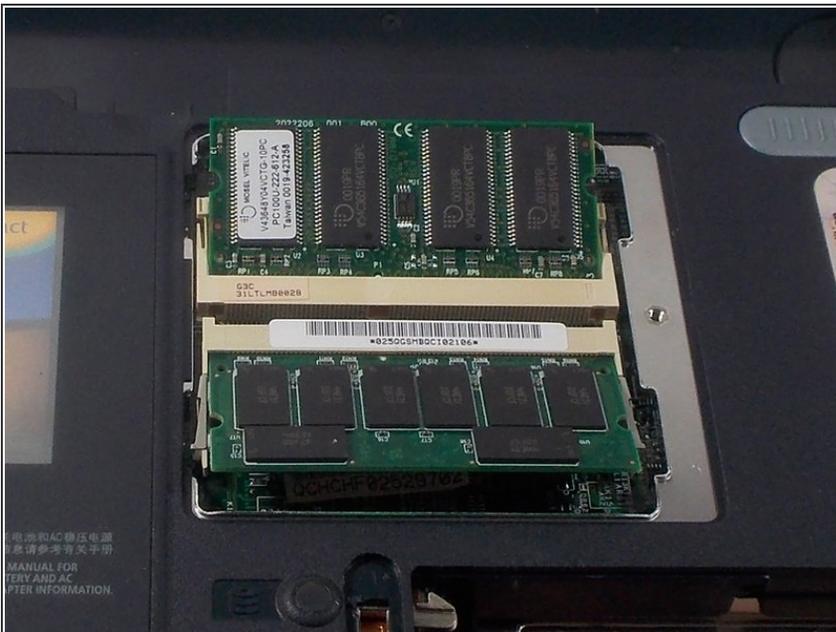

- Repeat on second board. When both are released, they should appear as they do in the picture.

Step 5



- The RAM should be easily removed once released from the plastic clips.

To reassemble your device, follow these instructions in reverse order.