




# Dell Studio 1536 Base Cover Replacement


Written By: Johnathan Hammond

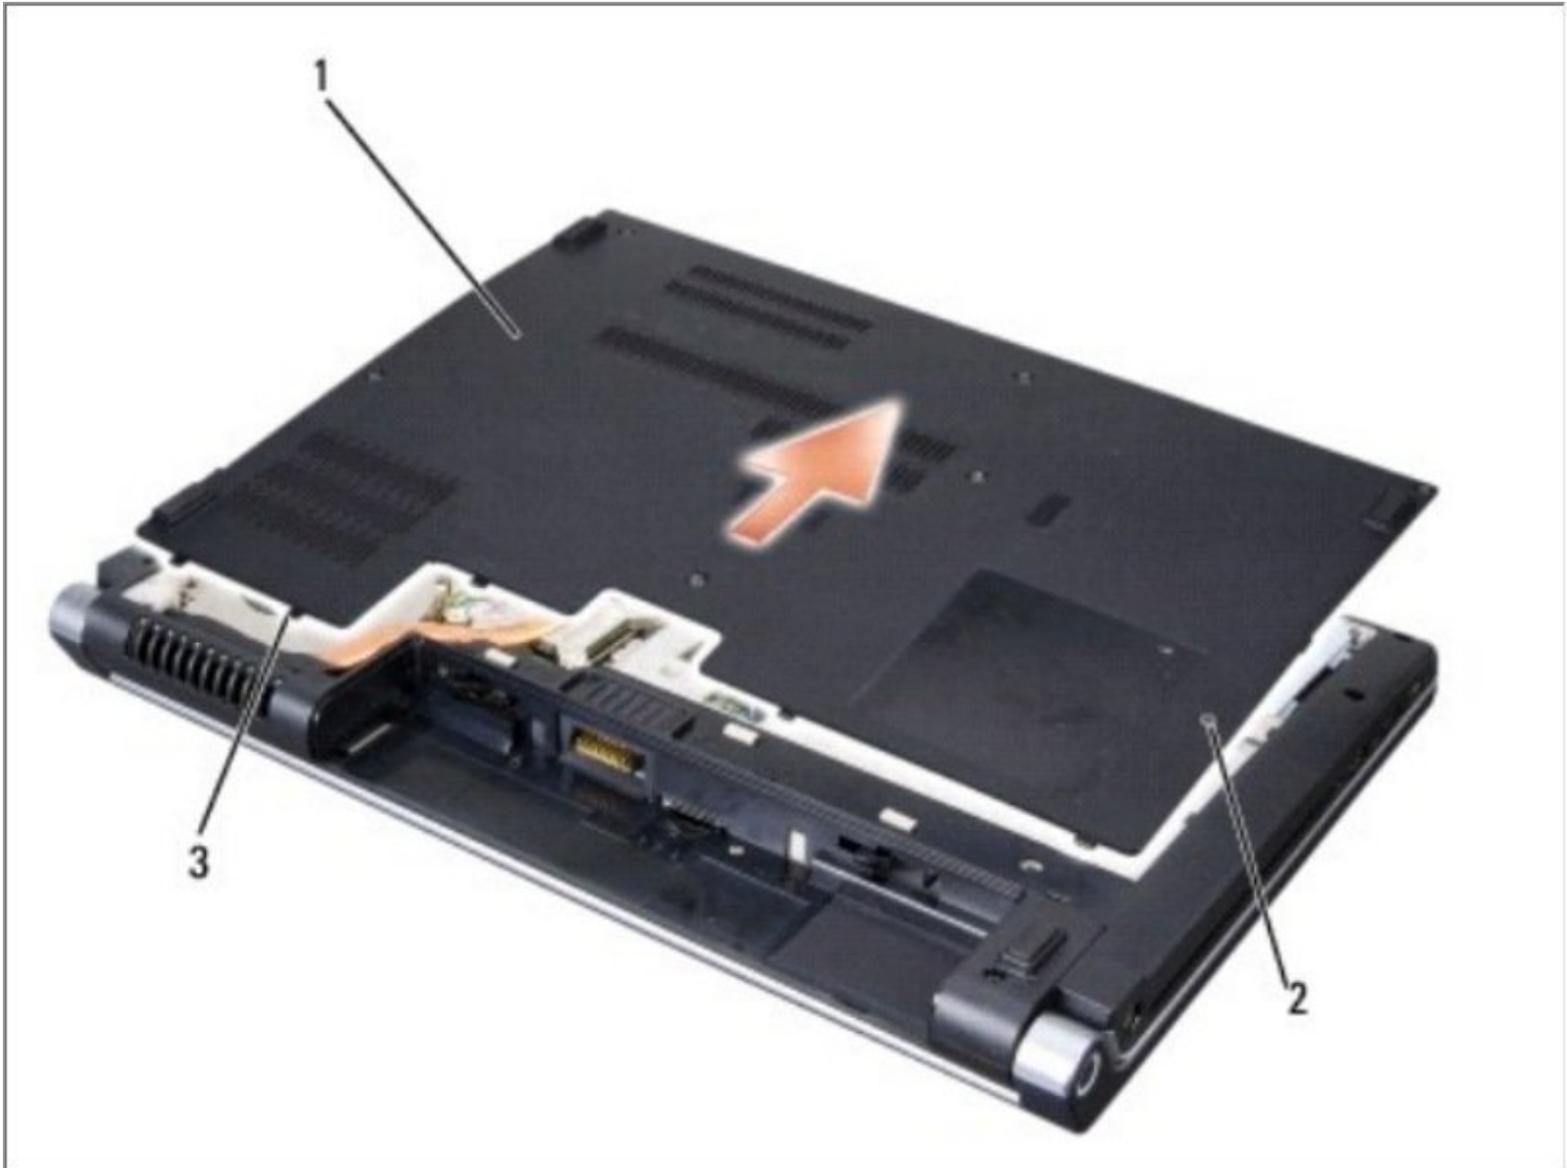

 **TOOLS:**


- Phillips #0 Screwdriver (1)
-

## Step 1 — Battery

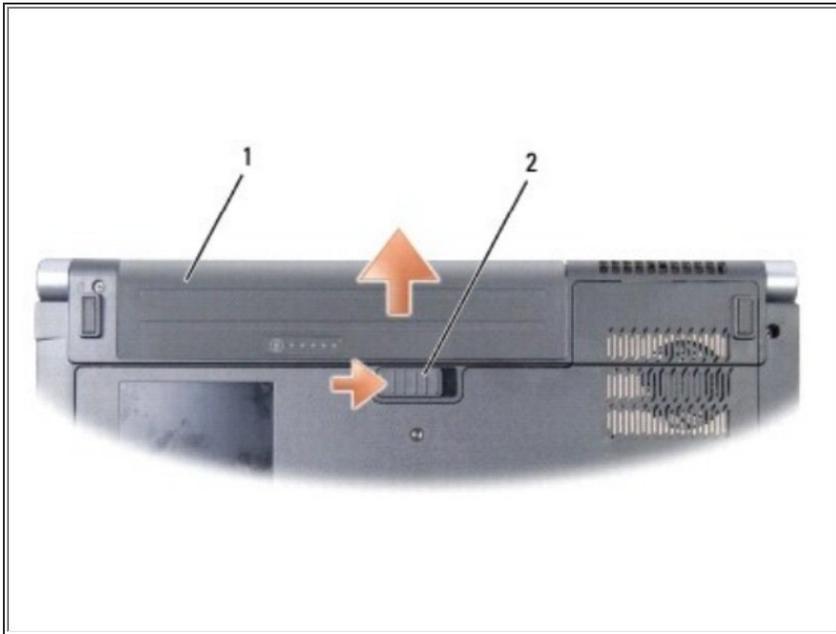

- Slide the battery release latch until it clicks into place.
- Slide the battery out of the battery bay.

## Step 2 — Base Cover

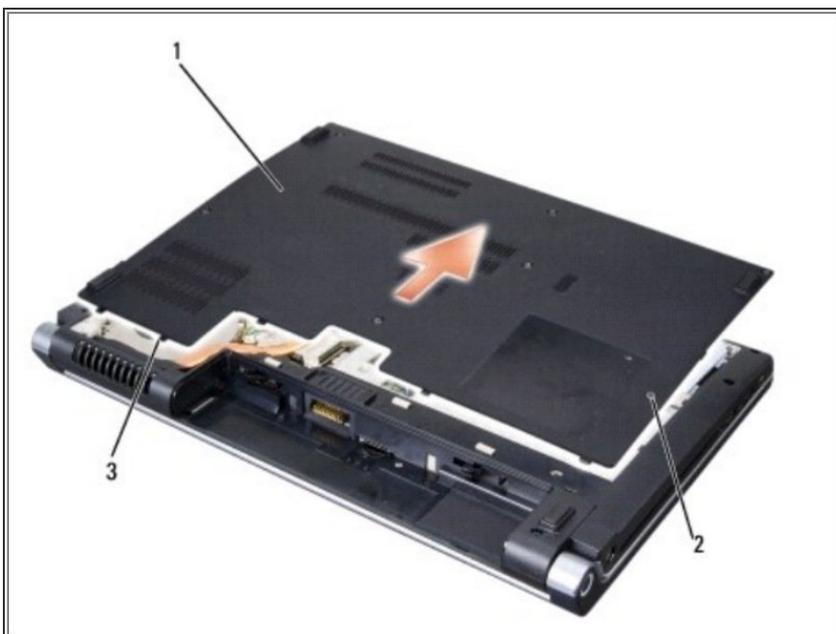

- Loosen the seven captive screws on the base cover and lift the cover off the computer at an angle as shown in the figure.

**⚠ CAUTION:** Do not touch the processor thermal-cooling assembly. Processor components should be removed only by trained support personnel.

To reassemble your device, follow these instructions in reverse order.