



# Dell Inspiron N4110 Screen Replacement

Is your laptop screen cracked or broken? This...

Written By: Abigail Keith



# INTRODUCTION

Is your laptop screen cracked or broken? This guide will help you to replace the screen in several easy steps.

---

## TOOLS:


Phillips #1 Screwdriver (1)

Tweezers (1)

---

### Step 1 — Battery



 **Make sure the laptop is off and unplugged before starting this step.**

- Locate the battery on the underside of the laptop.
- Push the two battery clips following the direction of the arrows.

## Step 2



- Push upward from the base of the battery.


## Step 3



- Pull battery away from computer until it is fully removed.




## Step 4 — Screen

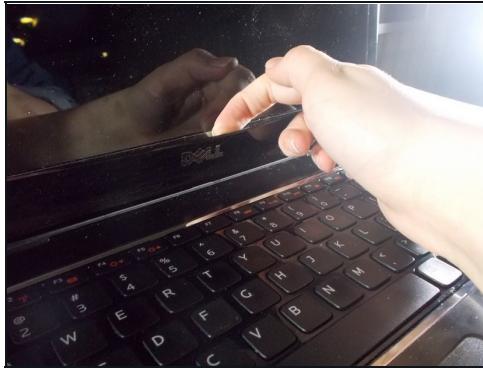


- Use your hands to remove the plastic cover from around the screen.
- ① This can seem difficult, but it can be done.

## Step 5

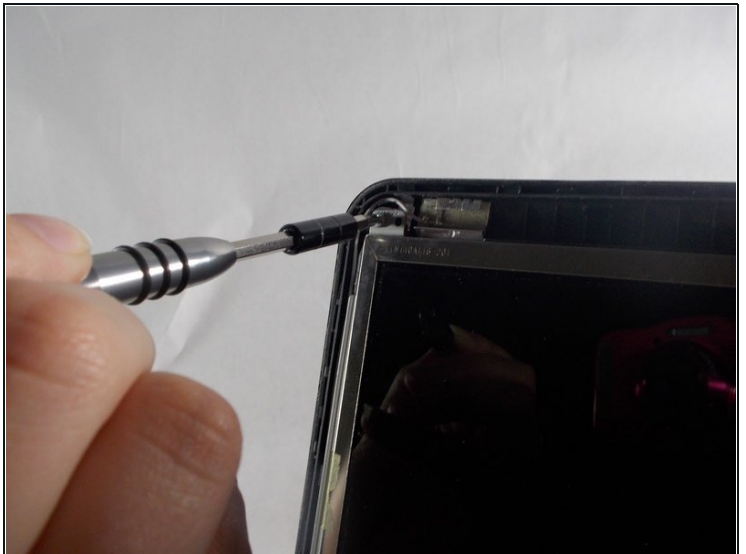

- Unscrew the two 2.5x4 mm screws from the top of the screen.


## Step 6

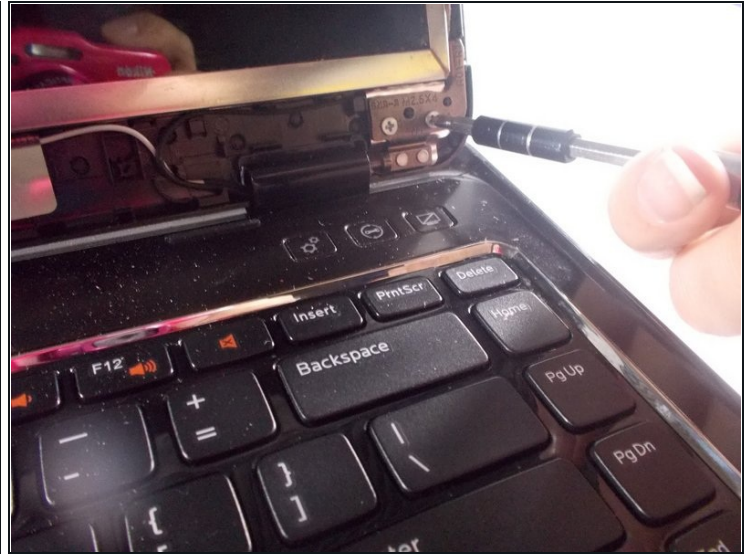

- Loosen the four 2.5x4 mm screws from the base of the screen.

ⓘ This will allow the screen to lift from inside the top of the case.



## Step 7

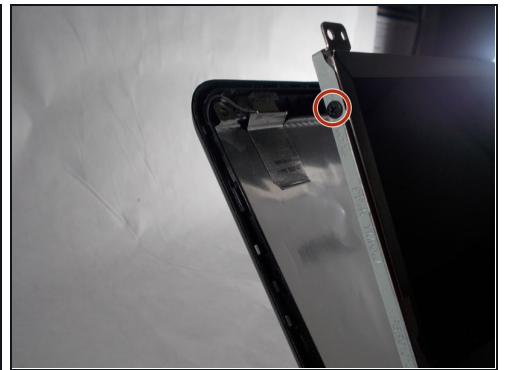

- Unscrew the four 2x3 mm screws from the two sides on both the top and bottom.




## Step 8

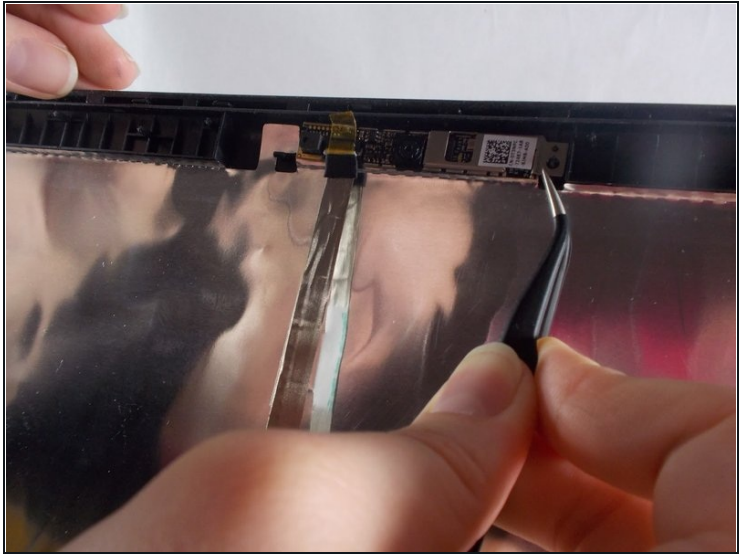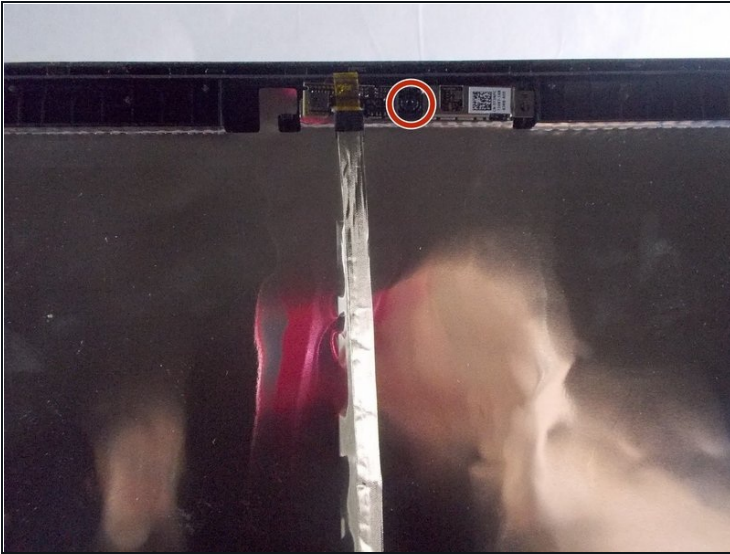


- Use [tweezers](#) to peel the webcam away from the top of the laptop.
- ❗ The webcam is only held in place by a webcam, this is easy to pull away from the screen.

## Step 9

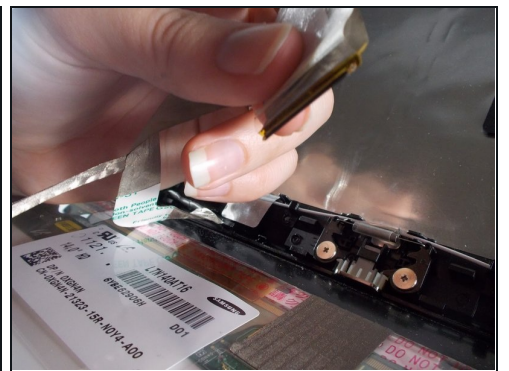

- Lift the adhesive flap from the cord that connects the computer to the screen.
- You can then disconnect the cord from the screen.

## Step 10

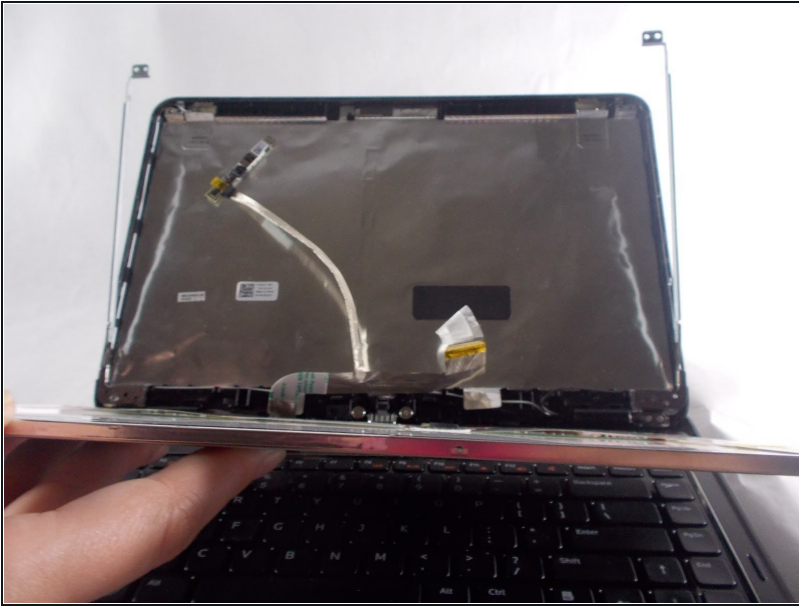

- The screen can now be fully removed from the computer.

---

To reassemble your device, follow these instructions in reverse order.