


Dell Precision M2400 Memory Module Replacement


Written By: Johnathan Hammond

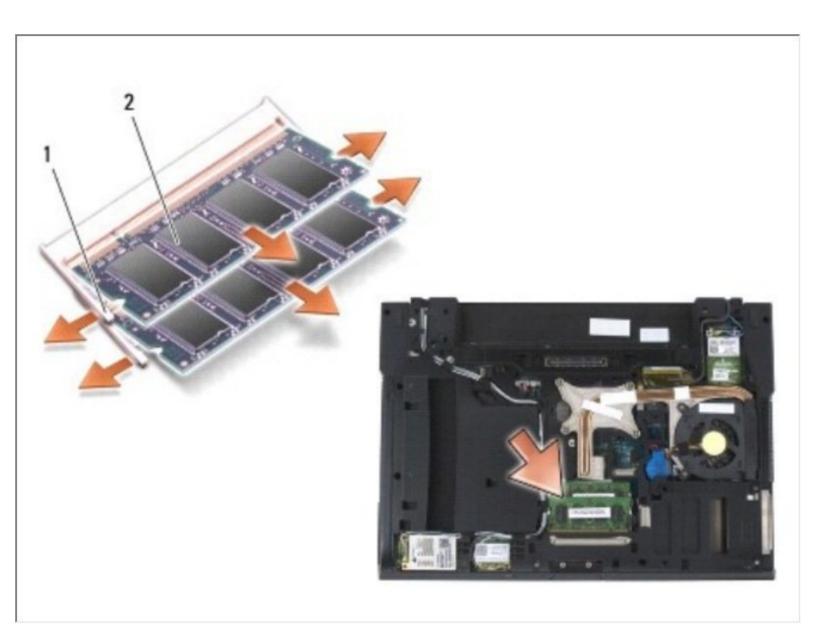




Phillips #0 Screwdriver (1)

Step 1 — Battery

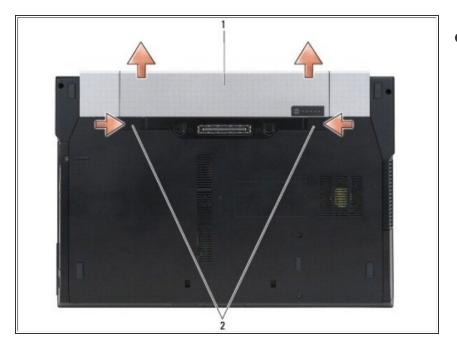


- Slide the battery release latches toward each other to lock them in an open position.
 - Slide the battery out of the battery bay.

Step 2 — Base Cover

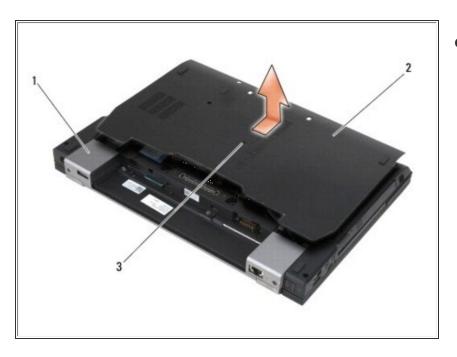

- Loosen the captive screw.
 - Slide the bottom of the base assembly away from the hinge covers, and lift to remove the bottom of the base assembly.

Step 3 — **Memory Module**

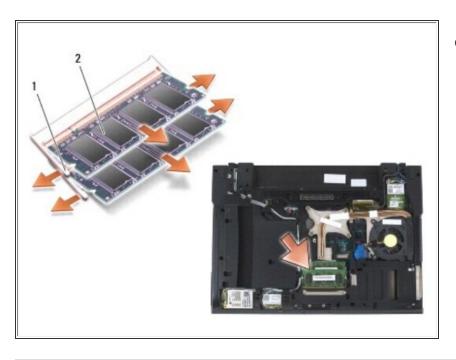

- Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the memory module pops up.
 - Remove the memory module from the connector.

To reassemble your device, follow these instructions in reverse order.