



# Samsung Galaxy S7 Active Screen Replacement

How to replace a Samsung Galaxy S7 Active screen.

Written By: Erick Vazquez



# INTRODUCTION

This guide will teach you how to pry open your screen through the front side of the phone.



## TOOLS:

- [Metal Spudger](#) (1)
- [Tweezers](#) (1)
- [Heat Gun](#) (1)




## PARTS:

- [Samsung Galaxy S7 Active Screen](#) (1)

## Step 1 — Samsung Galaxy S7 Active Disassembly



- Melt the adhesive on the screen by applying a blow dryer directly on the screen.

 Your phone is hot, please do not touch it with your bare hand.

## Step 2



- Wedge the metal spudger in between the screen and the frame to begin separating them.
- ① It would be easier to separate the screen from the sealing adhesive on the frame if you with more than one metal spudger.
- ① Your phone might no longer be watertight after you reassemble it.

### Step 3



- Slide the metal spudger around the phone at least once.

**i** It would be easier to slide your metal spudger if you apply the blow dryer to where you are currently sliding.

### Step 4




- Lift the screen up with your hands.

**!** Please wash your hands thoroughly with hot water and soap after you finish.




## Step 5 — Screen

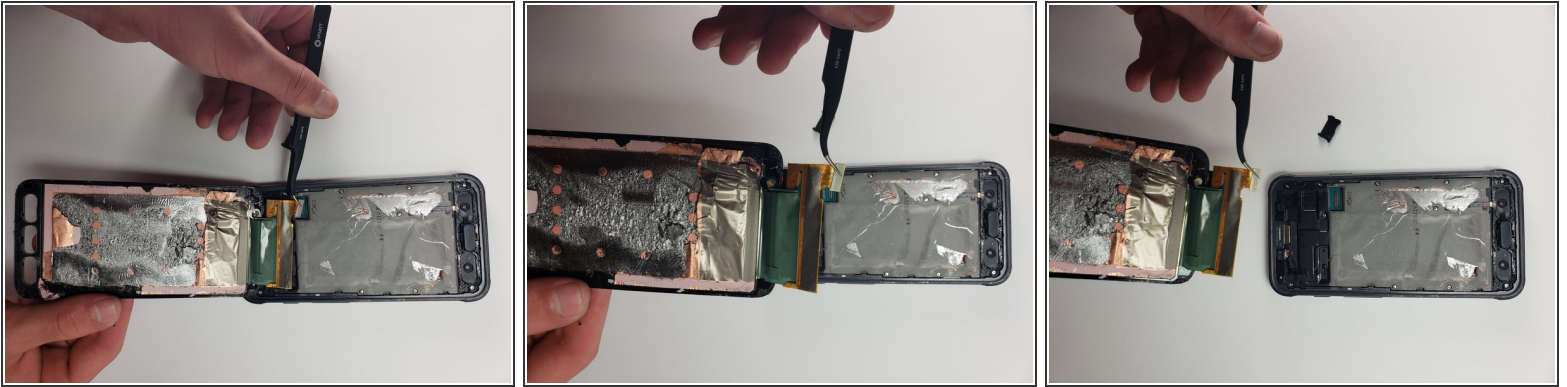

- Use the tweezers to disconnect the screen from the phone by detaching the connection.

## Step 6

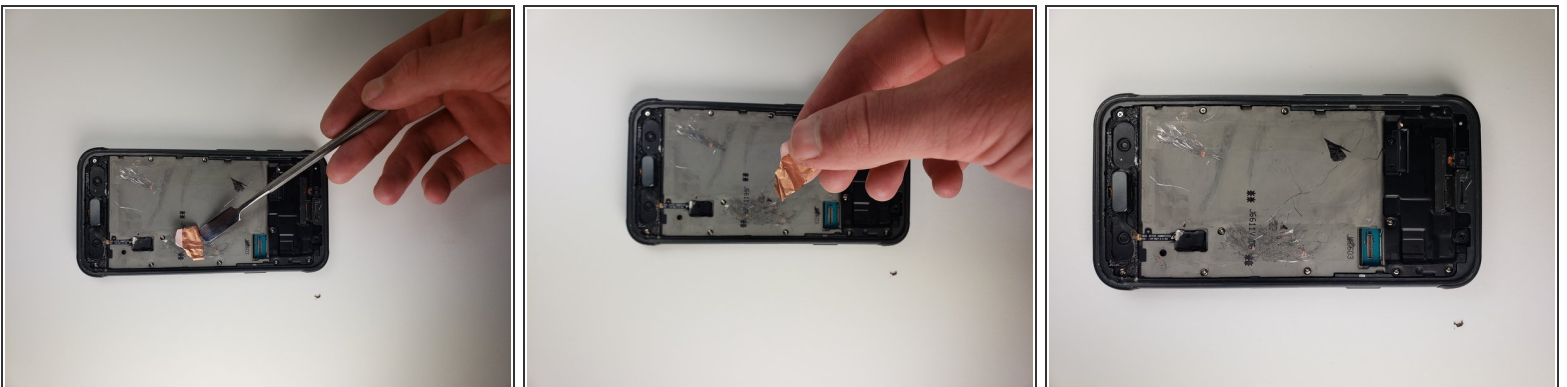

- Clean the rest of the adhesive left on the phone by scraping it off with a metal tool.
- Apply rubbing alcohol on the adhesive to make sure phone is free of any adhesive. Do this by applying some rubbing alcohol onto a napkin.
- Lightly proceed to clean the phone with that napkin.

To reassemble your device, follow these instructions in reverse order.