


## **Dell Precision 7710 Battery Replacement**


Written By: Johnathan Hammond



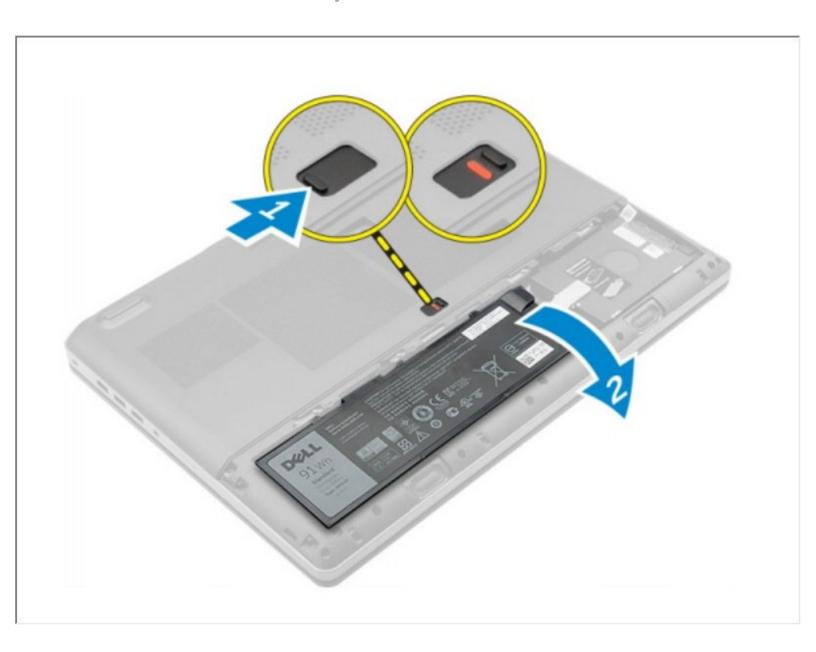


• Dell 451-BBSD Laptop Battery (1)

## **Step 1** — Battery Cover

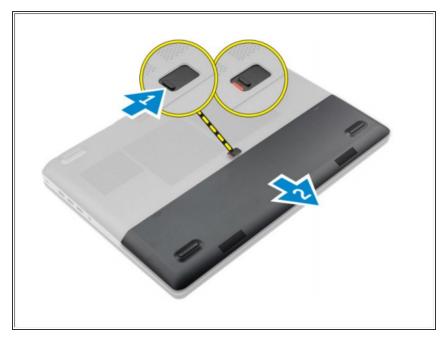

- Slide the release latch to unlock the battery cover [1].
- Slide and lift the battery cover to remove it from the computer [2].

## Step 2 — Battery

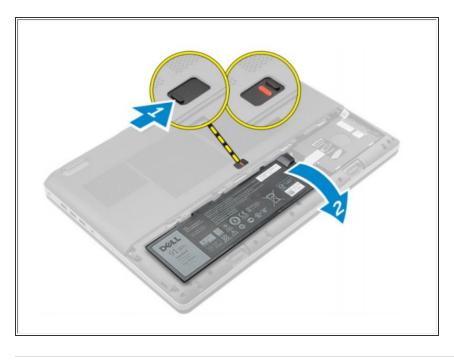

- Slide the release latch to unlock the battery [1].
- Lift and remove the battery from the computer [2].

To reassemble your device, follow these instructions in reverse order.