



Asus Q551L Repair Optical Drive Replacement

This guide will describe how to remove the optical drive on the Asus Q551L.

Written By: Drew Lawson



INTRODUCTION

This guide will describe how to remove and replace the optical drive on the Asus Q551L. It is a simple procedure that involves unscrewing a few screws and sliding the optical drive out. The optical drive may need to be replaced if disks are not being read in the device, or if disks are continually getting stuck or jammed in the optical drive. The optical drive is the component of the device where disks are inserted.

TOOLS:


- [T5 Torx Screwdriver](#) (1)
 - [JIS #0 Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Panel




- Unscrew the 10 screws around the edge of the back panel. Eight of the screws are 0.0793mm T5 , two of them are 0.0793 JIS #0.

Step 2

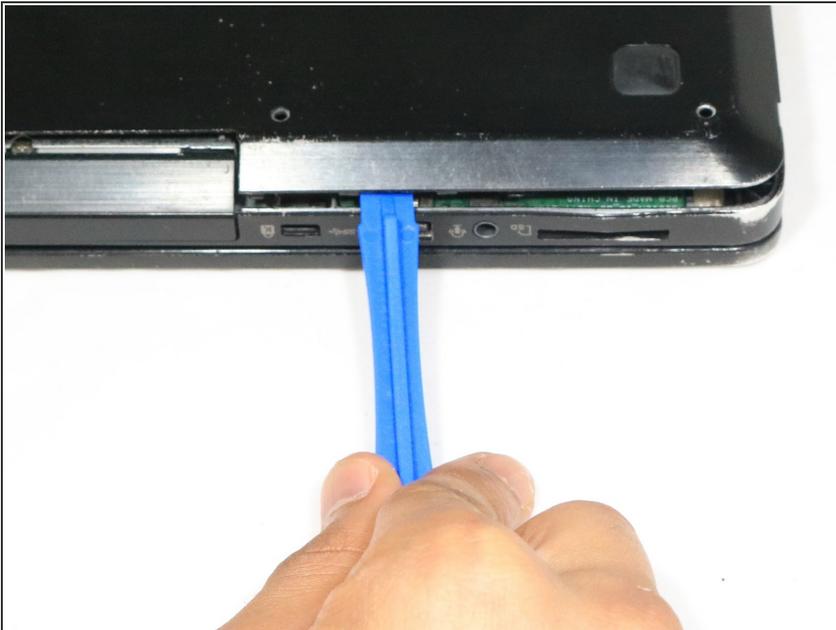

- Use the plastic opening tool to pry the back panel off the base of the laptop.

Step 3 — Optical Drive

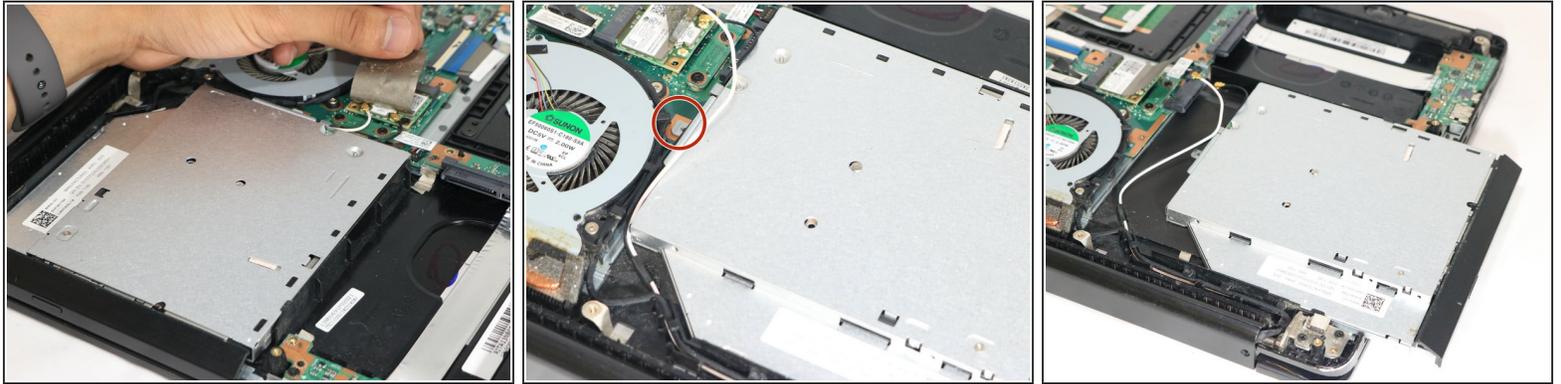

- Lift up the sticker that sticks between the motherboard and the optical drive. Then, unscrew the one screw where it is marked and slide it out gently.

⚠ Watch out for the wires around the optical drive.

To reassemble your device, follow these instructions in reverse order.