




# Dell Inspiron 15 Memory Module Replacement


Written By: Terrence15

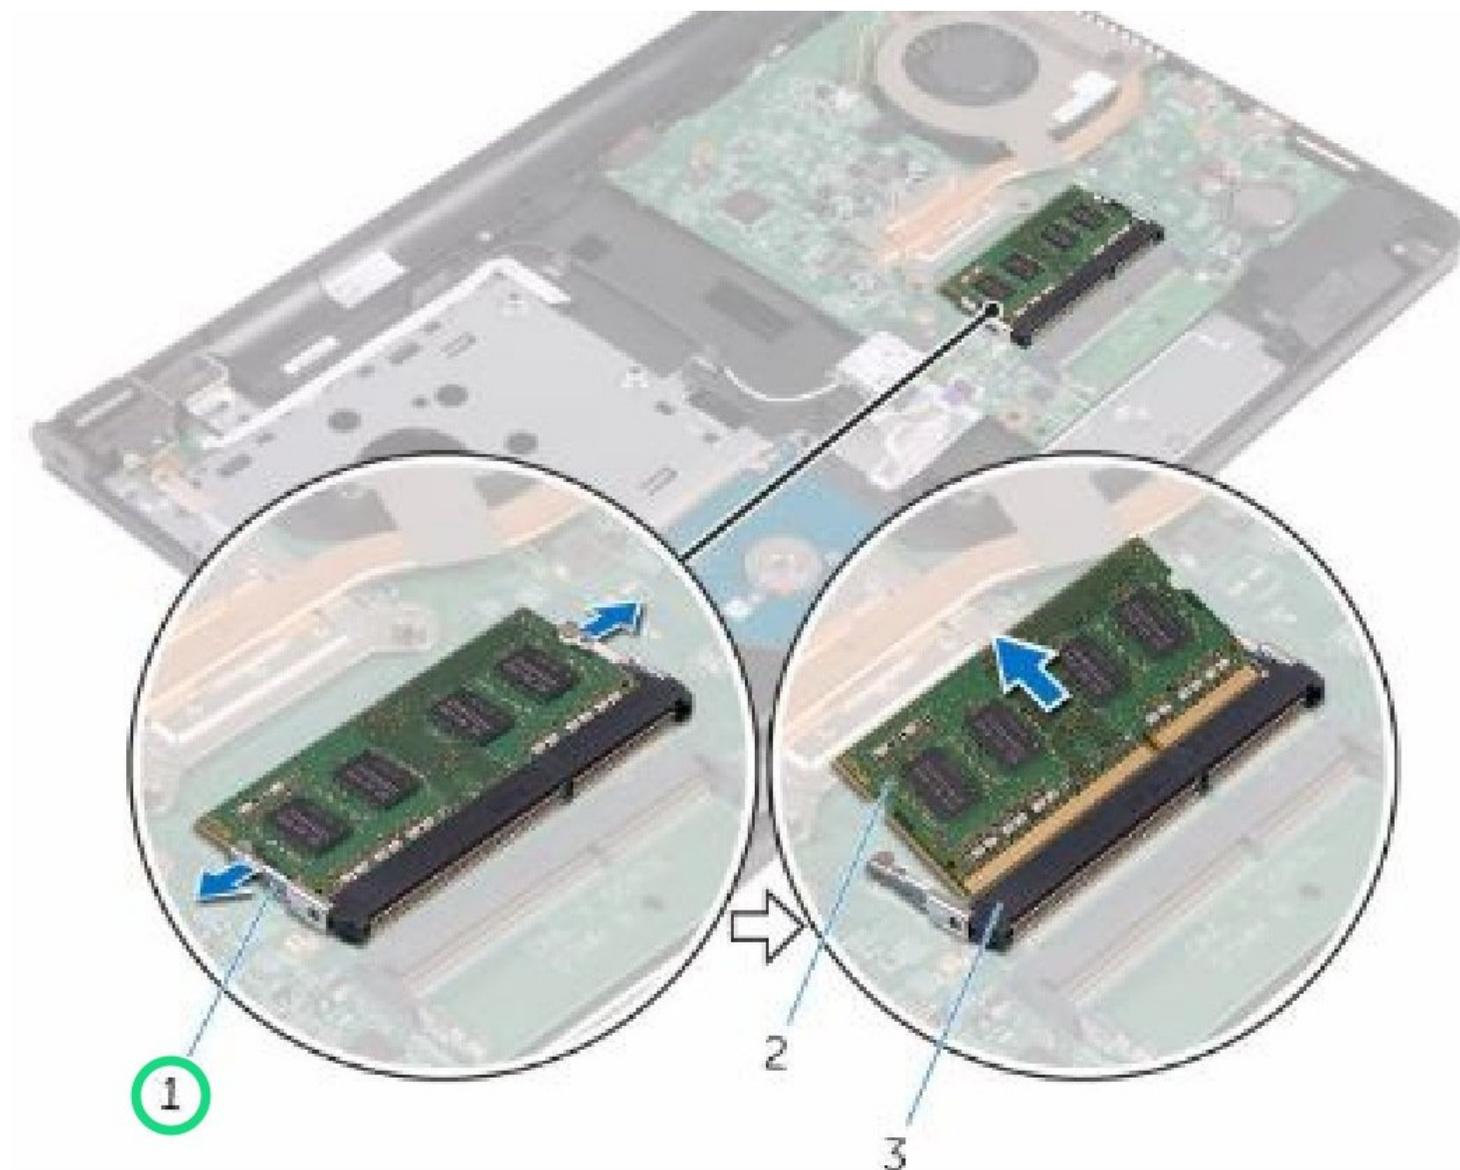

## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Module.



## Step 1 — Popping up the Memory Module

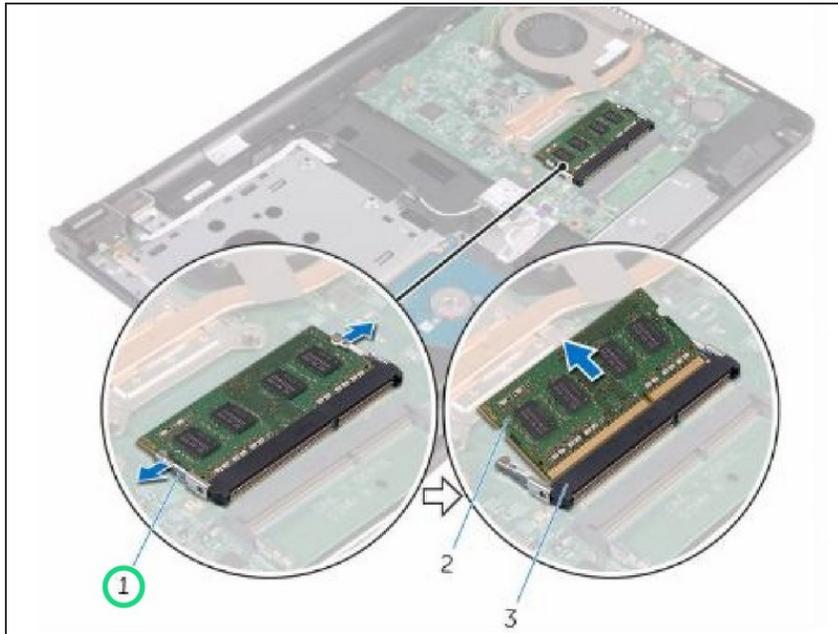

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#).


- Using your fingertips, spread apart the securing clips at each end of the memory-module slot until the memory module pops up.

## Step 2 — Removing the Memory Module

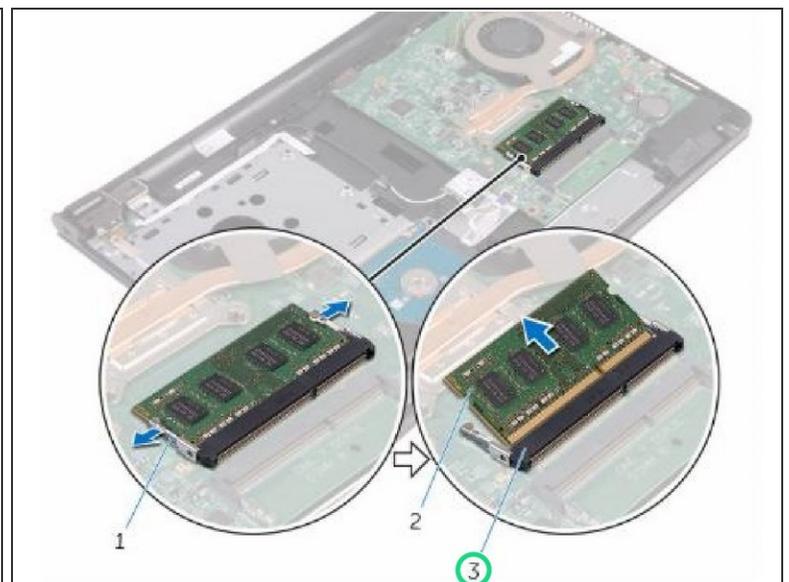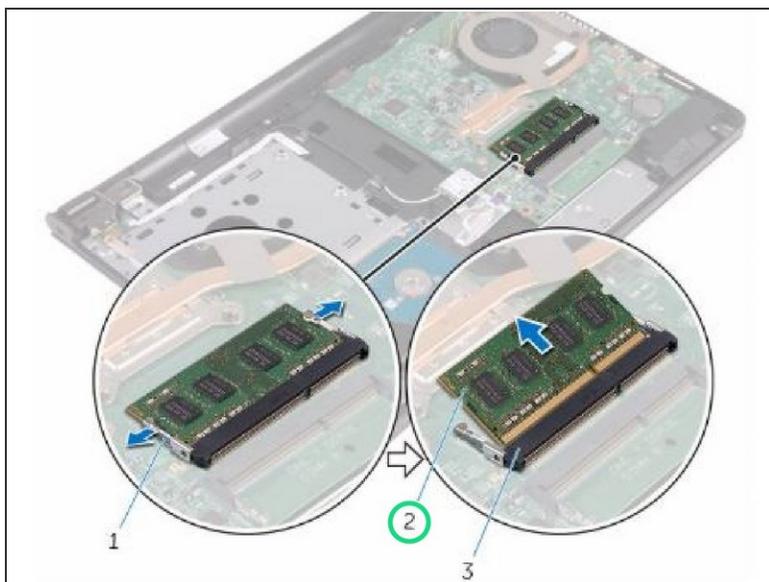


- Slide and remove the memory module from the memory-module slot.

### Step 3 — Align the Notch

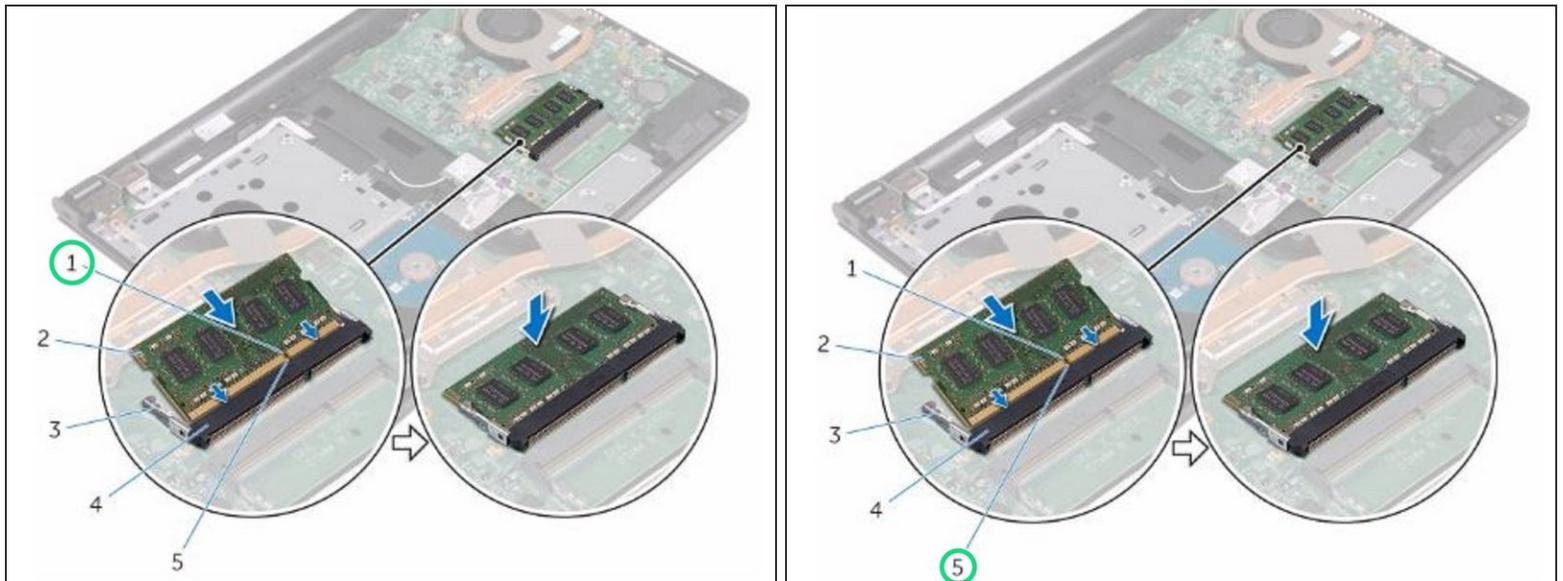

- Align the notch on the **NEW** memory module with the tab on the memory-module slot.

### Step 4

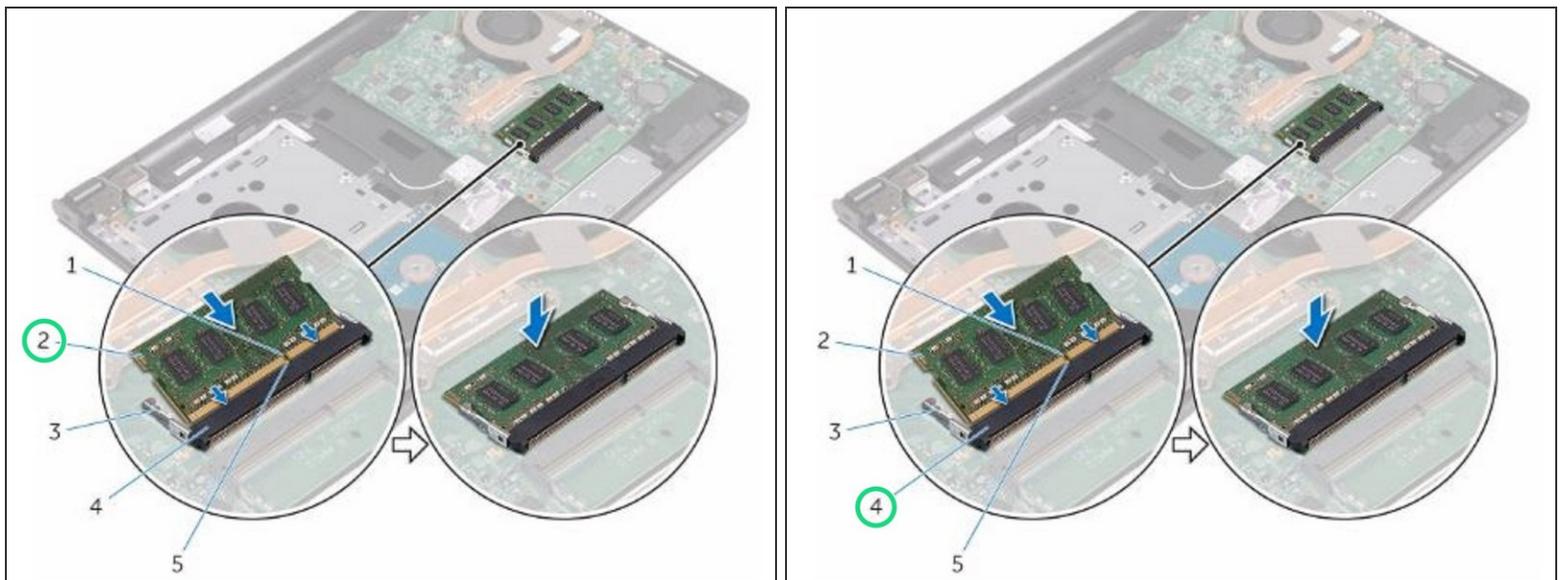

- Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.

**(i) NOTE:** If you do not hear the click, remove the memory module and reinstall it.