




# Dell Inspiron 15 3567 Battery Replacement


Written By: Terrence15

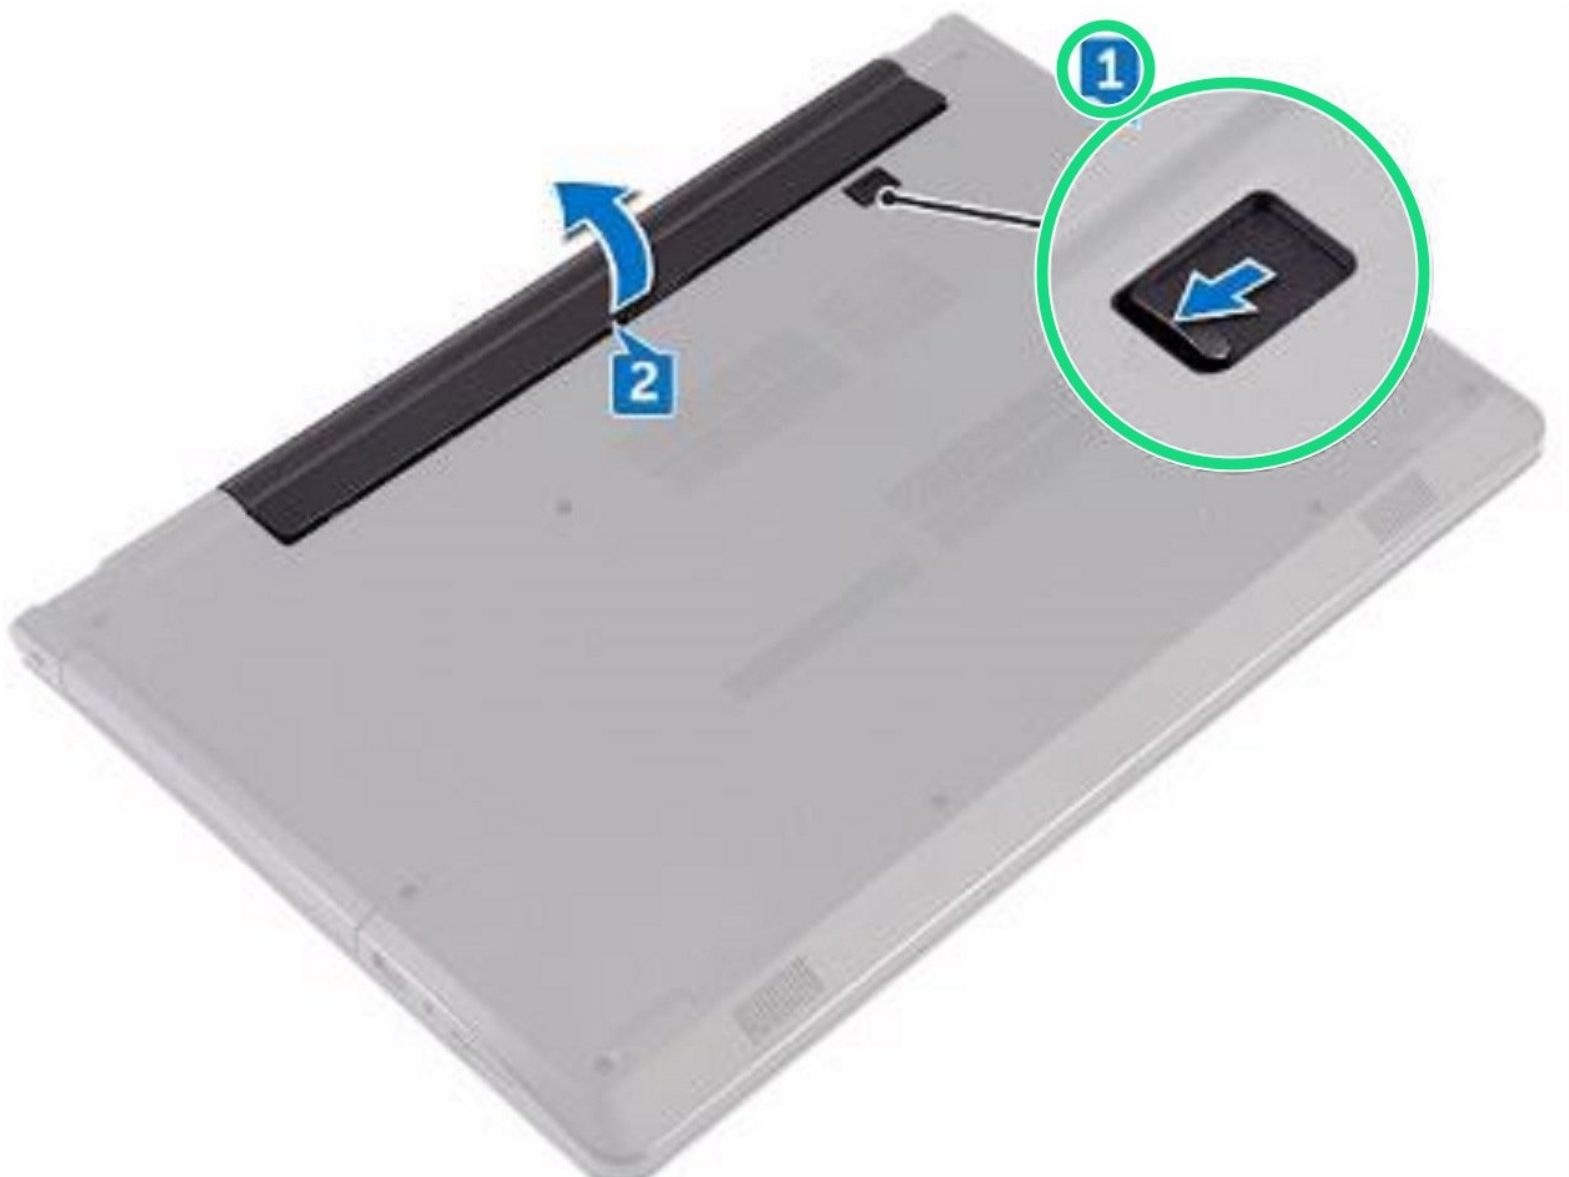

# INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

## Step 1 — Sliding the Battery Latch

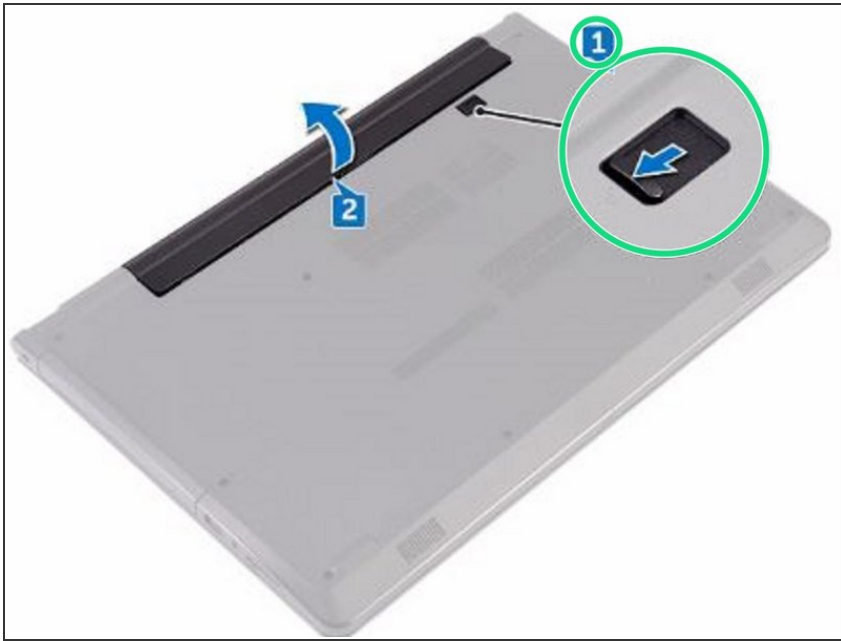

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).

- Slide the battery-release latch to the unlocked position.
- ⓘ You hear a click sound when the battery is unlocked.

## Step 2 — Lifting the Battery



- Using your fingertips, lift the battery at an angle and remove it from the battery bay.

### Step 3 — Open the Display




- Turn the computer over, open the display, and press the power button for five seconds to ground the system board.

### Step 4 — Close the Display



- Close the display and turn the computer over.

## Step 5 — Placing the Battery

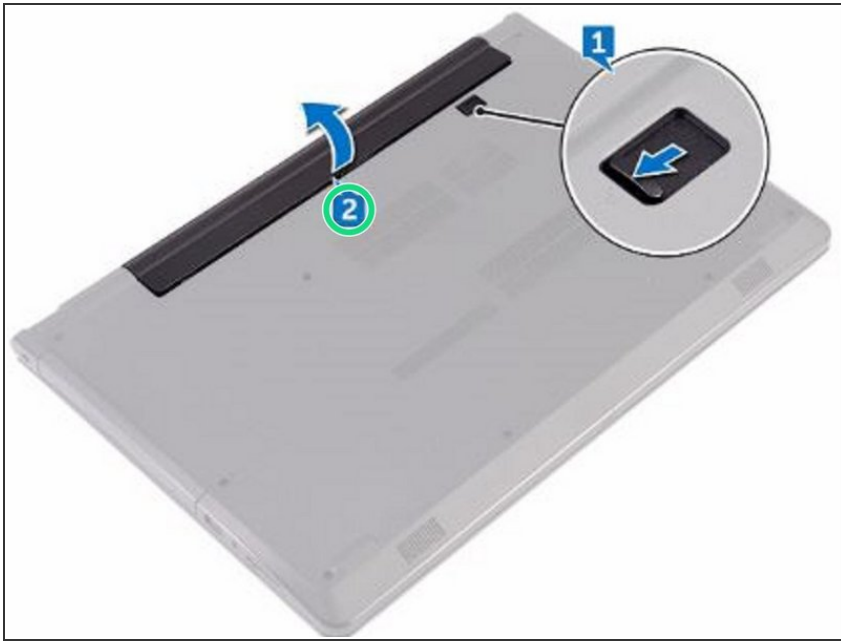

- Place the battery in the battery bay and snap the **NEW** battery into place.