

Dell Inspiron 15 3568 Memory Modules Replacement


Written By: Terrence15



INTRODUCTION


In this guide, we will be showing you how to remove and replace the Memory Modules.

Step 1 — Popping up the Memory Module

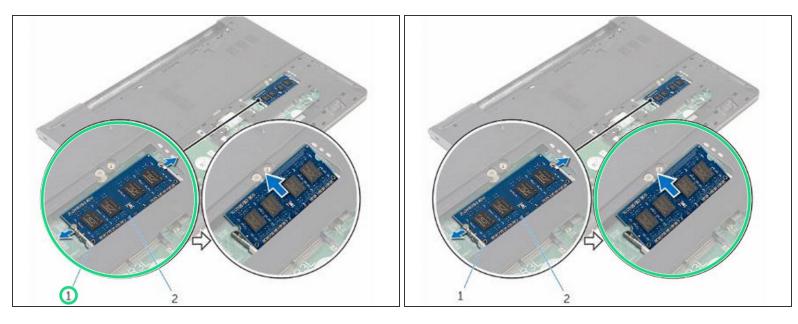


- MARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <u>Before Working Inside Your Computer</u>. After working inside your computer, follow the instructions in <u>After Working Inside Your Computer</u>.
- Using your fingertips, pry apart the securing clips on each end of the memory-module slot until the memory module pops up.

Step 2 — Removing the Memory Module

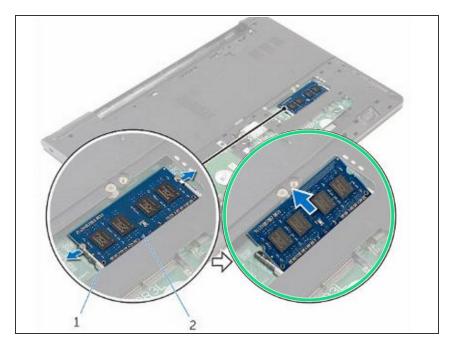


 Slide and remove the memory module from the memory-module slot.

Step 3 — Align the Notch

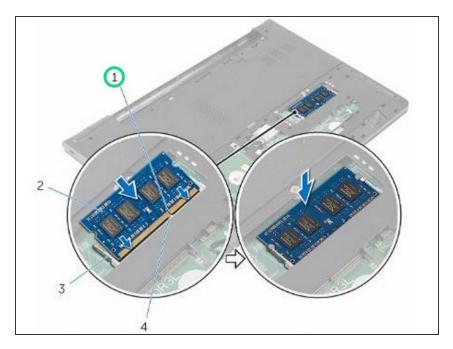

 Align the notch on the memory module with the tab on the memorymodule slot.

Step 4 — Removing the Memory Module

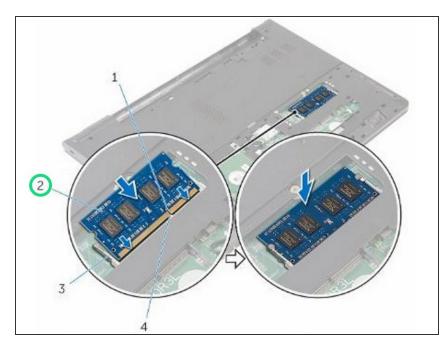

- Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.
- NOTE: If you do not hear the click, remove the memory module and reinstall it.