



Casio SPF-40 2273 Battery Replacement

For this disassembly we will need a phillips...

Written By: Acn0w



INTRODUCTION

For this disassembly we will need a phillips screwdriver 1.5 and a pair of tweezers. Prepare a little container for screws: they are tiny!

TOOLS:

phillips screwdriver 1.5 (1)


Tweezers (1)

Step 1 — Battery




- This super strong Casio watch is more docile than waht you might think.
- We don't need to twist off the front's screws.
- It doesn't bite, so let's turn it around

Step 2

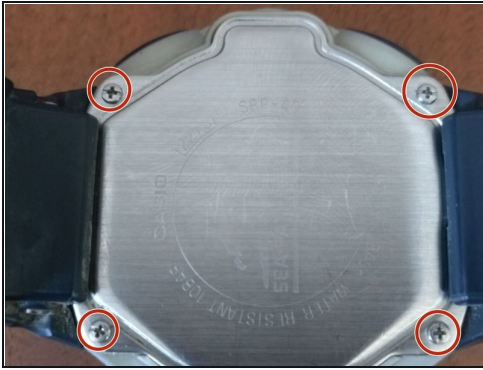


- With the phillips screwdriver take off these four screws
- Lift up an extremity of the watchstrap and remove the base.
- You can use a flat screwdriver to help you
- With the tweezers lift the white plastic cover
- Be careful to not damage the golden springs!! So take your time

Step 3

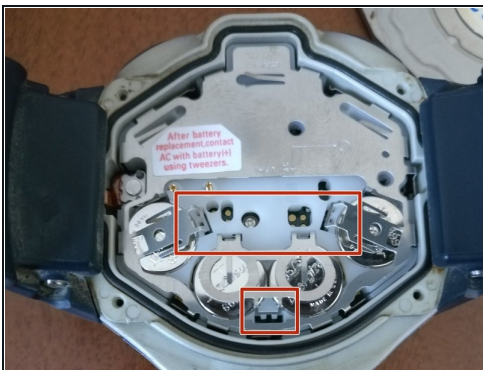

- With the tip of the tweezers you have to unclip the clips into the red rectangles.
- Just insert the tweezer's tip in the center of the bracket and pull toward the center of the watch

Step 4

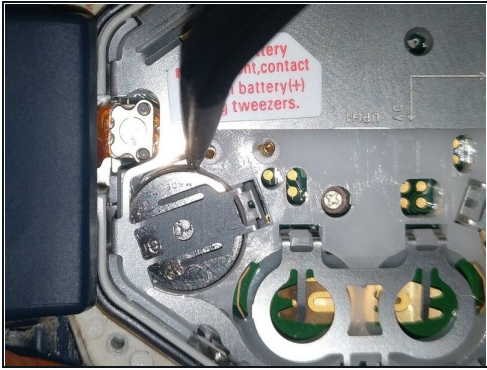

- Extract the battery leveraging with the tweezers.
- Keep attention to the golden springs again!
- The clip, holding down the central batteries, completely removes

To reassemble your device, follow these instructions in reverse order.