


How to remove and clean the Dyson DC14 filter

This guide will show you how to access and instruct you on properly cleaning the filter on your vacuum.

Written By: Donald Percivalle

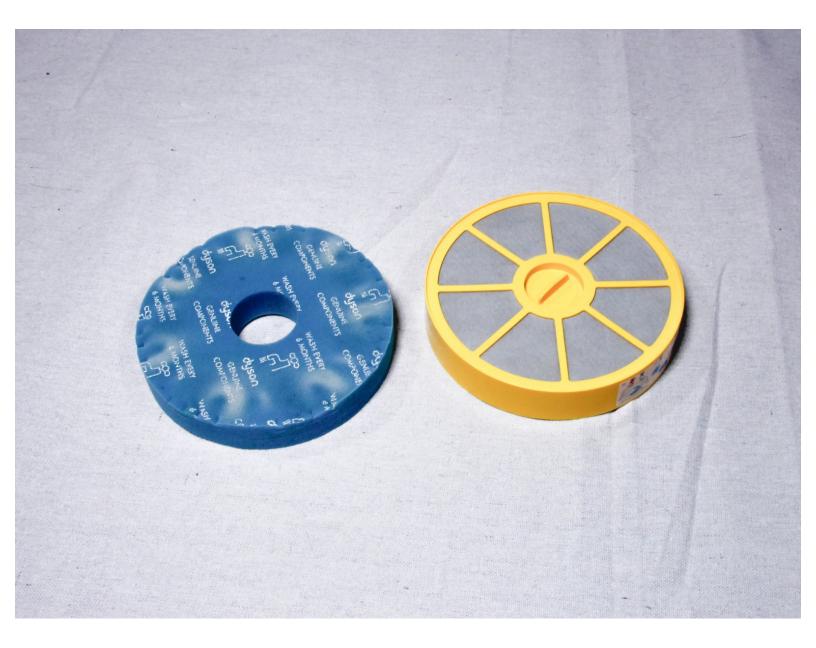

INTRODUCTION

The filter on the Dyson DC14 vacuum needs to be cleaned every six months in order to maintain its peak operating condition.

PARTS:

• Dyson DC14 Filter and Filter Housing (1)

Step 1 — How to remove and clean the Dyson DC14 filter




(i) The filter is located in the canister of your vacuum.

Step 2



- Open the canister filter compartment. Push the clip upwards, and open the canister top away from you.
- Remove the yellow filter housing.

Step 3

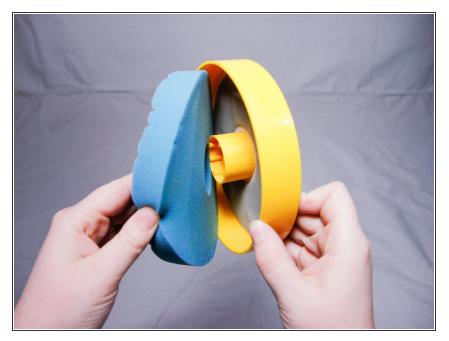

- Remove the blue sponge-filter from the yellow filter housing.
 - The filter and housing must both be completely dry before reinstalling. Do not use your vacuum without filters installed.
- Clean the blue sponge-filter in cold water until the water runs clear.

Once the filter is cleaned, set the blue filter sponge and the yellow filter housing aside for at least 24 hours to dry. Do not use your vacuum without a filter, or when the filter is still wet. To reassemble, follow the steps in reverse order.