



# ZTE Tempo Front Speaker Replacement

This guide shows how to replace the front...

Written By: omar



# INTRODUCTION

This guide shows how to replace the front speaker on the ZTE Tempo.


## TOOLS:

[iFixit Opening Tool](#) (1)

[Tweezers](#) (1)


[Phillips #0 Screwdriver](#) (1)

## Step 1 — Battery

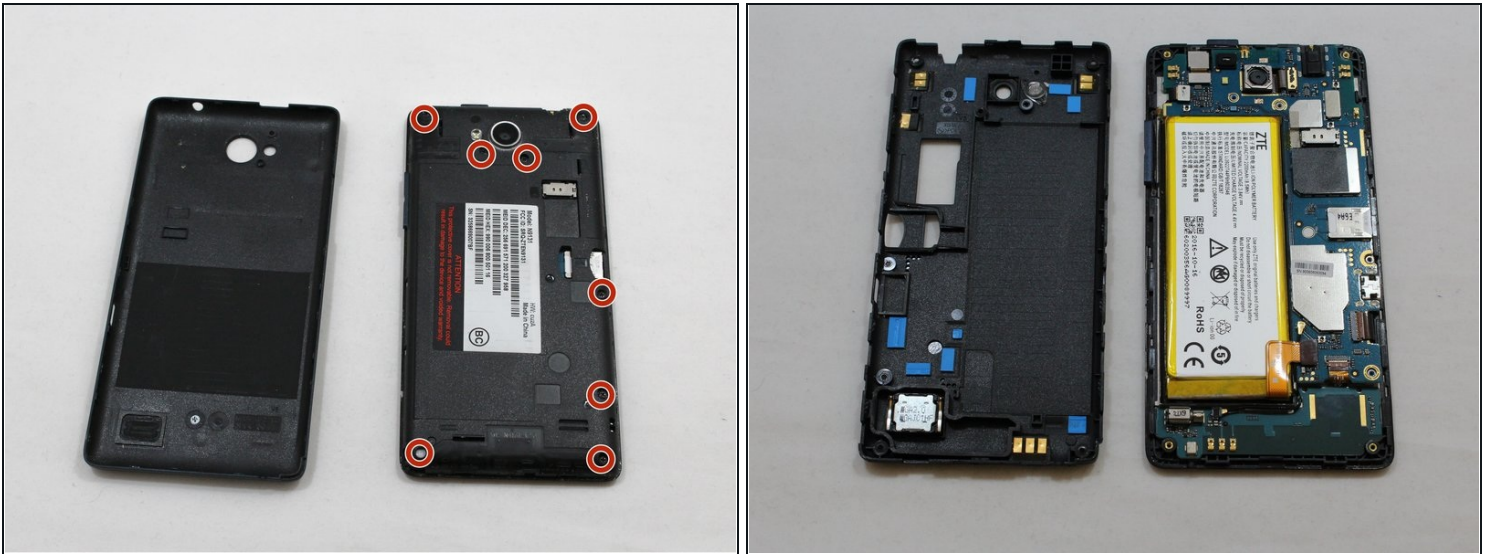

- Use a plastic opening tool to pry open the back case.
- Use a Phillips #0 screwdriver to remove the eight 5mm screws.
- Use a plastic opening tool to remove the midframe.

## Step 2

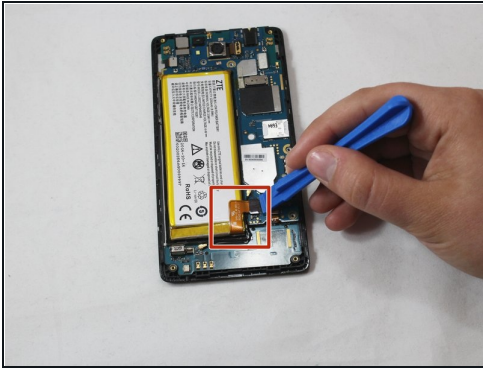

- Use a plastic opening tool to lift the press-fit connector up and disconnect the battery ribbon cable.
- Lift the battery up and remove it from the phone.



## Step 3 — Front Speaker



- Use a plastic opening tool to unplug the wires by pulling them to the side.



## Step 4

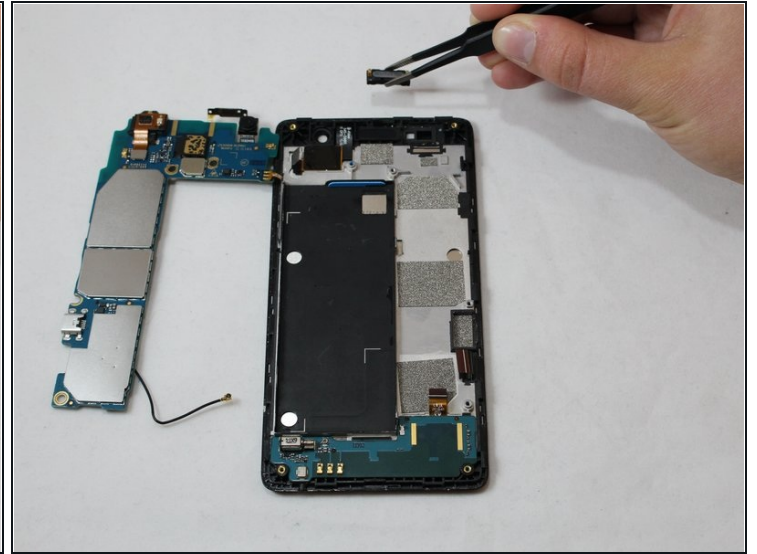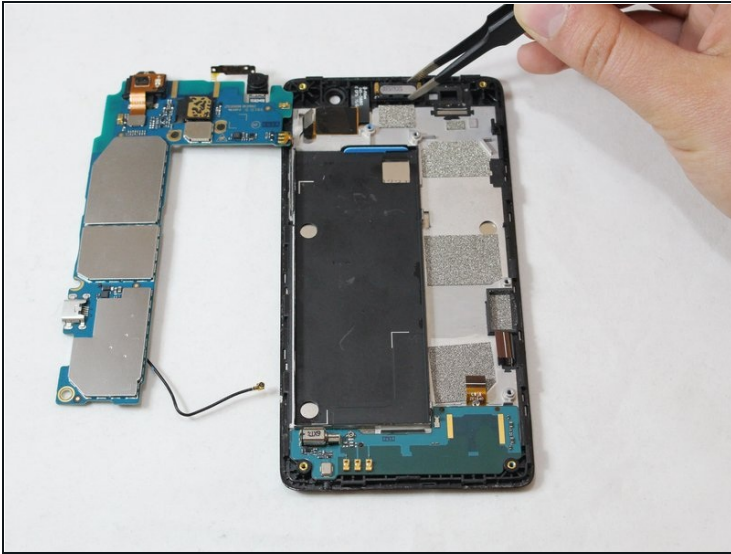

- Use metal [tweezers](#) to remove the front speaker.

---

To reassemble your device, follow these instructions in reverse order.