



# Sony $\alpha$ 6000 Battery Replacement

If your camera won't turn on, this guide could...

Written By: Andrea Lopez



## INTRODUCTION



If your camera won't turn on, this guide could help you. This guide helps to replace the battery in your camera. No special tools are needed.

### Step 1 — Battery



- Begin by placing the camera facing upside down.

### Step 2

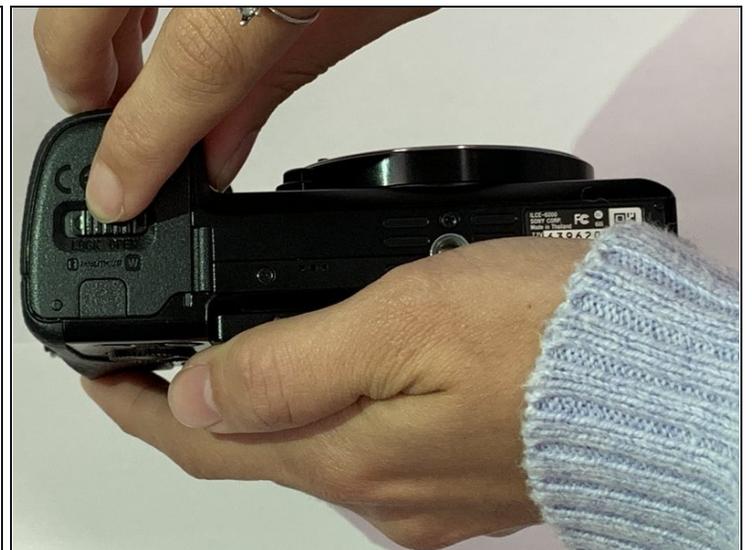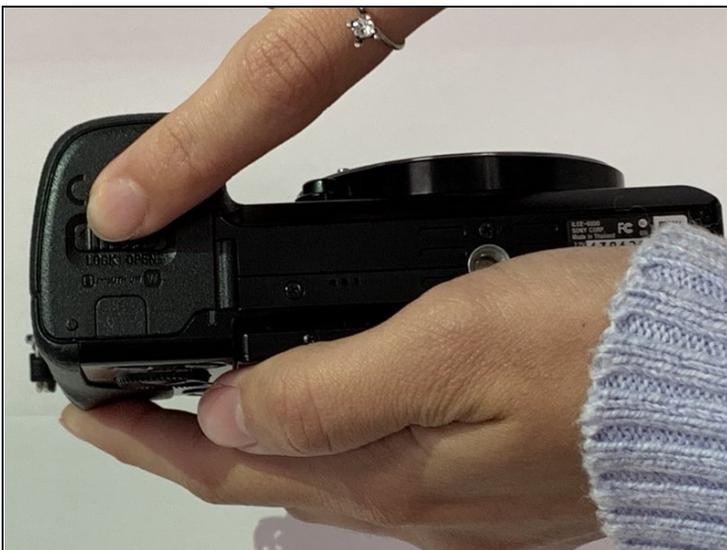

- Slide the notched locking bar on the battery compartment from LOCK to OPEN.

### Step 3



- Push the small blue bar horizontally off of the battery.

### Step 4



- Remove the battery.

To put the battery back in, follow these instructions in reverse order.