




# Nokia Lumia 925 Battery Replacement

This is a guide for Nokia Lumia 925 battery.

Written By: Guillermo Lara

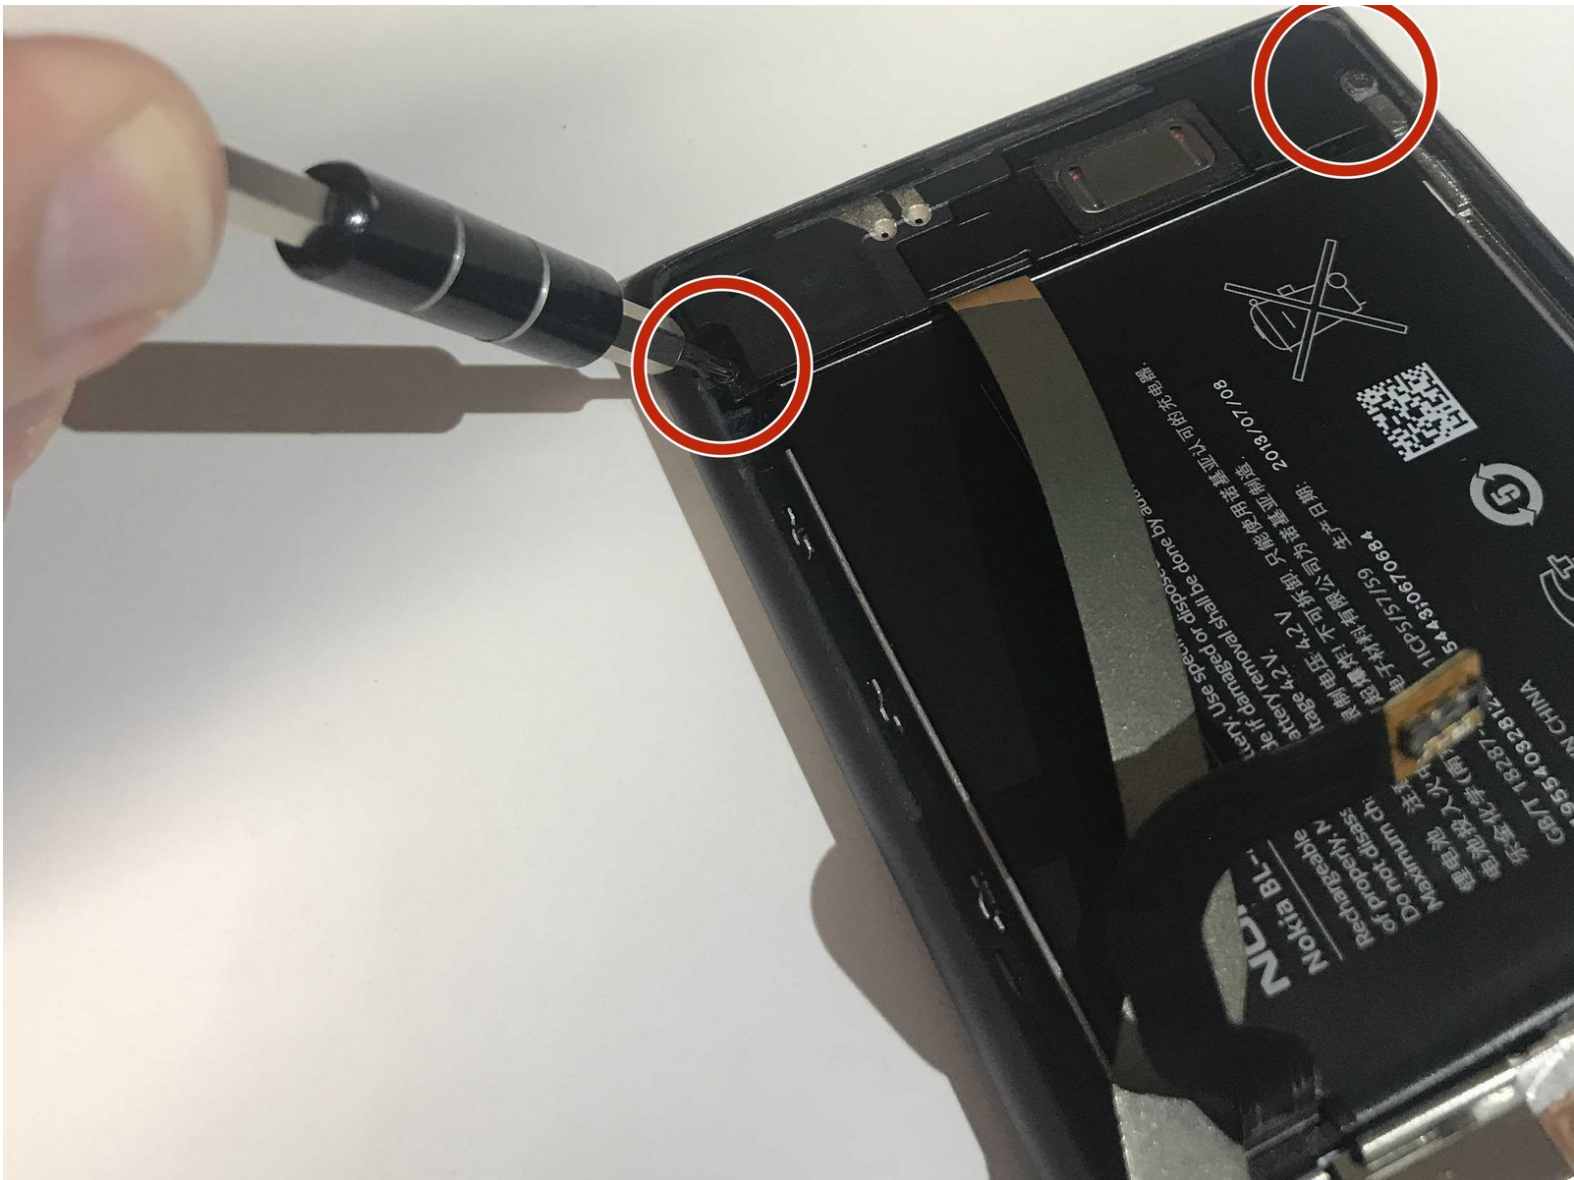



## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [ESD Safe Tweezers Blunt Nose](#) (1)
- [T7 Torx Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)



## PARTS:


- [Nokia Lumia 925 Battery](#) (1)

## Step 1 — Motherboard




- Remove the sim card holder by inserting tweezers into the hole. Push down and the holder will spring back up.
- Pull out the holder until it is completely separate.
- ⓘ Something like a paperclip will work if there are no tweezers available.

## Step 2

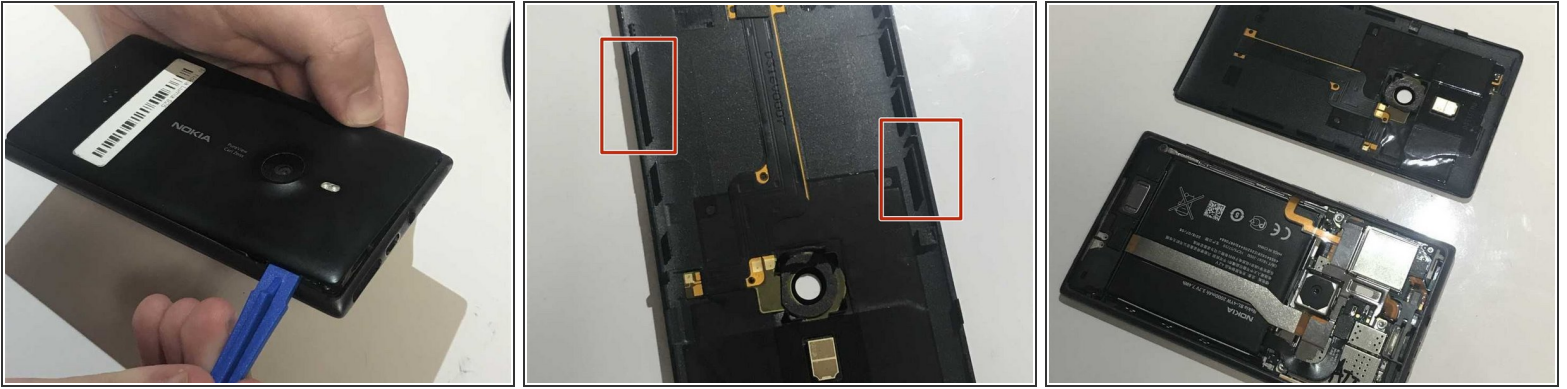

- Slide a plastic opening tool under the back cover.
  - Slide the tool around the outsides of the cover to fully dislodge the pins holding the cover to the phone.
- ⚠ Some pins are facing the opposite way from the others.

## Step 3

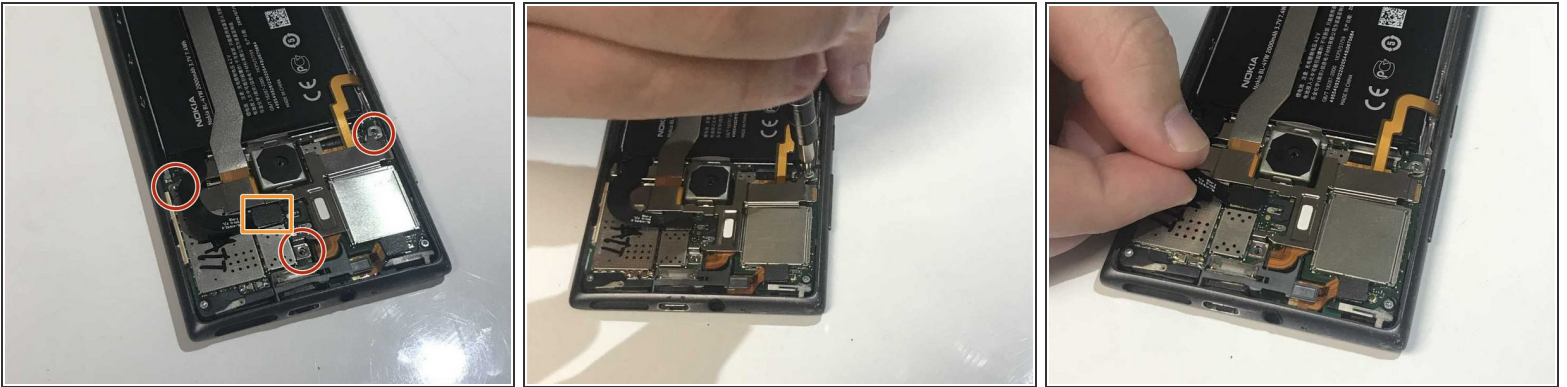

- Remove the 3 screws using the T7 Torx screwdriver.
- Unclip the black tab connector.

## Step 4



- Remove the silver metal cover.


⚠ Be careful of the tape under the right square side of the panel. Using a spudger helps.

## Step 5



- Unclip the two orange tabs.
- Remove the four silver screws using the T5 Torx screwdriver.

## Step 6

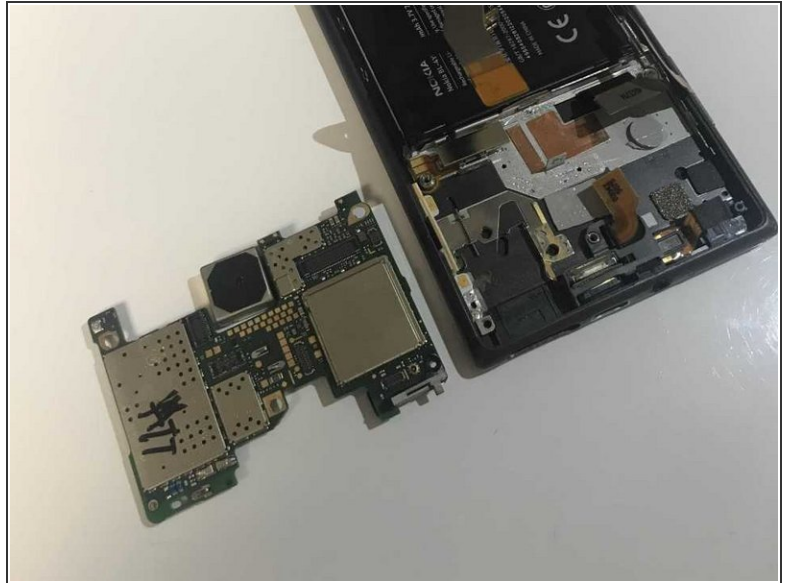


- Remove the motherboard by sliding tweezers between it and the back of the screen. Lift up.

## Step 7 — Display





- Push the screen from the inside of the phone.
- Pull the screen off.
- ⓘ Slide the electronic strip through the small opening.

## Step 8 — Speaker

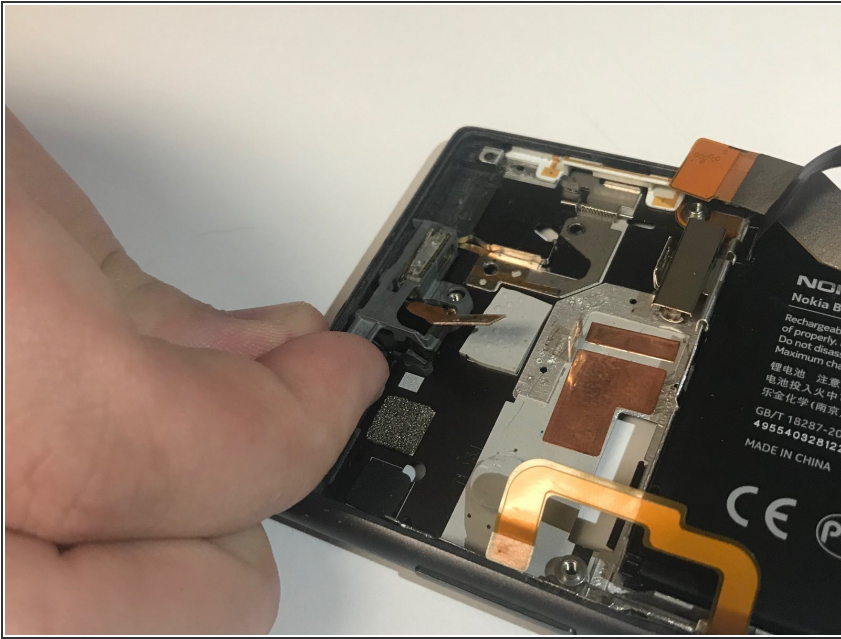


- Locate the grey speaker/camera cover.
- Carefully remove the cover with either a pair of tweezers or your fingers.

## Step 9

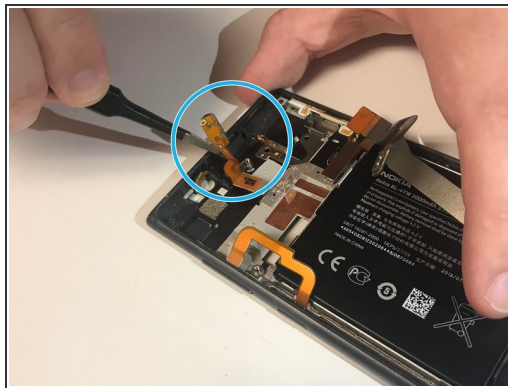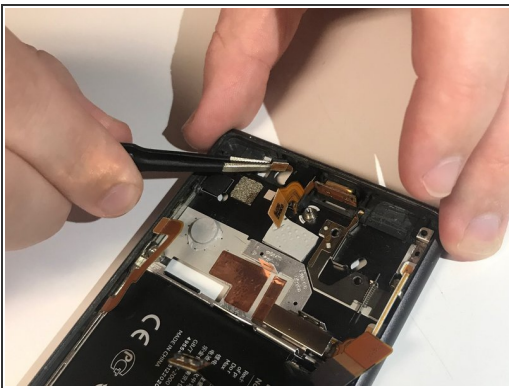

- With a pair of tweezers, gently remove the orange colored tab closest to the speaker.

## Step 10 — Front Camera

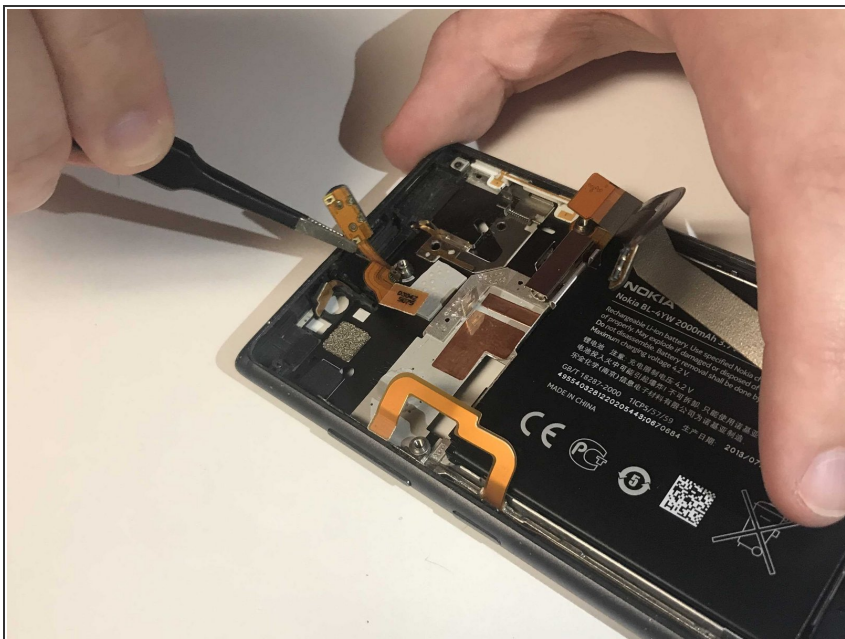



- Pull at the orange section until it becomes loose.
- ⓘ It is located in the upper leftmost section of the phone behind the front camera.

## Step 11



- Pull vertically on the same orange section until the front camera comes out.
- ⚠ The front camera as well as the speaker may come out after the last step so be careful.

## Step 12 — Battery

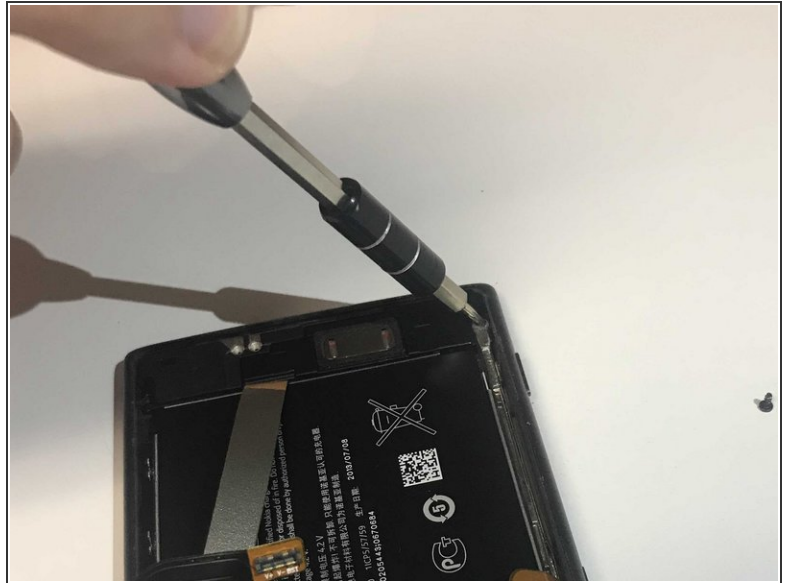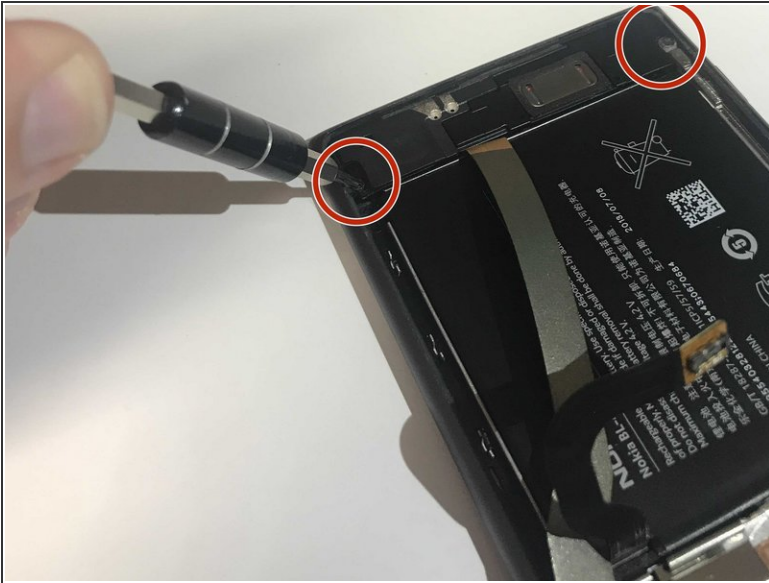

- Remove the two black screws by using the T5 Torx screwdriver.

## Step 13



- Carefully pull the metal rod out.

## Step 14



- Pry off the speaker.
- ❗ Apply heavy pressure, and pull towards the battery.

## Step 15



- Unclip the black wire.


## Step 16



- Peel off the electronic strip.

⚠ Be careful not to tear.


## Step 17

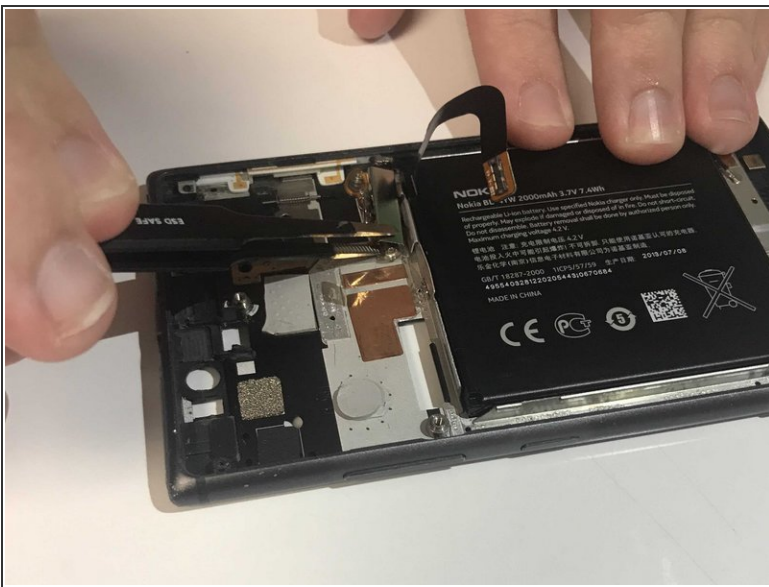

- Pry off the metal vibrating unit using tweezers.

⚠ This requires a lot of force.

## Step 18

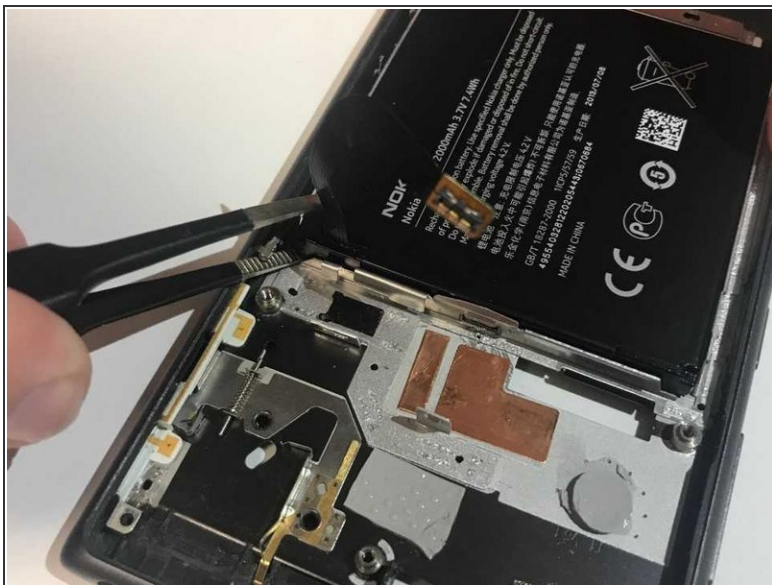

- Insert the tweezers under the corner of the battery, and lift out.

**i** You have successfully removed the battery.

To reassemble your device, follow these instructions in reverse order.