




LG G Pad 8.3 4G Vibrator Replacement

This is how you replace the vibrator on the LG G Pad 8.3 4G.

Written By: Justice Hindenburg

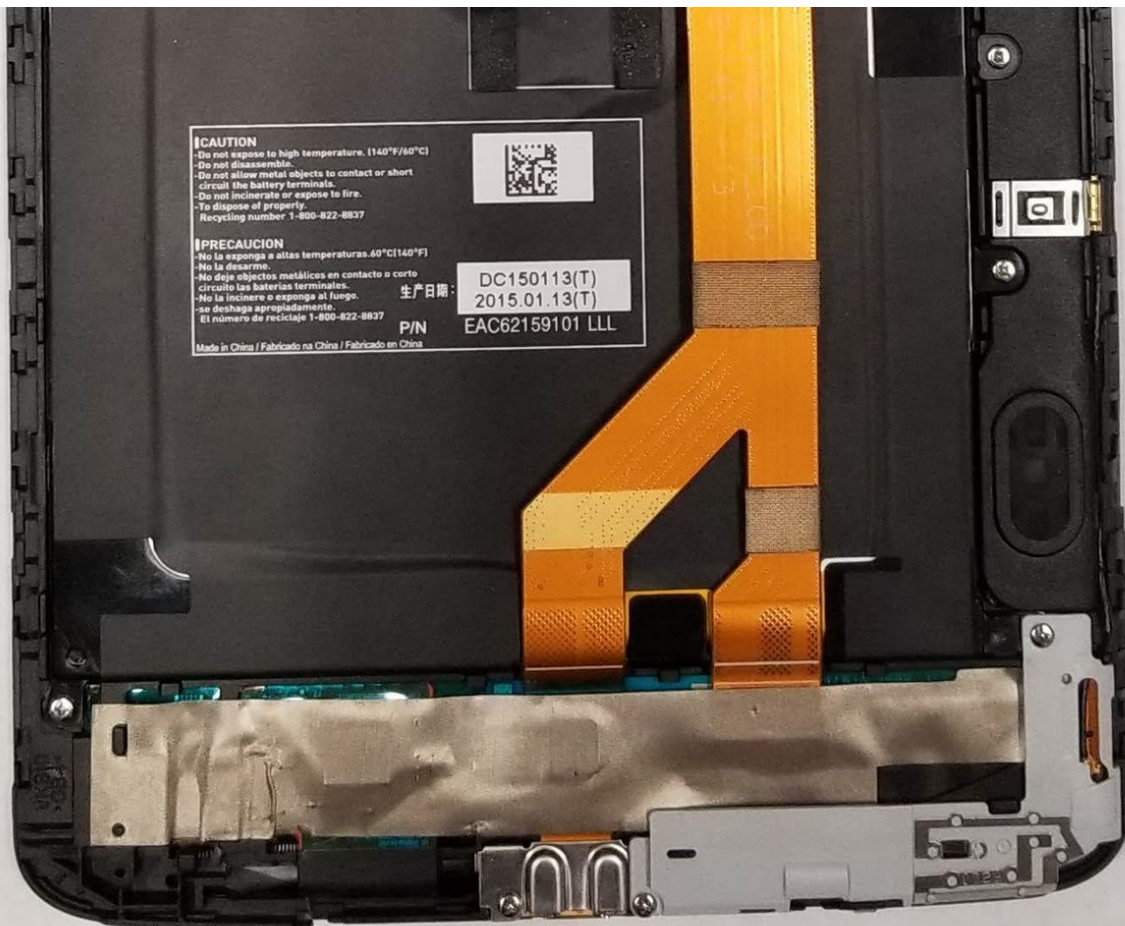

INTRODUCTION

This is how you replace the vibrator on the LG G Pad 8.3 4G.




TOOLS:

- [Spudger](#) (1)
-


Step 1 — Back Panel




- With the screen faced up, insert the metal spudger into the crevice so that it is sticking out between the side panel and the screen.

 Be gentle when popping the panel off.

Step 2

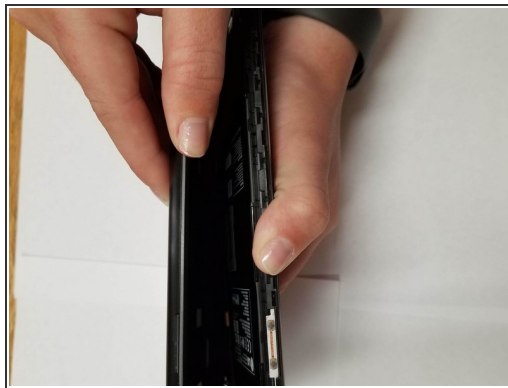

- Take the spudger and slide it around the perimeter of the device.
- Pull gently on the edges to get the panel to pop up.


 If the panel does not budge, be aware that there is adhesive on the back of the battery holding the back shut. Make sure to just move around the perimeter of the back panel until the panel is able to lift forward.

Step 3 — Vibrator




- Remove the two screws on the white panel on the bottom right side.

Step 4

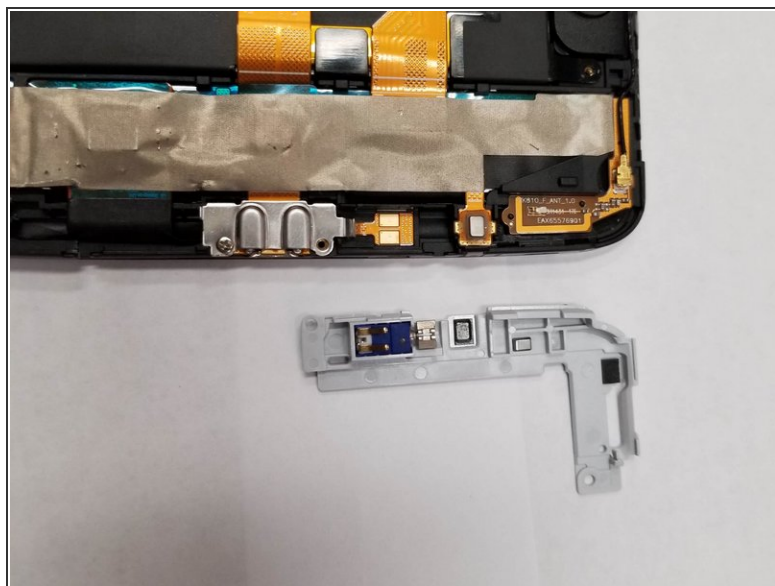

- Remove the white panel.

Step 5

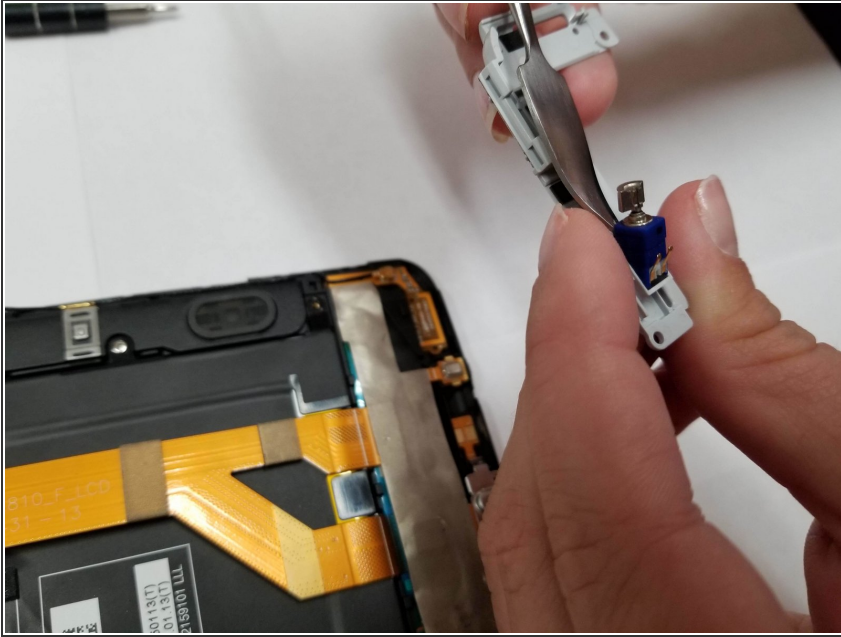

- Remove the vibrator from the underside of the white panel.

To reassemble your device, follow these instructions in reverse order.