

# Sony Vaio SVF15A16CXB Battery Replacement

This guide will walk you through the replacement of the battery in the Sony Vaio SVF15A16CXB laptop.

Written By: Irven Coulter



# **INTRODUCTION**


The battery in the Sony Vaio SVF15A16CXB laptop stores power for the laptop to use while on.



# **TOOLS:**

• Phillips #0 Screwdriver (1)

#### Step 1 — Back Panel

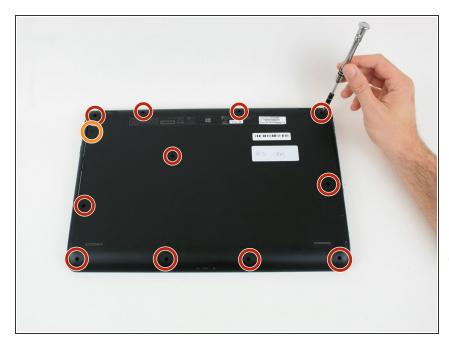

- Unscrew the eleven 6 mm screws from the back panel on the bottom of laptop with the Phillips #0 screwdriver.
- Unscrew the one 4 mm screw from the back panel on the bottom of laptop with the Phillips #0 screwdriver.
- (i) 6 mm screws marked in red, 4 mm marked in orange

#### Step 2





- Using a plastic opening tool, pull the optical drive out of the computer by the seam.
- In reassembly, slide the optical drive back in after reapplying cover.

# Step 3



 Run the opening tool along the bottom cover seam.

# Step 4



- Lift the clip marked in red in order to release the back cover.
- Lift the back cover.

#### Step 5 — Battery



 Unscrew the four 6mm screws with the Phillips #0 screwdriver.

# Step 6



 Lift the battery and remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.