



Sony Vaio SVF15A16CXB RAM Replacement

This guide will teach you how to locate and replace the RAM in the Sony Vaio SVF15A16CXB laptop.

Written By: Irven Coulter




INTRODUCTION

The RAM in the Sony Vaio SVF15A16CXB temporarily stores data.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel

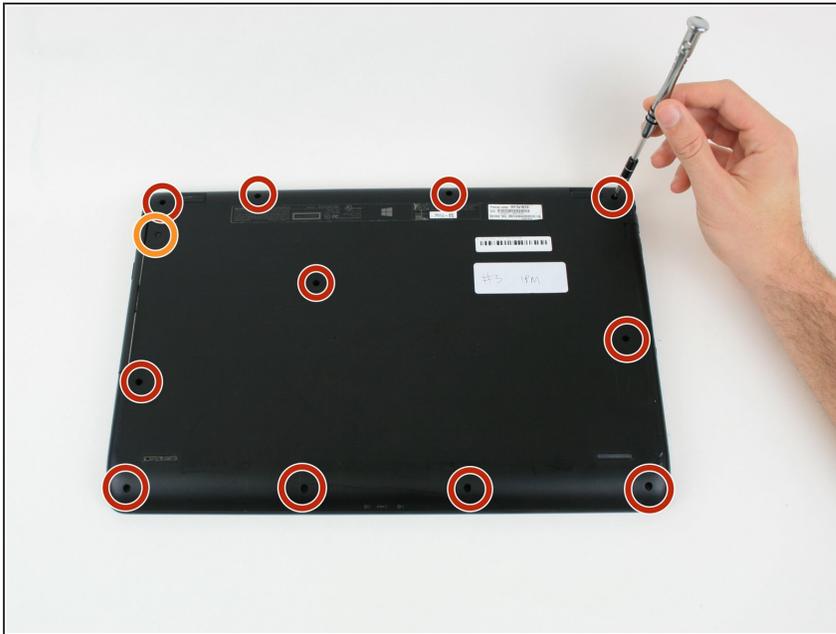

- Unscrew the eleven 6 mm screws from the back panel on the bottom of laptop with the Phillips #0 screwdriver.
- Unscrew the one 4 mm screw from the back panel on the bottom of laptop with the Phillips #0 screwdriver.
- ⓘ 6 mm screws marked in red, 4 mm marked in orange

Step 2



- Using a plastic opening tool, pull the optical drive out of the computer by the seam.


🔧 In reassembly, slide the optical drive back in after reapplying cover.

Step 3



- Run the opening tool along the bottom cover seam.

Step 4

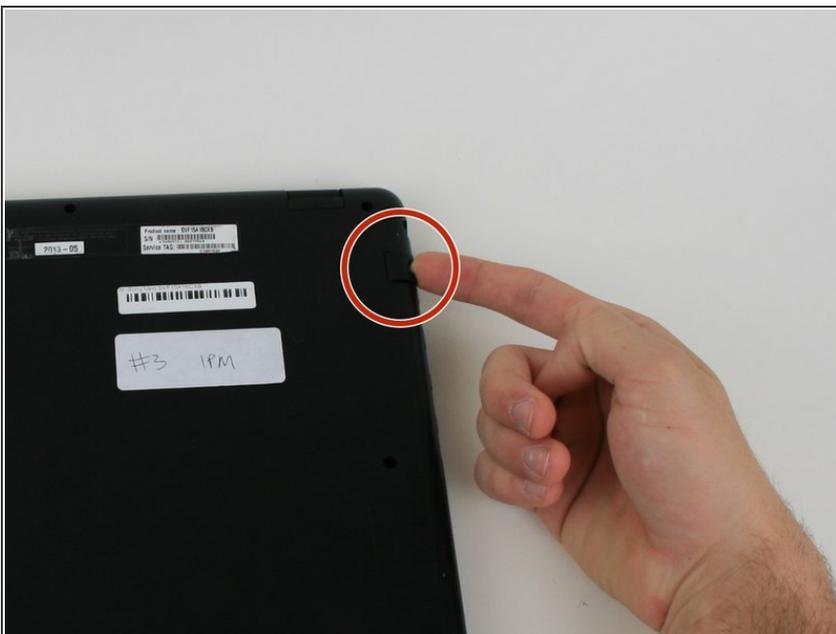

- Lift the clip marked in red in order to release the back cover.
- Lift the back cover.

Step 5 — RAM



- Locate the two metal clips securing the RAM.

Step 6



- Pull apart the two metal clips with your fingers.
- ⓘ Once you pull the metal clips away, the RAM will spring up from its original position.

Step 7



- Pull the RAM out of the laptop.

To reassemble your device, follow these instructions in reverse order.