



Motorola Droid X Rear Case Replacement

These are instructions on how to remove the rear case of a Motorola Droid X.

Written By: Anna



 **TOOLS:**

- [iFixit Opening Tools](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Rear Case



- Objective: remove the rear case from the Motorola Droid X phone.
- This is what the Motorola Droid X looks like before disassembly. In the front, there is a large LCD touch screen.

Step 2




- **INSTRUCTION:** Turn the phone over so that the back faces up.

Step 3



- Objective: remove the battery casing plate.
- The case plate has a push and slide mechanism.

Step 4

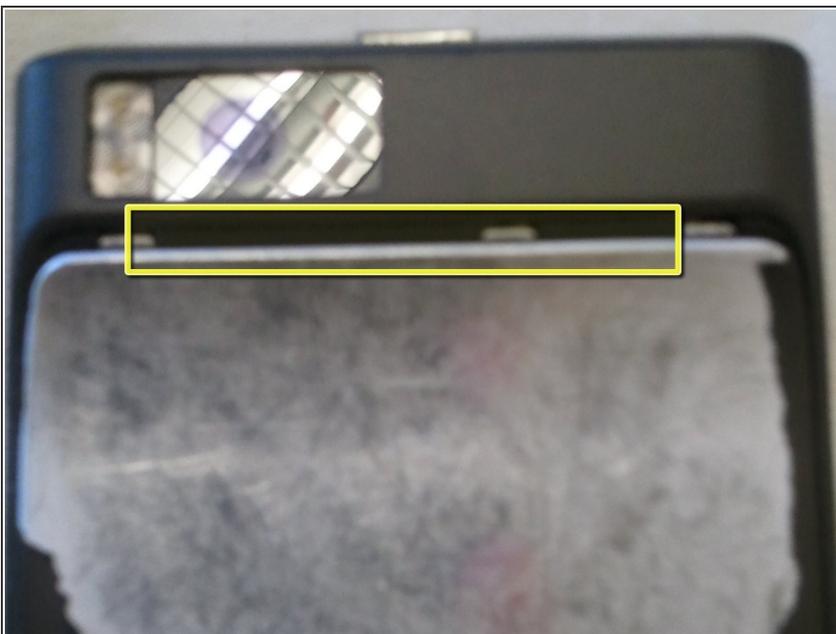

- **INSTRUCTION 1:** Push on the upper side of the casing located under the camera lens.
- **INSTRUCTION 2:** Slide down the battery case plate.

Step 5




- **INSTRUCTION:** Insert your finger tips into the edges of the opening and pull the casing off.

Step 6



- **Objective:** remove the battery from the battery compartment.

Step 7

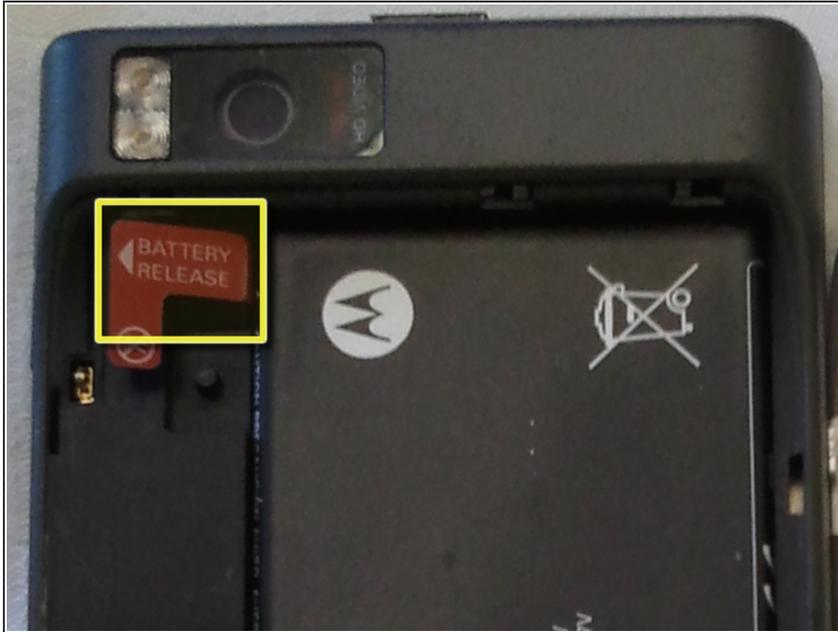


- **INSTRUCTION:** Grab the red tab that says "Battery Release" and slowly lift it up. This will remove the battery.

Step 8



- Objective: remove two small black screws from the back of the phone.
- ⓘ These two (2) screws help hold the phone together. They need to be removed by a Phillips Hex 2mm screwdriver,

Step 9

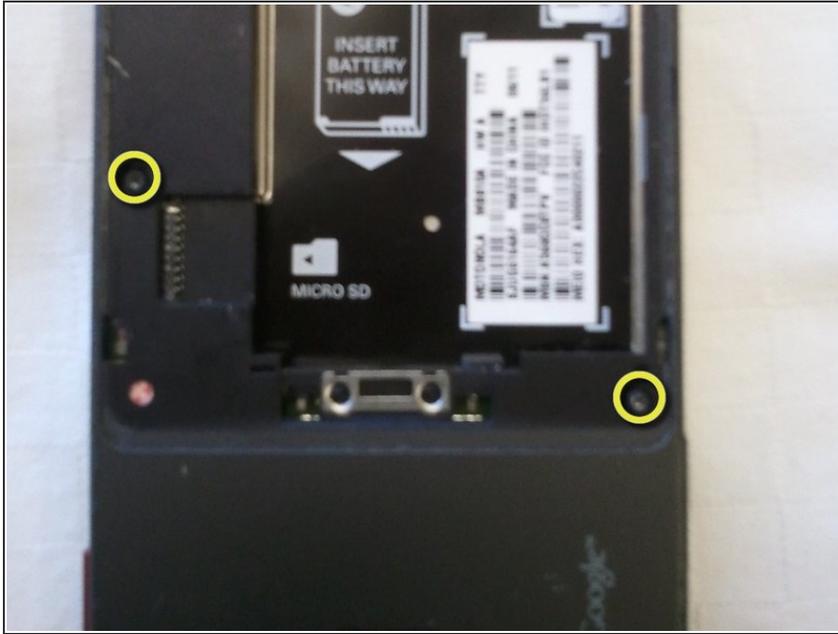

- **INSTRUCTION:** Remove two black screws from the back of the phone.

Step 10




- Objective: remove the two plastic pieces in front of the phone - they cover the remaining screws.
- ⓘ The two plastic pieces are clipped onto the phone as covers. They are located at the top and the bottom of the phone.

Step 11



- **INSTRUCTION: Flip the phone over to the front side.**

Step 12

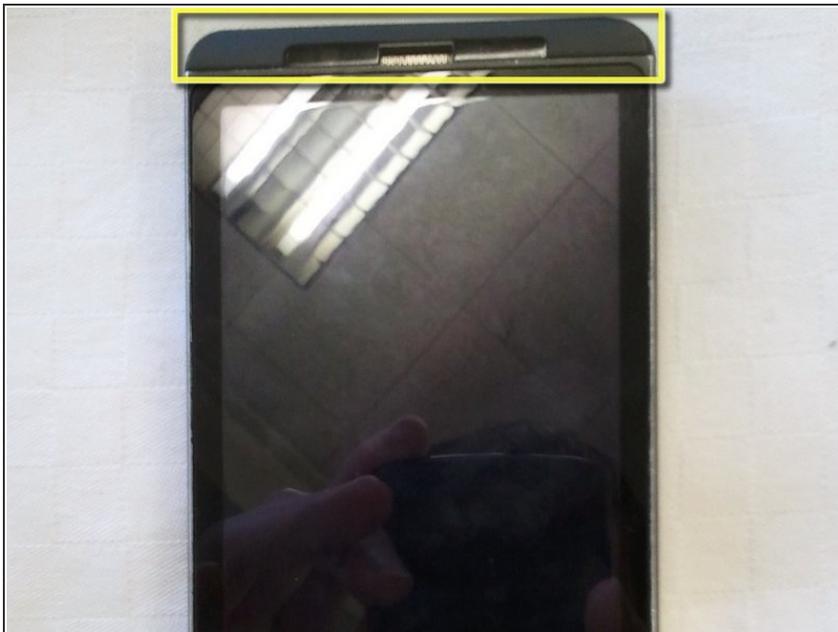

- **INSTRUCTION: Use the iFixit tool as a crowbar to pry the top plastic cover piece off of the phone. It will pop off.**

Step 13




- **INSTRUCTION:** Use the iFixit tool as a crowbar to pry the bottom plastic piece off the phone.

Step 14




- Objective: remove four white screws from the corners of the screen.
- ⓘ These four (4) screws help hold the phone together. Use a Phillips Hex 2mm screwdriver

Step 15

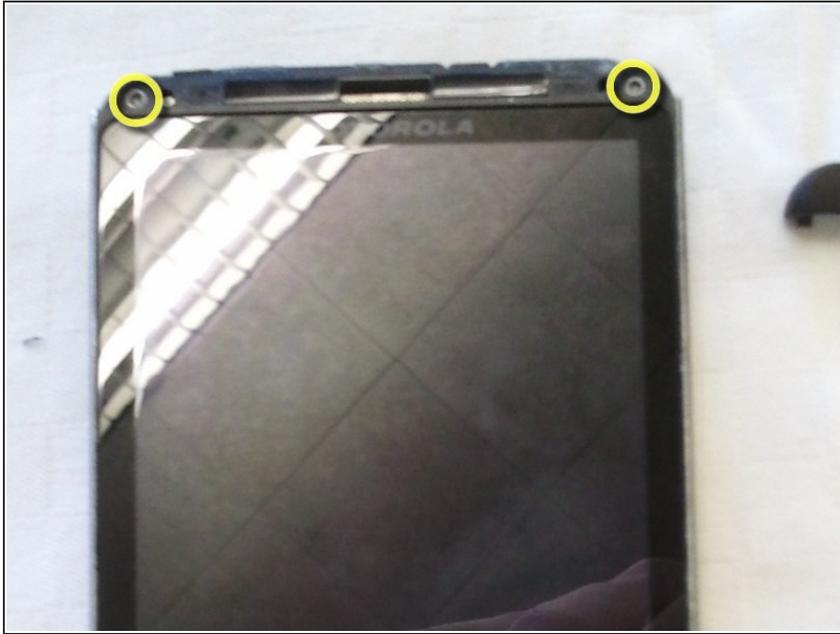

- **INSTRUCTION:** remove the 2 white screws from the upper corners of the screen.

Step 16

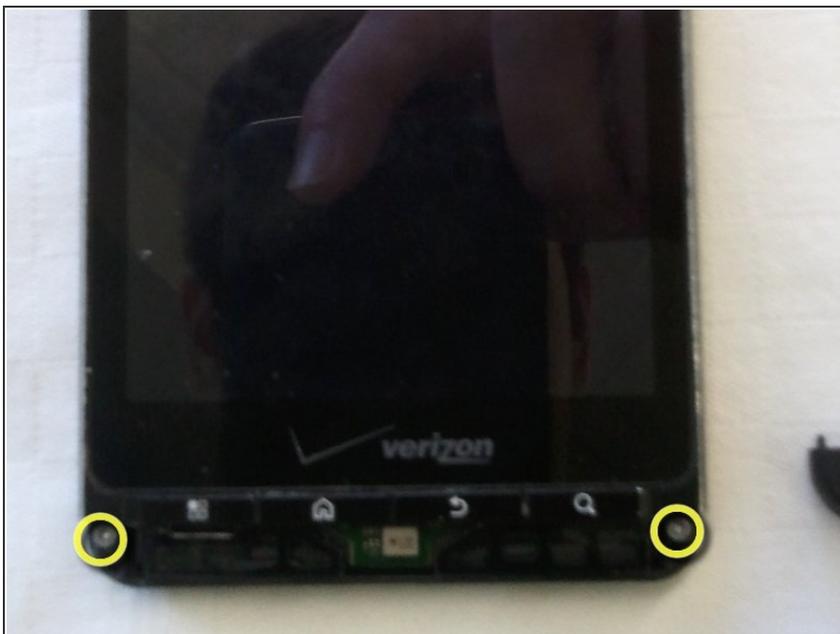


- **INSTRUCTION:** remove the 2 white screws from the lower corners of the screen.

Step 17



- Objective: remove the rear case from the phone in order to provide access to inside the phone.
- The phone is now held together by the casing alone. You need to pop the two halves apart.

Step 18

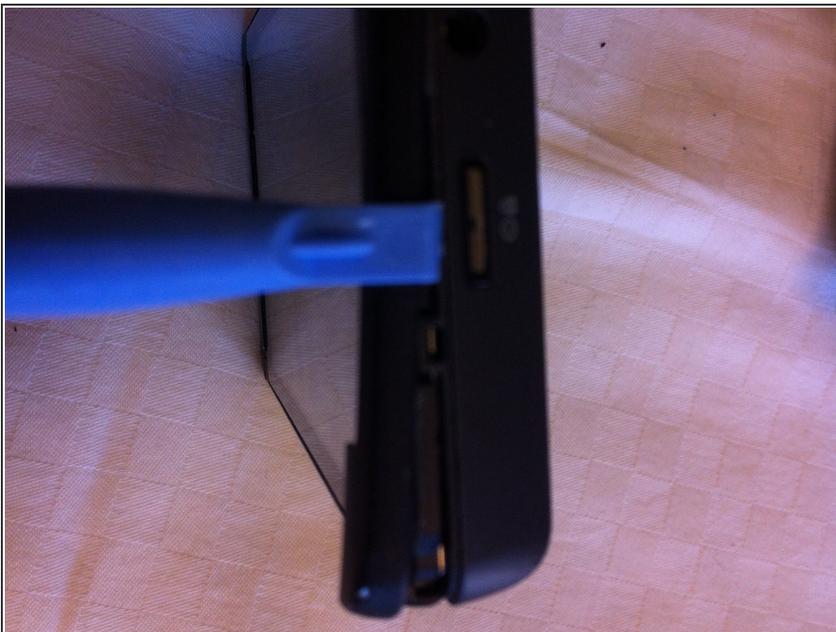

- **INSTRUCTION:** Use the iFixit tool like a crowbar to pry apart the front and rear halves of the casing. They will pop apart.

Step 19



- Now you are ready to access the internal circuits of the phone.

To reassemble your device, follow these instructions in reverse order.