



# Toshiba Satellite C55D-C5106 RAM Replacement

This guide is to show you how to replace the RAM for your laptop: the Toshiba Satellite C55D-C5106.

Written By: Laura Tamayo



---

## INTRODUCTION

In the case you need to replace the RAM of your Toshiba Satellite C55D-C5106, this guide will show you the steps on how to perform the task.

---



### TOOLS:

- [Metal Spudger](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — RAM



- Turn the laptop off and remove any external power sources.
- Flip the laptop upside down.
- Remove all of the 12 screws that secure the back cover to the laptop with a Phillips #1 screwdriver.

## Step 2




- Pull the battery toward yourself until it is completely removed from the laptop. The battery should detach easily.

### Step 3



- Run the metal spudger around the seam between the back cover and the rest of the laptop.



### Step 4

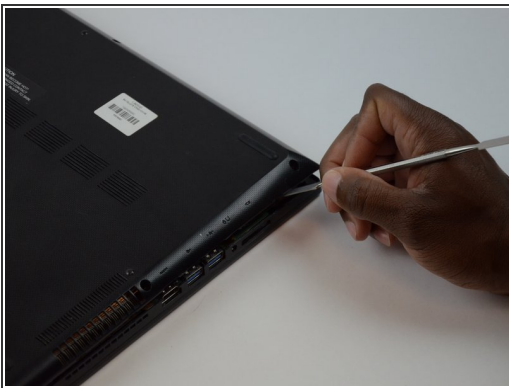

- Use the metal spudger to remove the bottom cover of the laptop.



## Step 5

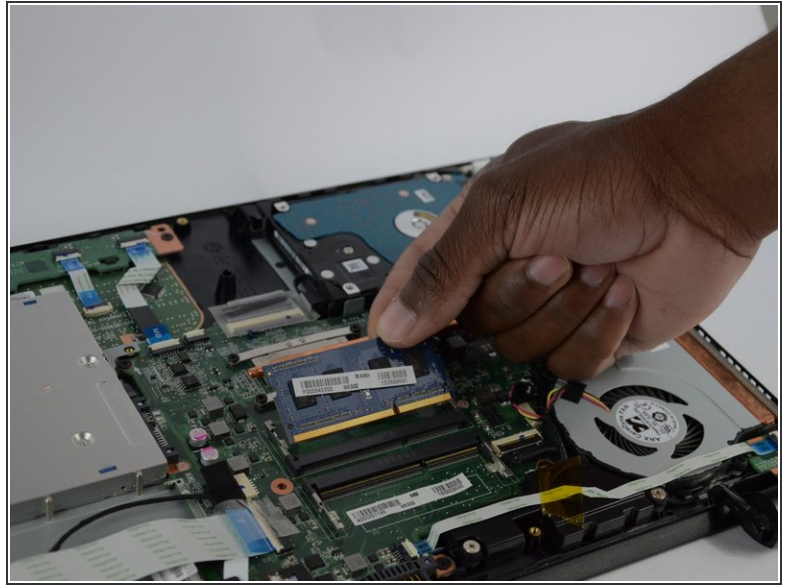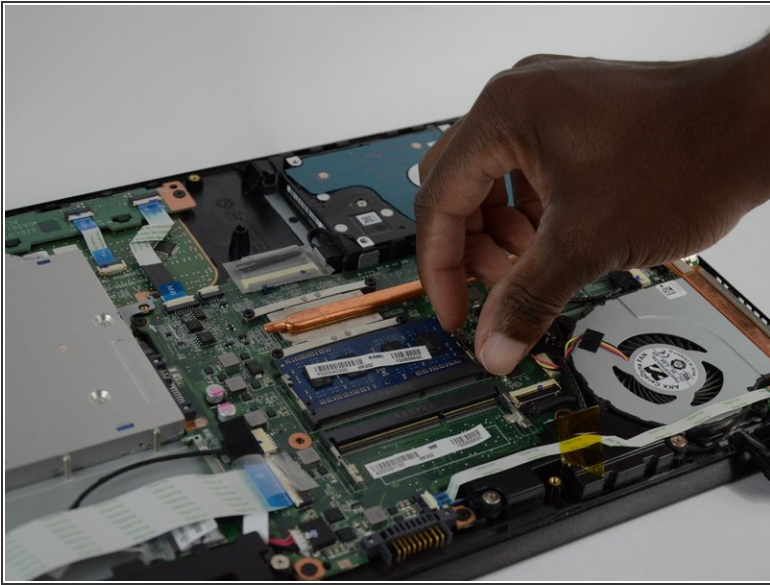

- Pull out the clips securing the RAM chip.
- Remove the RAM chip.

To reassemble your device, follow these instructions in reverse order.