


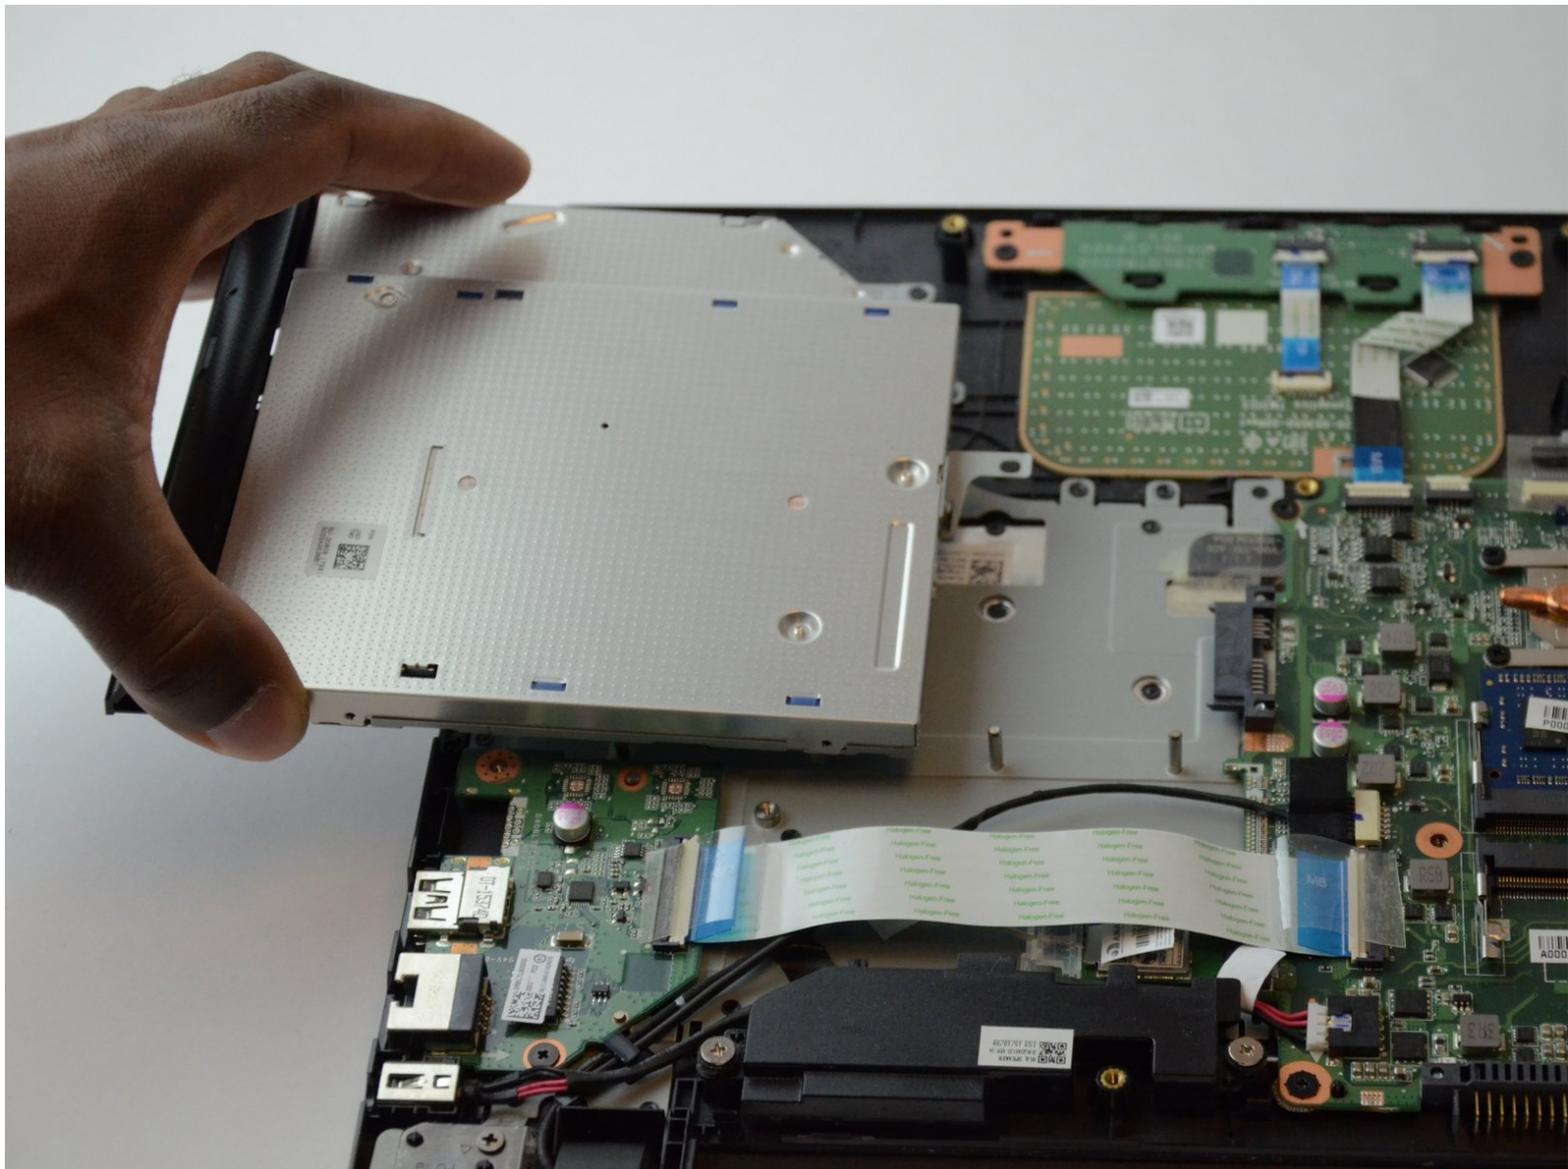

Toshiba Satellite C55D-C5106 Disk Drive Replacement

This guide is to help you replace the disk drive of your laptop, Toshiba Satellite C55D-C5106.

Written By: Laura Tamayo



INTRODUCTION

In the case you need to replace the disk drive of your Toshiba Satellite C55D-C5106, this guide will aid you through the process.

TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Disk Drive




- Turn the laptop off and remove any external power sources.
- Flip the laptop upside down.
- Remove all of the 12 screws that secure the back cover to the laptop with a Phillips #1 screwdriver.

Step 2




- Pull the battery toward yourself until it is completely removed from the laptop. The battery should detach easily.

Step 3

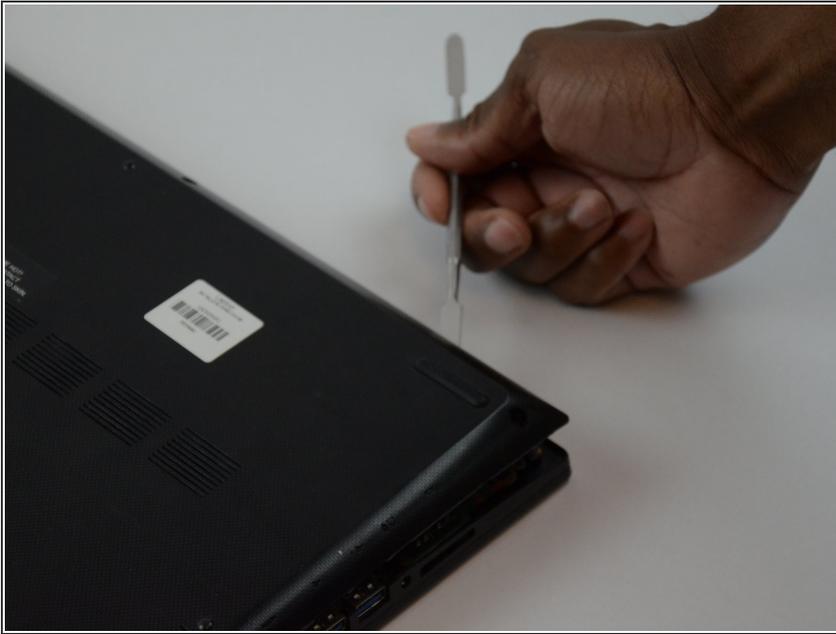


- Run the metal spudger around the seam between the back cover and the rest of the laptop.

Step 4

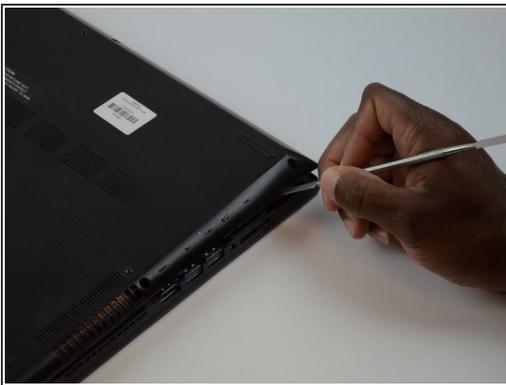

- Use the metal spudger to remove the bottom cover of the laptop.

Step 5

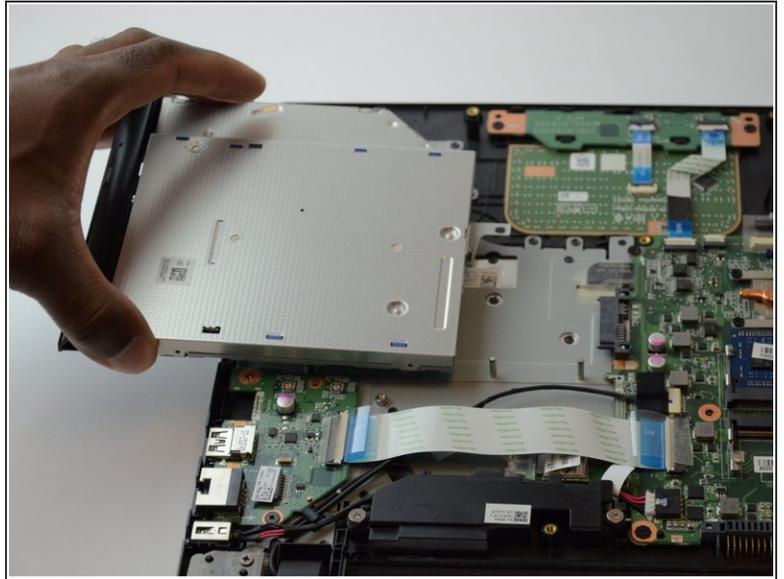

- Remove the disk drive by gently pulling it up and sliding it out.

To reassemble your device, follow these instructions in reverse order.