



Lenovo Essential G555-0873 Fan Replacement

This guide will help you replace the fan in the Lenovo Essential G555-0873.

Written By: Michael Elledge



INTRODUCTION

Use this guide to replace the fan in the Lenovo Essential G555-0873. This will also allow you to access the heat sink, and replacing the fan will help if your computer is overheating.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Bottom Panel



- Unscrew the two 5.1 mm screws that secure the bottom cover.
- ⓘ Note that the screws will not come all the way out of the sockets.

Step 2

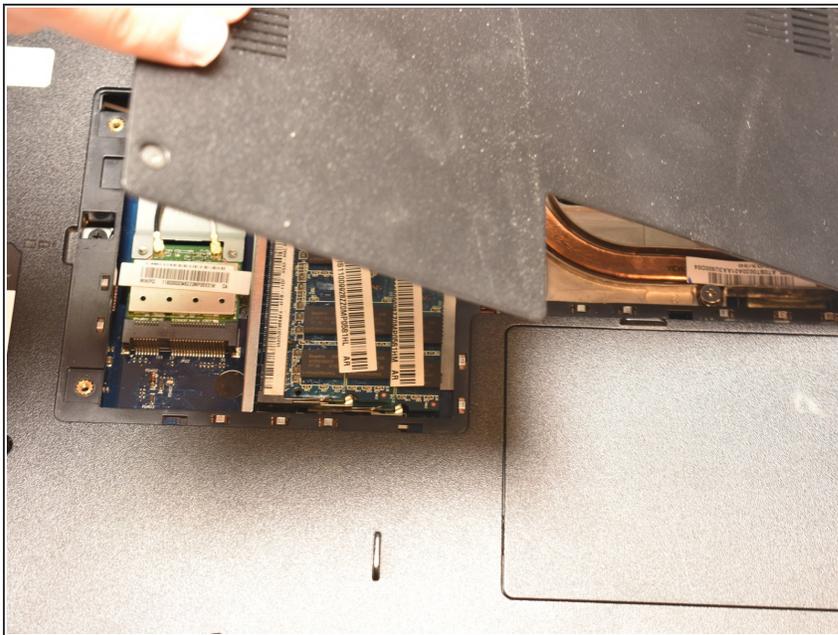

- Lift from the notch until the back panel comes up.

Step 3 — Fan



- Disconnect the fan from the motherboard by pulling the plug shown in the picture.

Step 4



- Unscrew the three 4.6mm screws shown in the picture.

Step 5



- Gently lift the fan straight up until it is lifted out of the case.

To reassemble your device, follow these instructions in reverse order.