


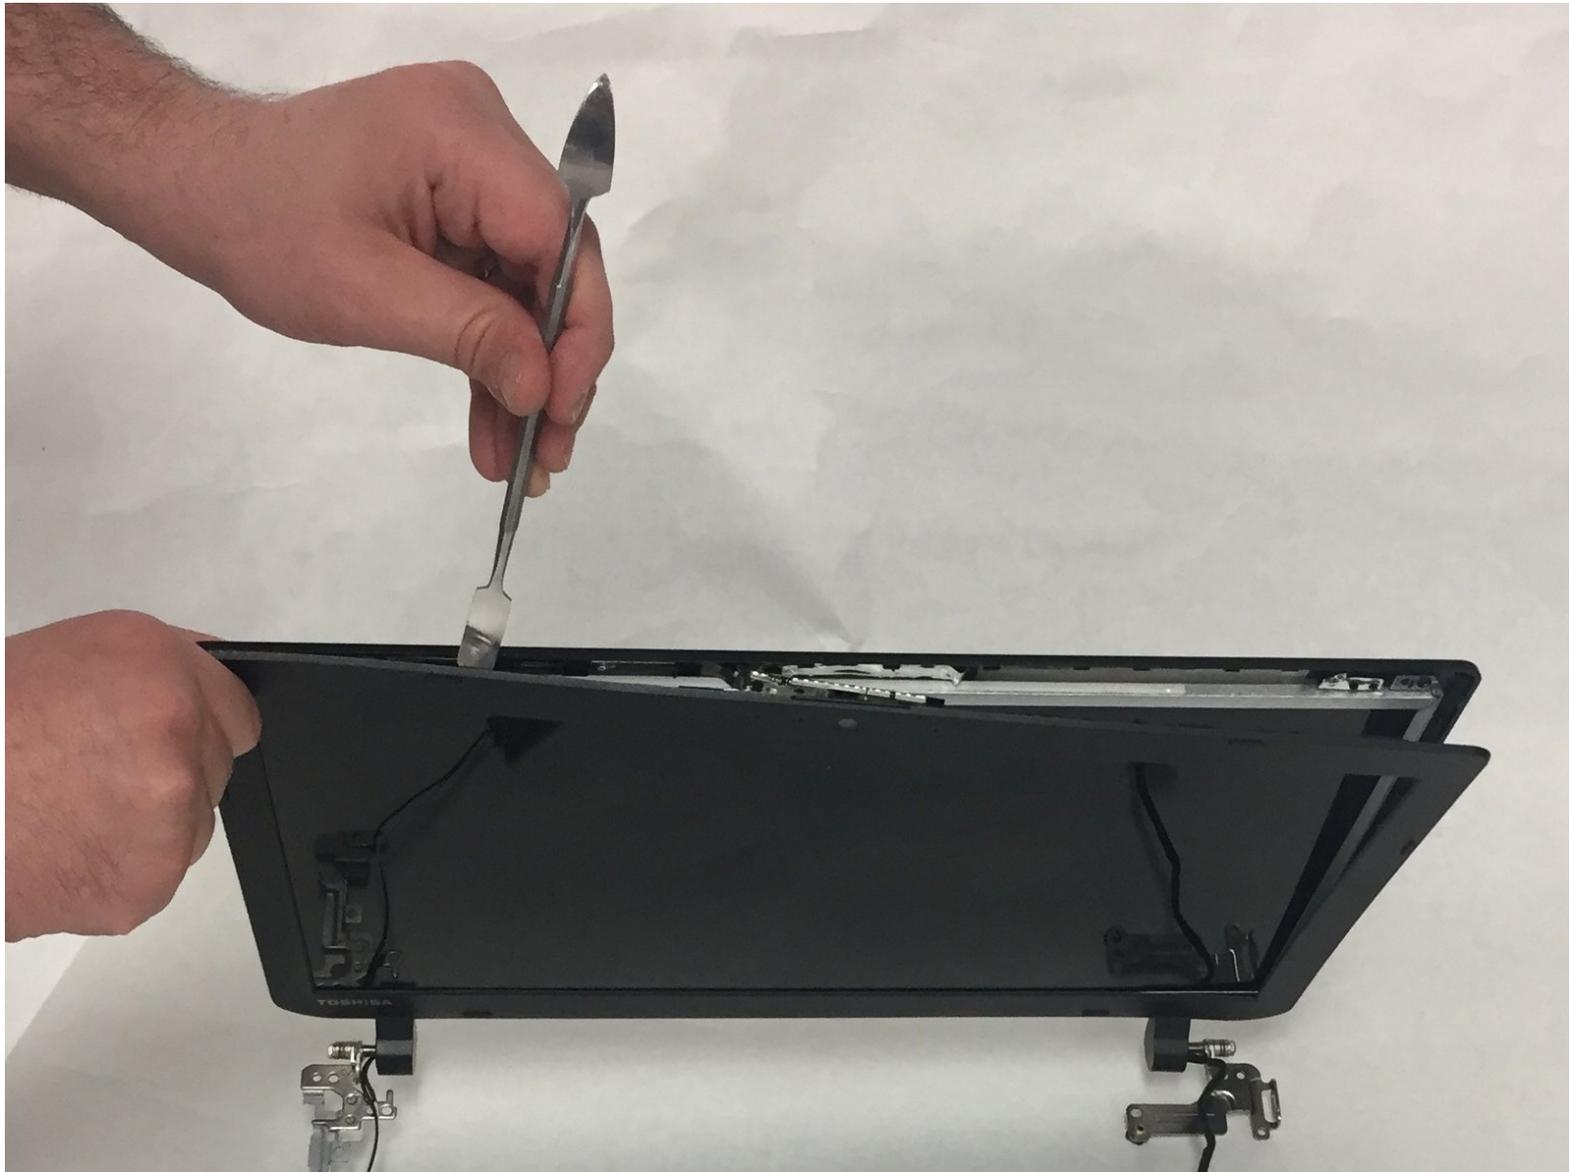

Toshiba Satellite C55-B5302 Screen Bezel Replacement

This guide will go over how to replace the Toshiba Satellite C55-B5302 screen bezel.

Written By: David Browning



INTRODUCTION

These are the steps for removing the screen bezel from your Toshiba Satellite C55-B5302 laptop. Before starting, make sure you have your Phillips size #0 screwdriver and a systematic way to keep all the unscrewed screws as there are going to be a large number of them with different dimensions. Since we will be working in close proximity with the monitor screen, you should be careful not to scratch it.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Metal Spudger Set](#) (1)
-

Step 1 — Battery



- Flip laptop upside down so you can see the screws.

Step 2



- Using the Phillips #0 screwdriver, remove the two 7 mm screws from the back casing.

Step 3




- Pull the battery from the back of the laptop for removal from the laptop.

Step 4 — Fan





- Remove the remaining 7 mm screws on the back panel of the laptop with a Phillips #0 screwdriver.
 - Use the plastic opening tool to pry up a corner of the back panel and continue to pop the back panel off.
- i** Expect to hear popping as you pull the back panel off.

Step 5

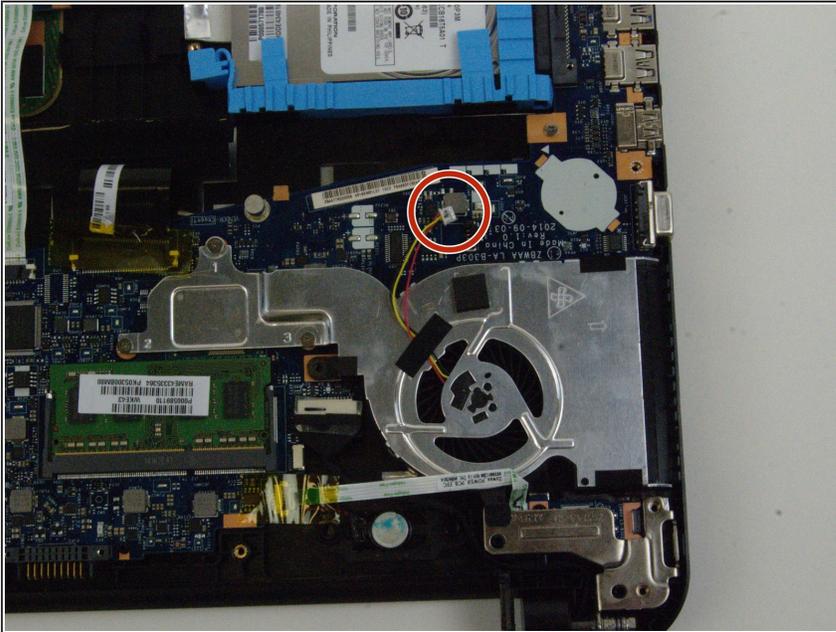


- Disconnect the fan wire from the motherboard.

Step 6

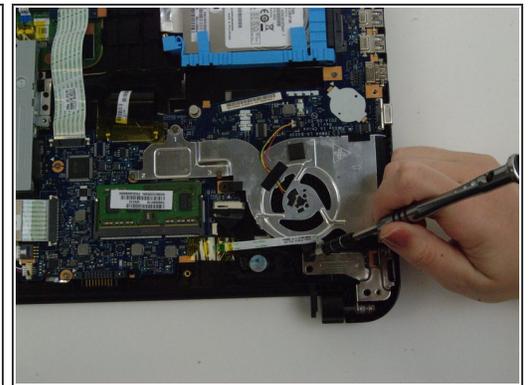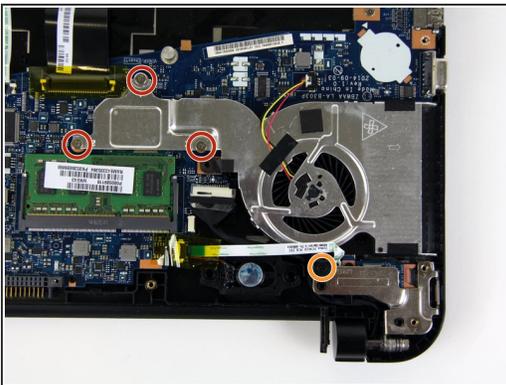

- Remove the three 3 mm screws with a Phillips #00 screwdriver.
- Remove the 5 mm screw with a Phillips #0 screwdriver.

Step 7

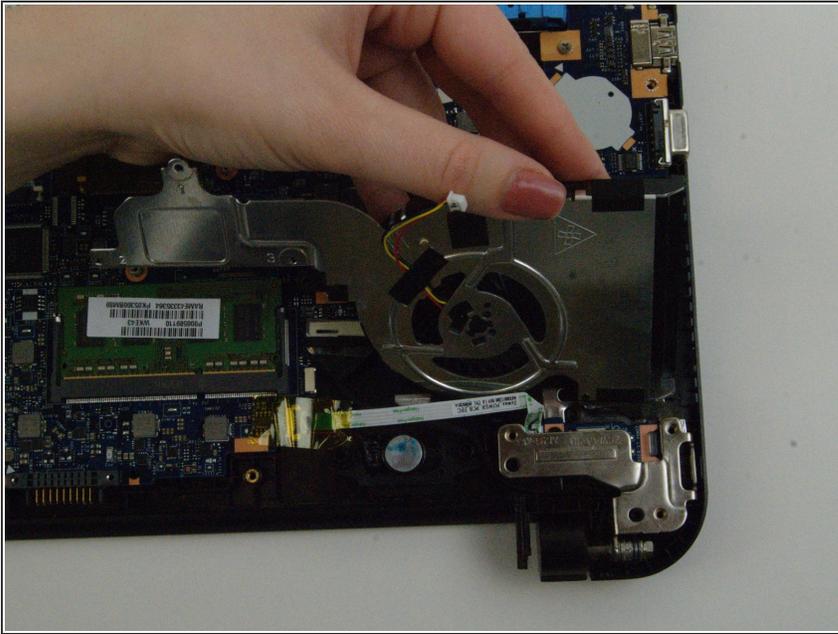


- You can now lift the fan out of the laptop.

Step 8 — Screen Bezel



- After the fan has been removed, lift the hinge so as to get access to the parts below it.
- Remove the the black colored cable that is now exposed.

Step 9

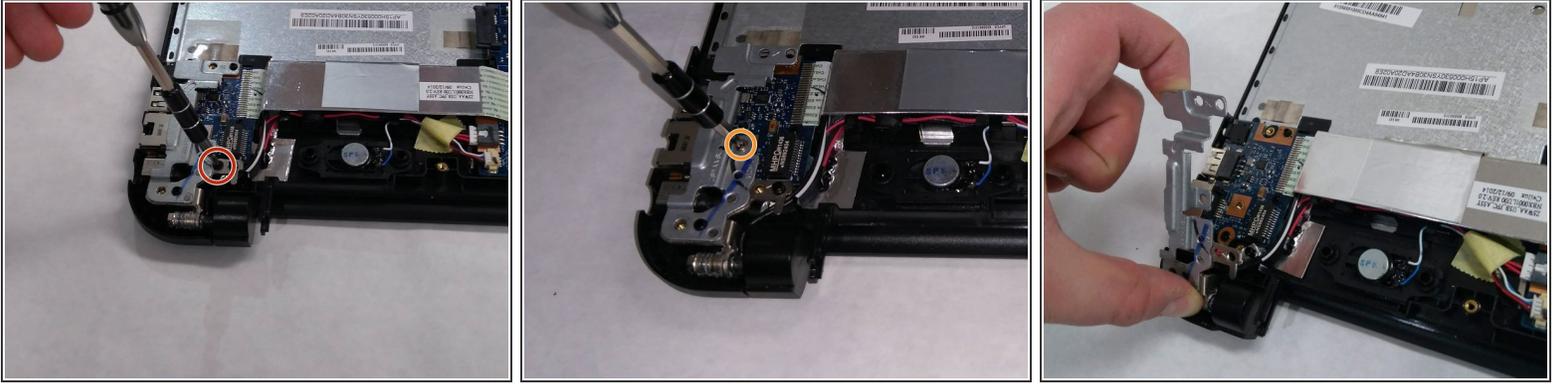


- Remove the 7 mm Phillips #0 screw on the other hinge.
- Remove the 3.1 mm Phillips #0 screw on the the same hinge.
- Lift the hinge up and towards you.

Step 10




- Pull out the wide cable to reveal the components underneath.

Step 11

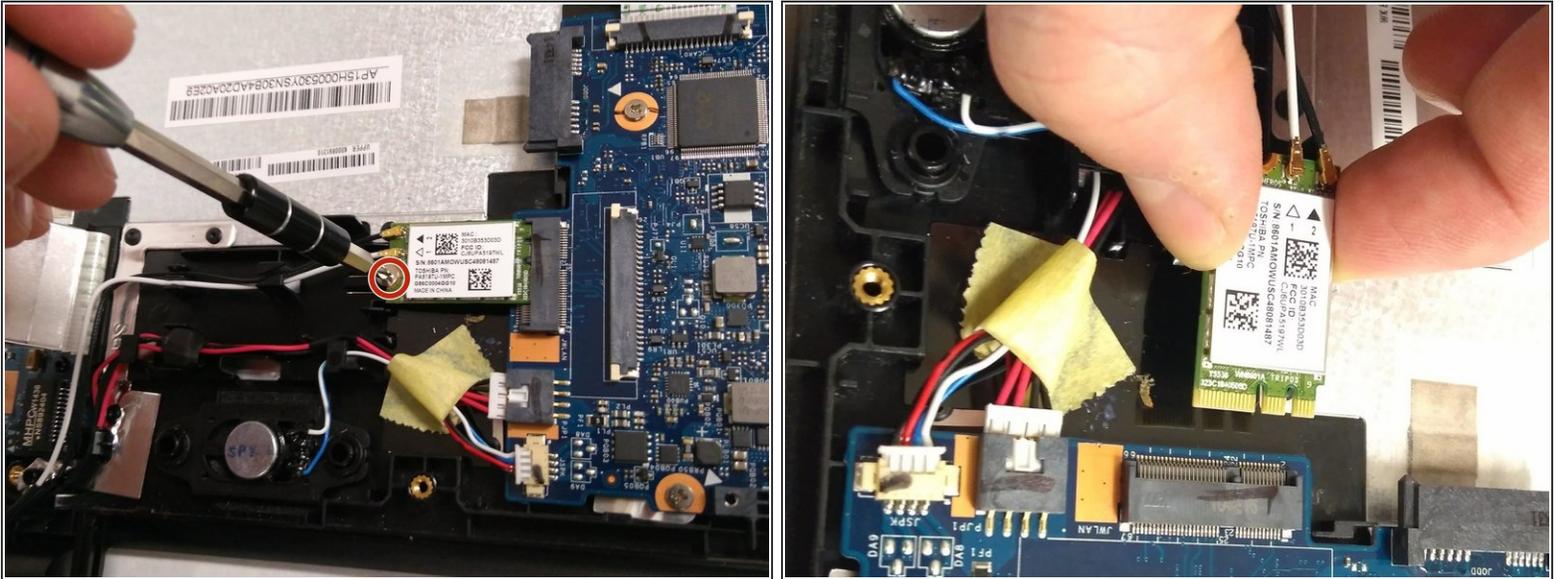

- Remove the 3.1 mm Phillips #0 screw holding the chip in place.
- Pull out the chip.

Step 12

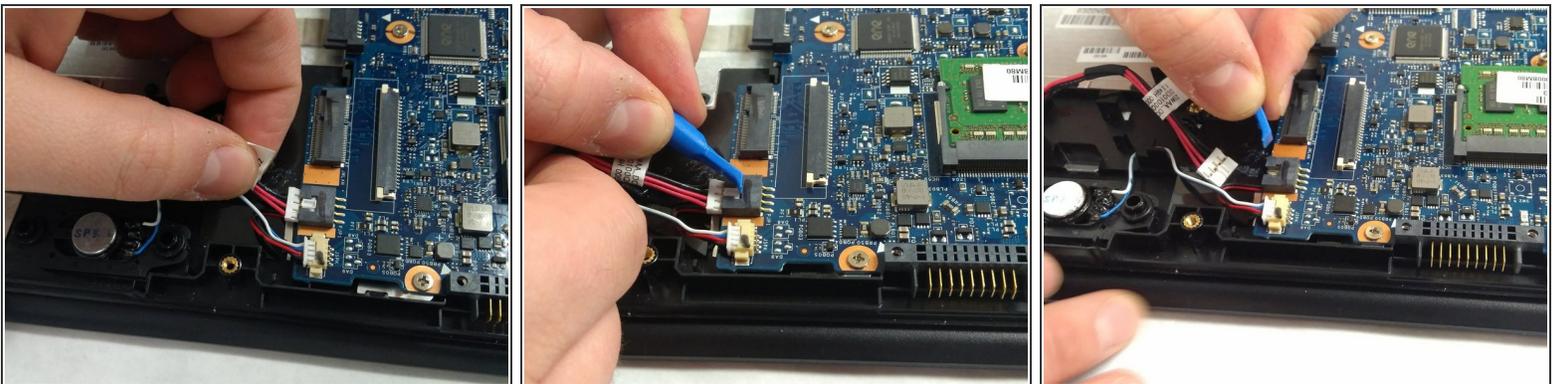


- Hold the cable that is to be removed.
- Use an iFixit opening tool to push down on the white protrusion of cable connector.
- Now you can pull out the cable.

Step 13



- Pivot and lift up the monitor and separate it from the base of the laptop.

Step 14

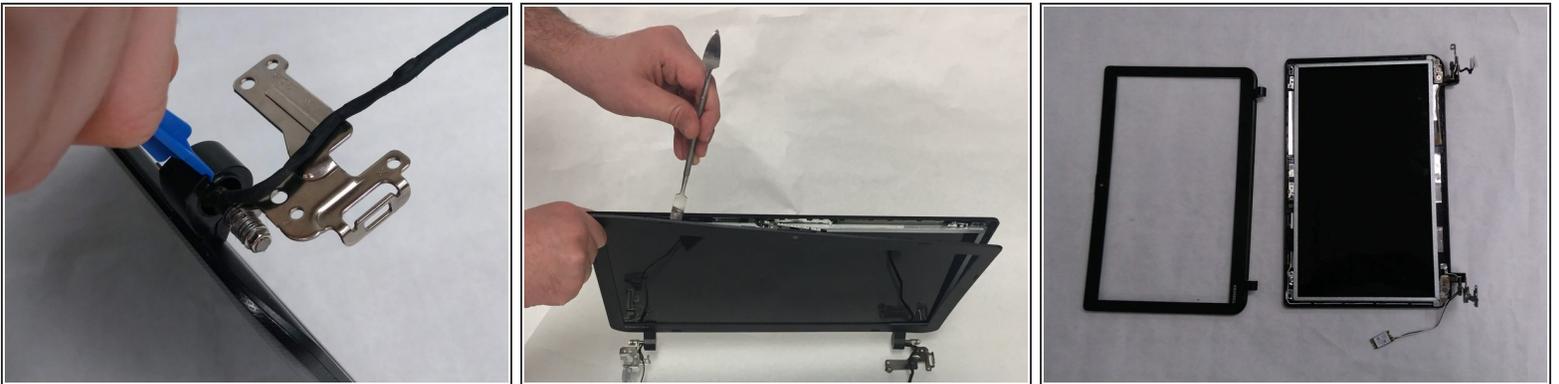

- Use an iFixit opening tool to separate the two halves of the bezel starting at both the plastic hinges.
 - Use the metal spudger to separate the rest of the bezel.
- ⚠** Be careful not to scratch the screen with the metal spudger.
- i** You may hear some sounds as the clips on the bezel disconnect from the back cover. This is normal.

To reassemble your device, follow these instructions in reverse order.