




Lenovo IdeaPad 100s-14IBR Hard Drive/ Solid State Drive Replacement

In cases of hard drive or SSD issues, removing...

Written By: Mohammed Younis

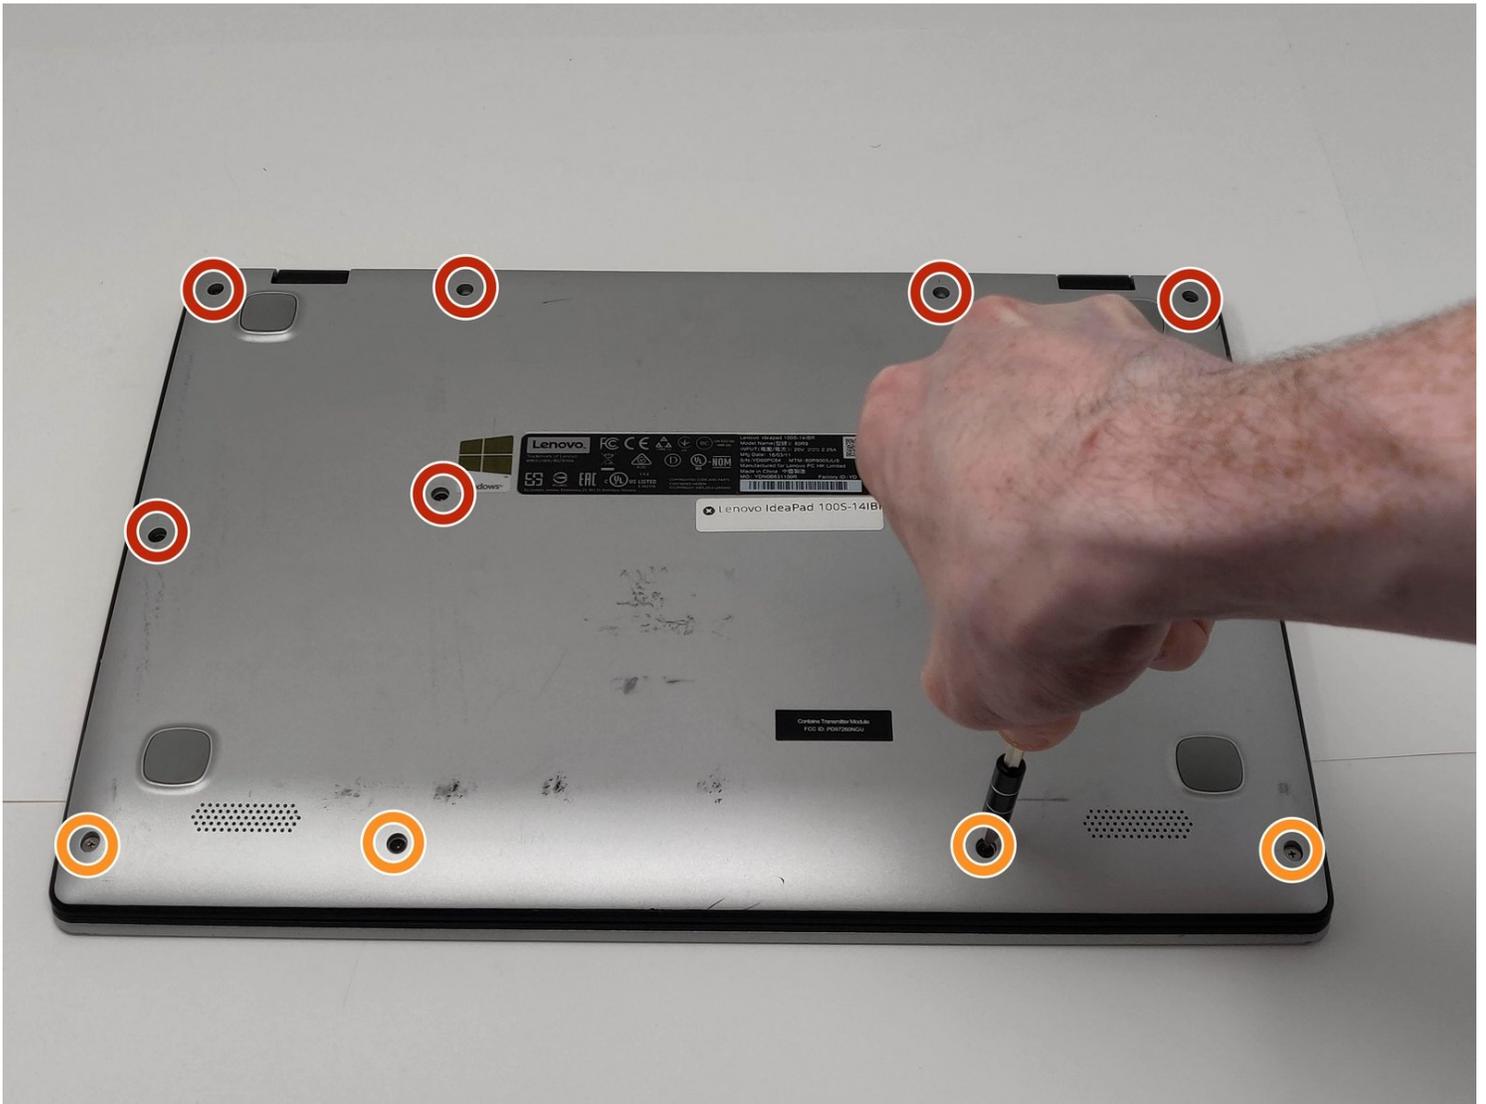

INTRODUCTION

In cases of hard drive or SSD issues, removing the defective hardware may be necessary. This guide demonstrates how to remove the SSD from the Lenovo IdeaPad 100S-141BR.

Required items will be a Phillips #00 Screwdriver and a Spudger. The removal process is simple and requires little to no experience to complete.

It is also recommended to have a replacement drive ready to replace it, but this is not required.


TOOLS:

Phillips #00 Screwdriver (1)
Spudger (1)

PARTS:

Crucial MX500 1 TB SSD (1)
Crucial MX500 250 GB SSD (1)
Crucial MX500 500 GB SSD (1)
2 TB SSD (1)

Step 1 — Hard Drive/ Solid State Drive

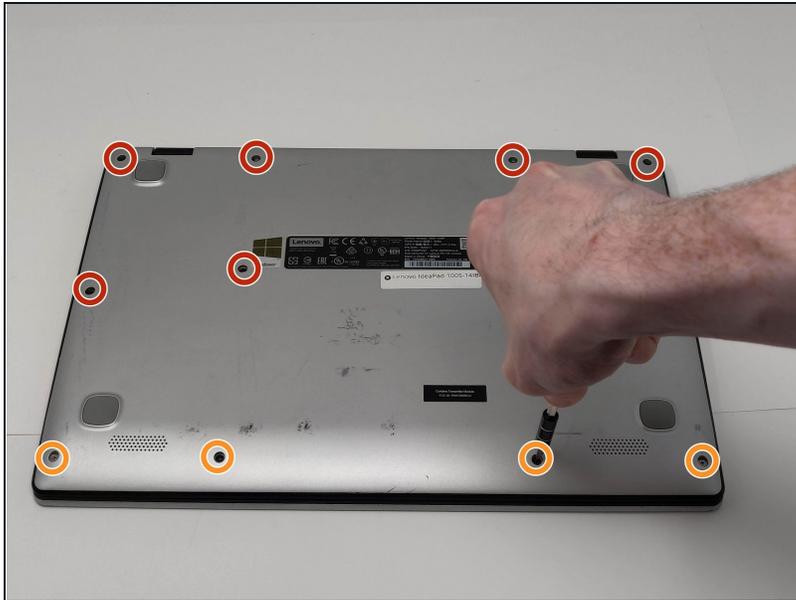

- Remove the eight 4mm PH00 screws.
- Remove the four 2mm PH00 screws.


Step 2



- Use the nylon spudger to loosen the back cover from the back of the device.

⚠ You may hear a bit of a snapping sound, but this is normal.

Step 3

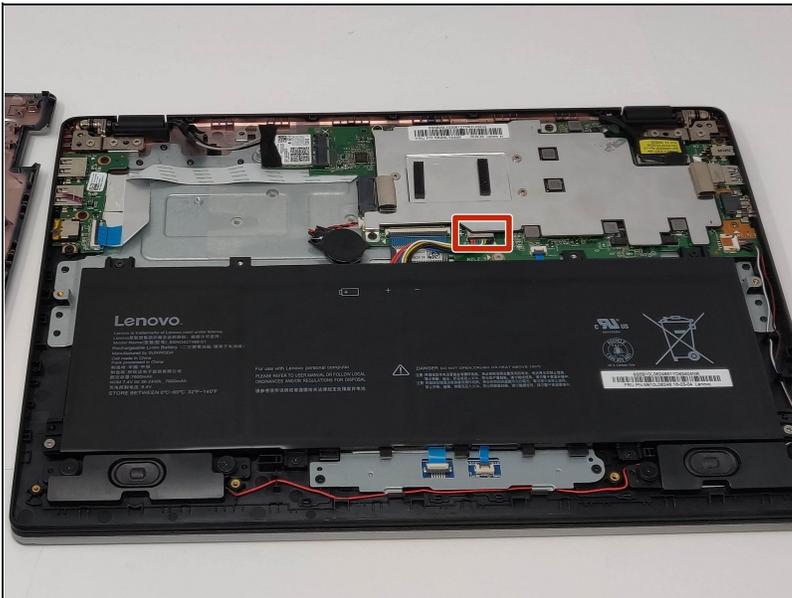

- For safety reasons, disconnect the wires connecting the battery to the motherboard with a nylon spudger.

Step 4



- Remove the solid state drive.

To reassemble your device, follow these instructions in reverse order.