



Lenovo Ideapad 110S-11IBR LCD Replacement

This guide will help Lenovo Ideapad 110s 11IBR owners with removal of their device screen.

Written By: Tristan Feilla



INTRODUCTION

This guide will allow any owner of a Lenovo Ideapad 110S-11IBR to undergo the process necessary to remove and replace the screen of the device. To do so, simply follow the given steps, starting with the removal of the back panel, loosening of the screen hinges, and eventually removal of the screen. To reassemble, follow the steps in reverse order.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
-

Step 1 — LCD




- Use a Phillips #0 screwdriver to remove the eleven 3.7 mm screws from the bottom of the Chromebook.

Step 2

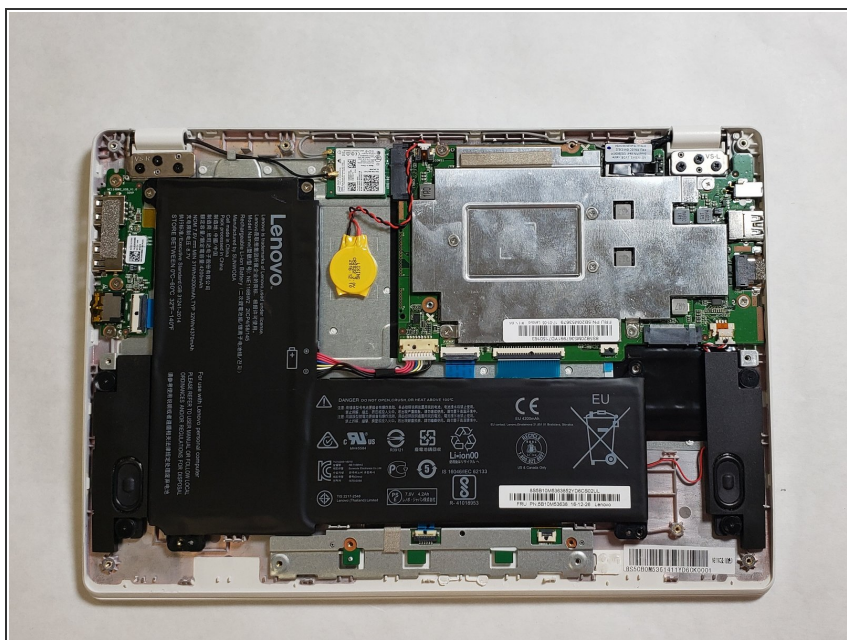


- Remove the back cover, showing the internal components.

Step 3

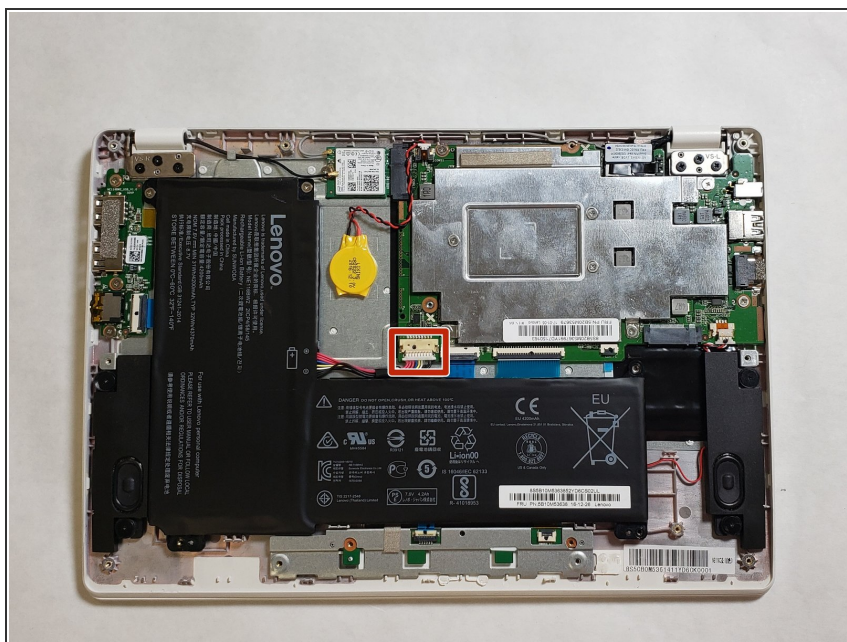


- Use a plastic opening tool or spudger to push the battery's bundled connector out of its socket.

Step 4

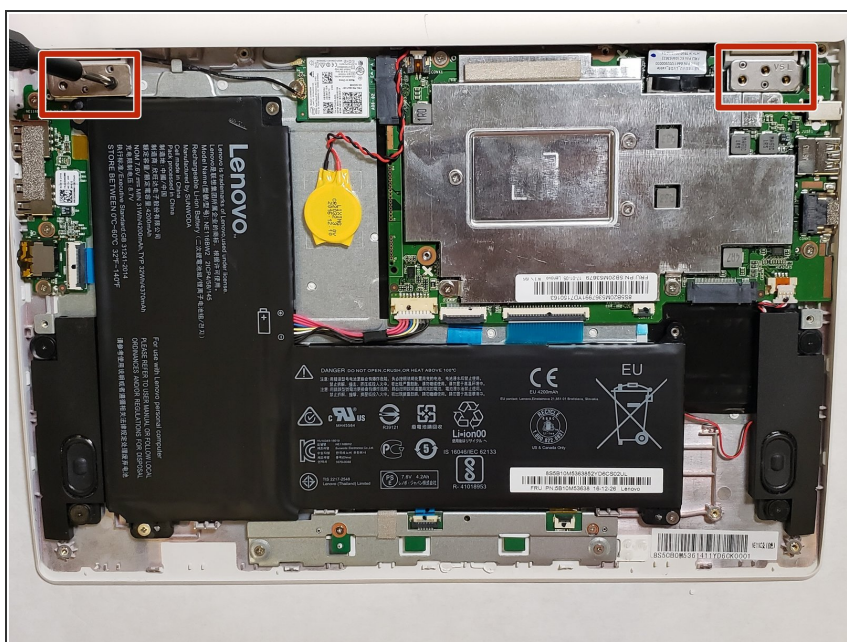


- Use a Phillips #0 screwdriver to remove six 4.6 mm screws that connect the screen hinge assembly.

Step 5

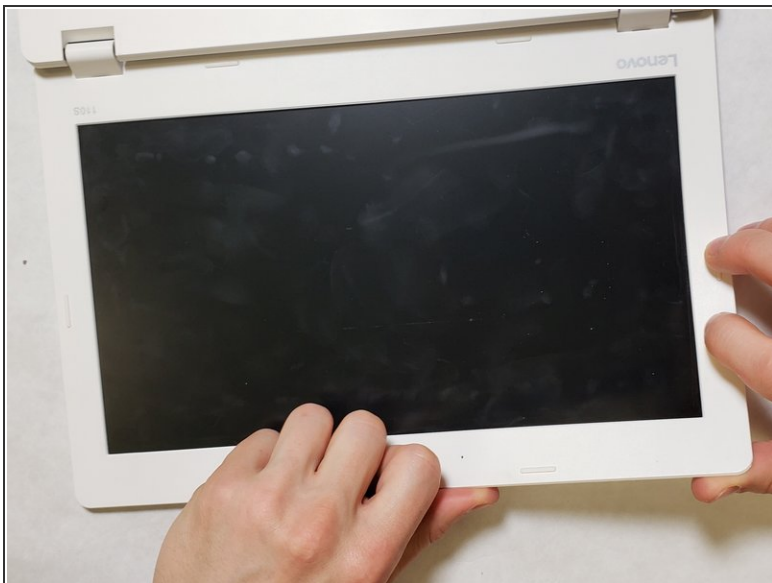


- Remove the frame from the screen utilizing the iFixit opening tool.

Step 6

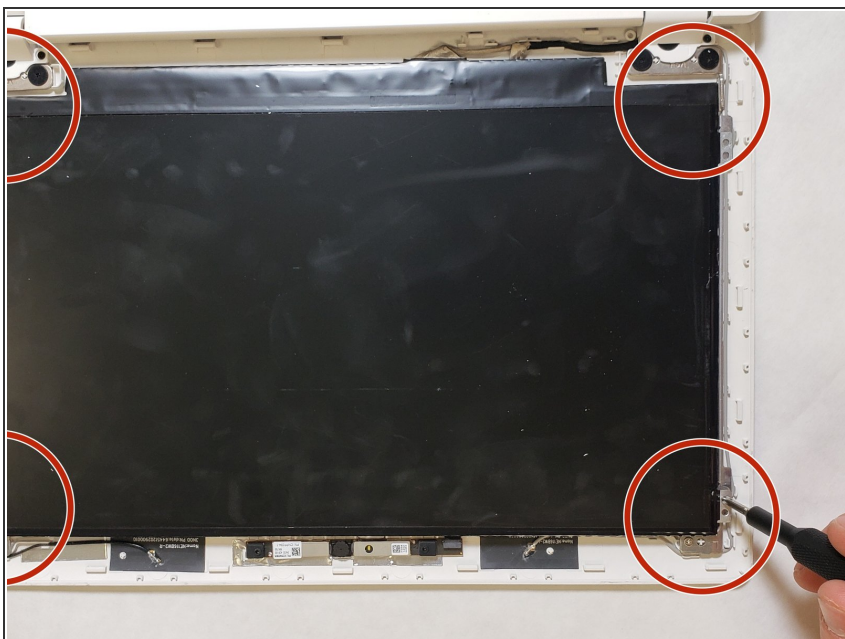

- Remove 4-2.7mm Philips size 0 screws from the screen utilizing the iFixit screwdriver.

Step 7

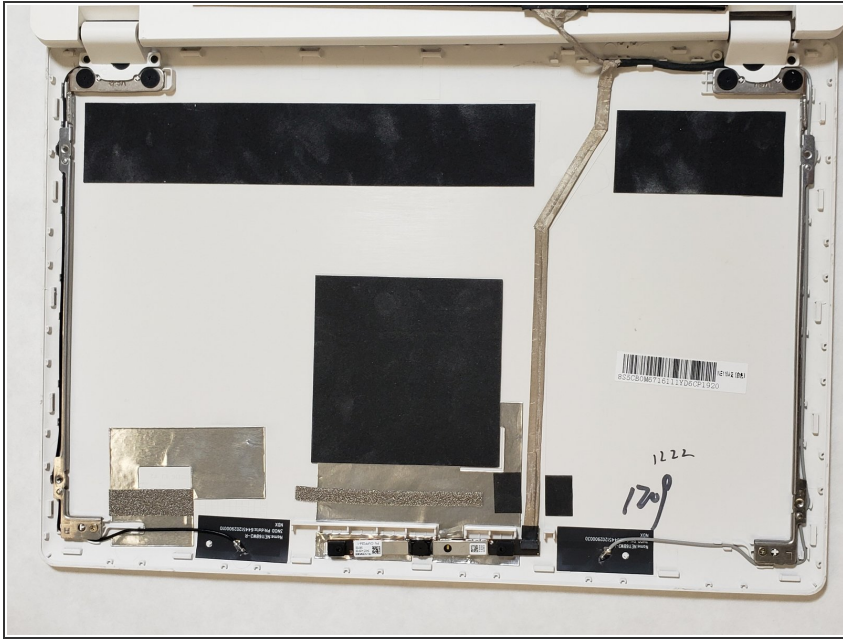

- Remove the screen.

To reassemble your device, follow these instructions in reverse order.