


## **Power Cable Disconnect**

Prereq only guide on how to disconnect the power cable on the Clarke EZ-8 floor sander.

Written By: Tarun Thiruma

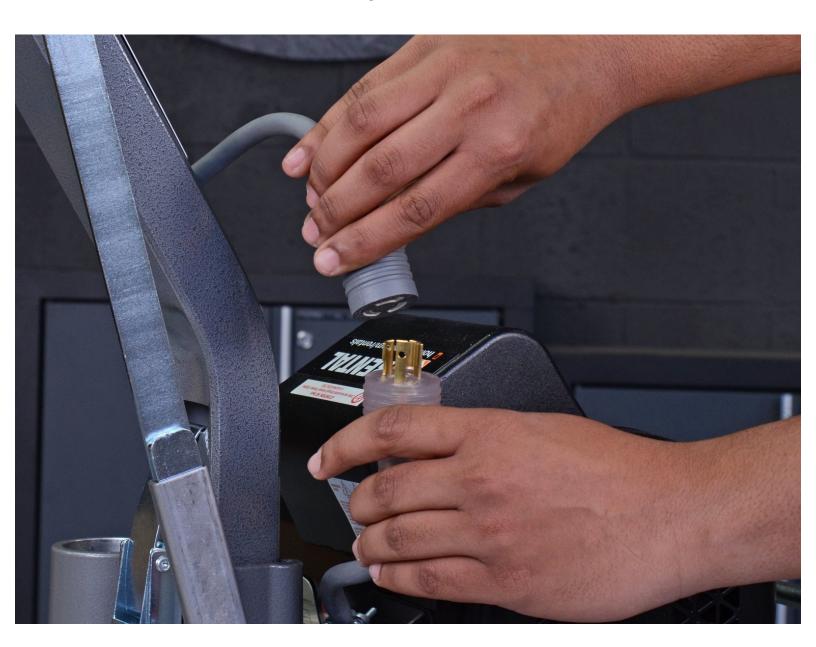

## **INTRODUCTION**

This is a prerequisite only guide for disconnecting the power cord of the Clarke EZ-8 floor sander.

## Step 1 — Disconnect all power cables



⚠ Before you begin your repair, disconnect all power cables to reduce the risk of short circuits and electric shock.

To reassemble your device, follow these instructions in reverse order.