



Dyson V8 Animal Brush Bar Replacement

This guide will demonstrate how to remove and replace the brush bar on the Dyson V8 Animal.

Written By: AJ McLean-Scholz



INTRODUCTION

If your Dyson V8 Animal's brushbar fails to sweep up dirt or dust, use this guide to replace the brushbar. The brushbar sweeps up dust or junk by rotating its bristles when the vacuum is powered on. A [broken or faulty brushbar](#) will fail to rotate or sufficiently sweep up dust.

Before using this guide, inspect the brushbar to make sure it is not just jammed or tangled. Simply untangling the brushbar will sometimes fix the issue.

No special skills are required for this guide.

Before beginning, make sure to turn off the vacuum and disconnect it from any external power source.

TOOLS:


- [Coin](#) (1)
-

Step 1 — Brush Bar



- Push the red button and then slide the brush head off of the shaft.
- ⓘ The shaft must be held from moving when sliding the brush head off.

Step 2

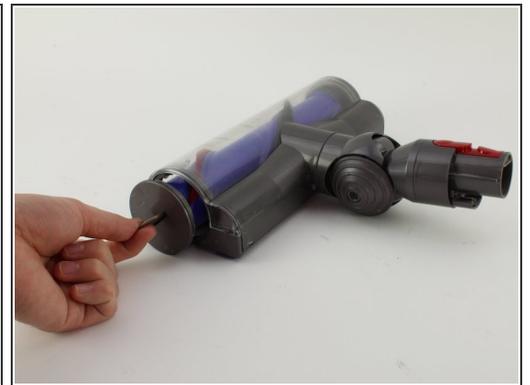

- Insert a coin into the slot on the side of the brush head.
- Turn the coin counter clock wise to unlock the brushbar.
- Pull the brushbar straight out of the brush head.
- Clean all debris off of the brushbar and from inside the brush head.
- ⓘ The brushbar will spring outwards slightly when unlocked successfully.

To reassemble your device, follow these instructions in reverse order.