




# Replacing Nexus 7 Solution to no power up after a drop

Solution to no power up after a drop.


Written By: Victor Aulestia

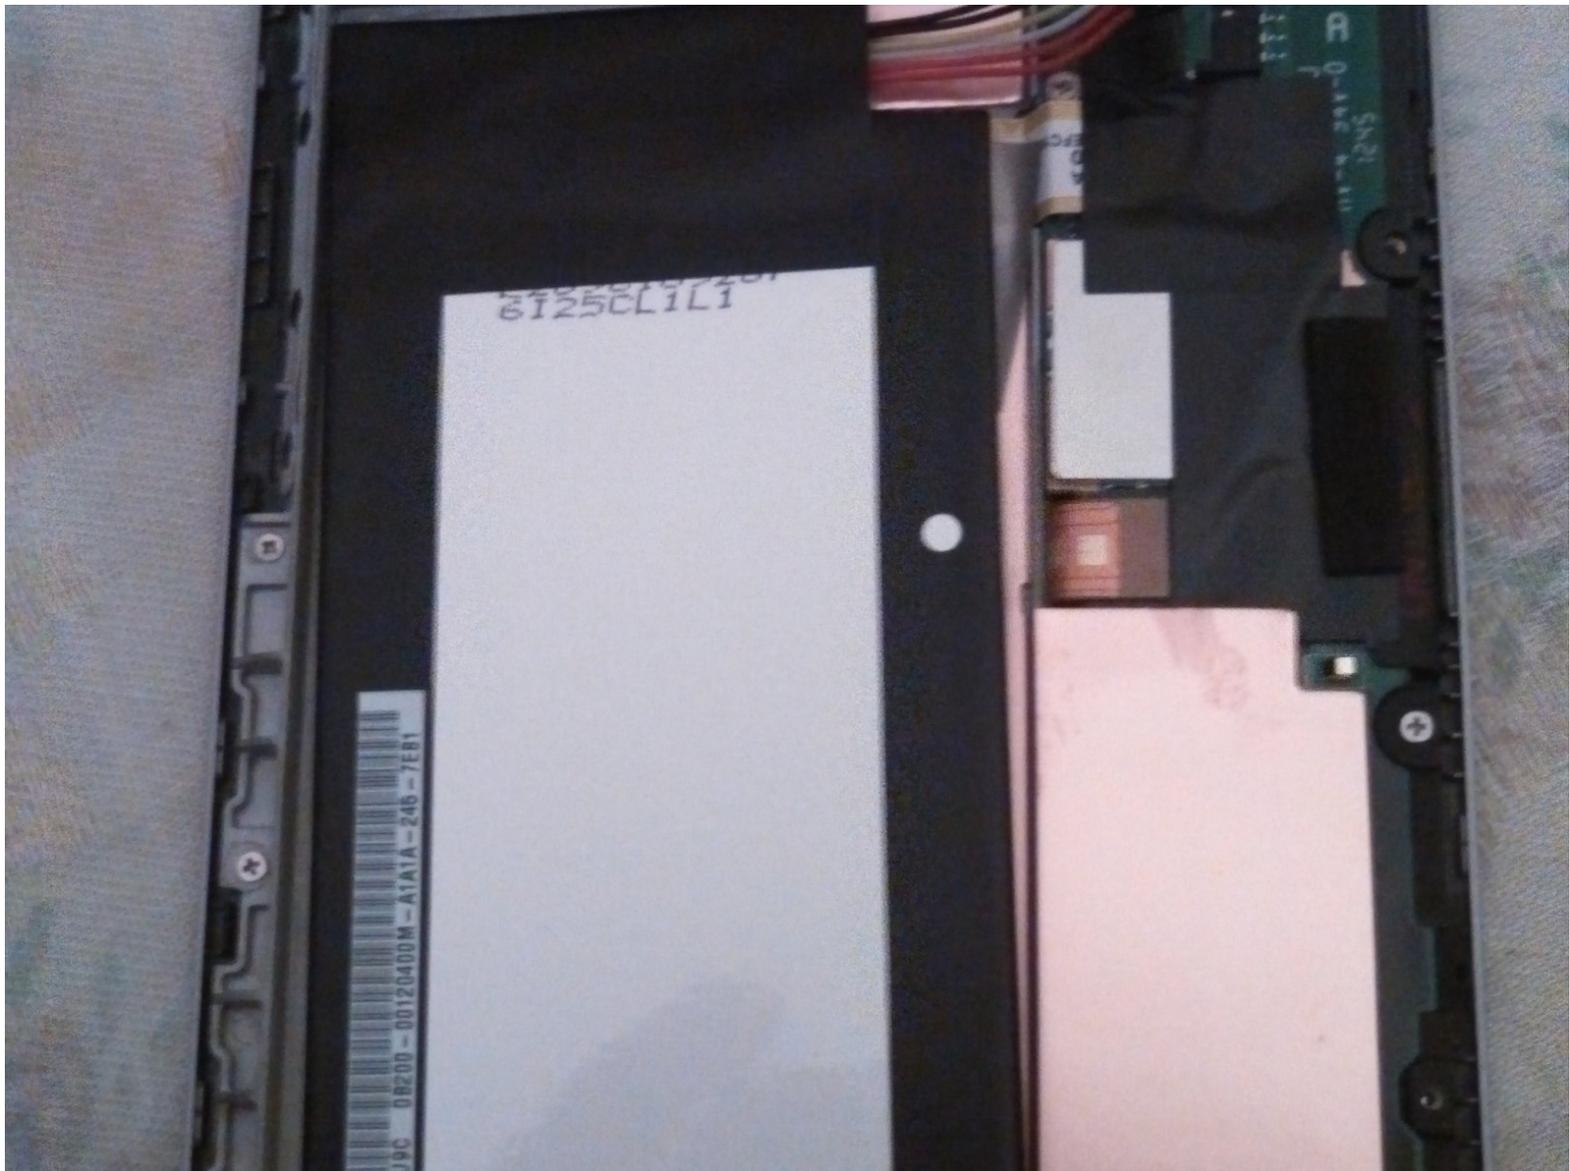

## INTRODUCTION

Tablet was dropped, failed to power on. Plugged in but screen just flashed. Removed back. Connection for the battery was not seated & battery was at a slight angle. Drop caused plug & battery to unseat. Reseated and put back cover on and it powered up. Easy fix

## Step 1 — Solution to no power up after a drop

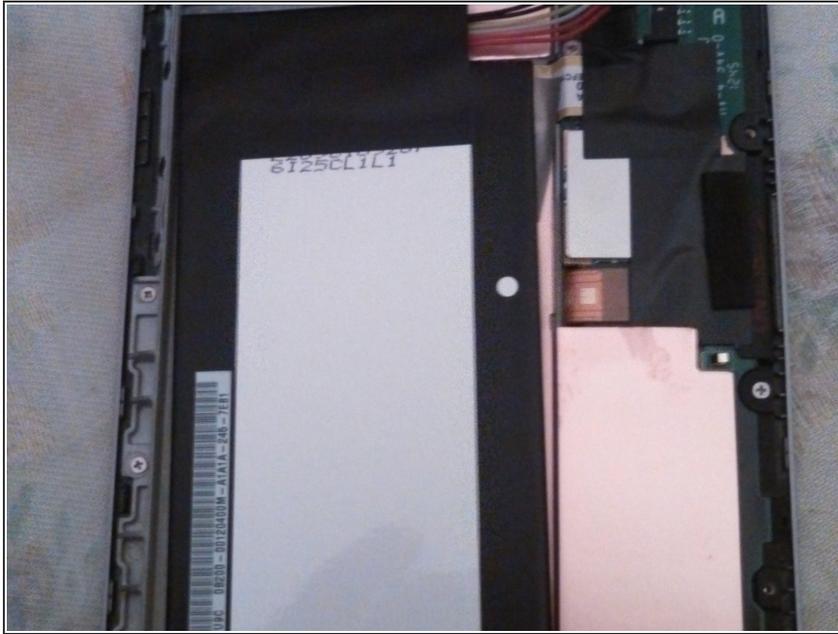

- Note battery compartment slightly larger than battery. 1/8" reveal on left side if off after top of battery shifted.

To reassemble your device, follow these instructions in reverse order.