



# Toro Walk Behind Mowers 21199HD 2018 Left Blade Replacement

Guide to remove and replace the left blade on the Toro Walk Behind Mower 21199HD 2018.

Written By: Carsten Frauenheim



## INTRODUCTION

This guide shows how to remove and replace the left blade on the Toro Walk Behind Mower 21199HD 2018.



### TOOLS:

- [Wheel Chocks](#) (2)
- [Impact Wrench](#) (1)
- [5/8" Socket](#) (1)




### PARTS:

- [Toro Blade-Rotary 116-6358-03](#) (1)
- [Toro Adapter-Blade 120-5236](#) (1)
- [Toro Bolt-Blade 125-2466](#) (1)

## Step 1 — Disconnect the spark plug wire




 Before you begin, ensure that the mower is powered down and cool to the touch.

- Grab the plastic housing at the end of the spark plug wire and pull firmly to disconnect it.

## Step 2 — Chock the rear wheels



- Chock the rear wheels to prevent the mower from rolling during service.
-  If the blades are extremely dirty, you can clean them using the washout fitting so the bolts on the underside of the blade guard are accessible.



### Step 3 — Lift up the deflector



- Lift up the plastic deflector.


### Step 4 — Remove the grass bag



- While holding the deflector up and out of the way, lift the grass bag handle away from the mower to detach it.
- Remove the grass bag.



## Step 5 — Tilt the mower on its side

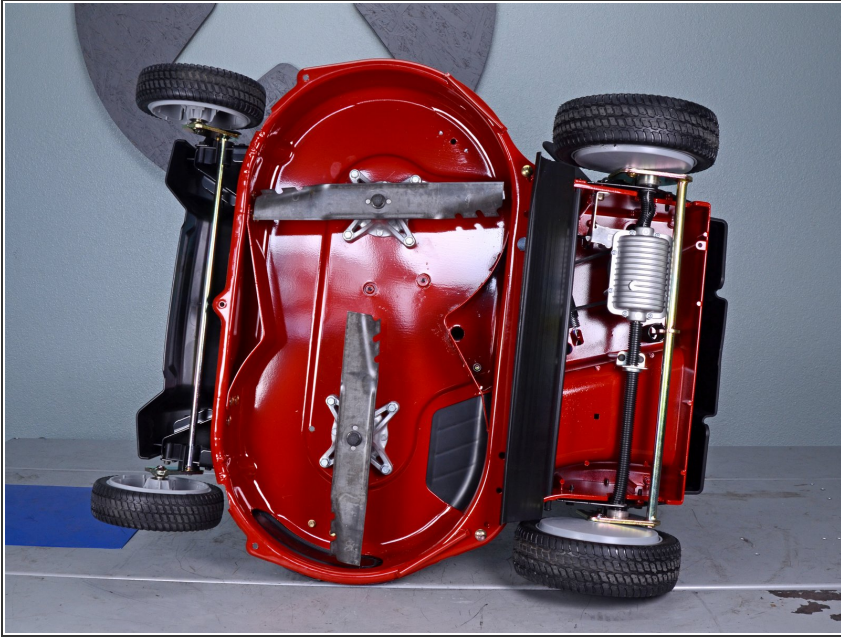

- Tilt the mower onto its side so the blades are facing out.
- ⓘ This may require two people.

## Step 6 — Remove the blade bolt



- Use an impact driver with a 5/8-inch socket to remove the left blade bolt.
- ⓘ If necessary, brace the blade with a screwdriver or extension by placing it in the hole in the metal blade guard.

## Step 7 — Remove the blade



- Remove the left blade.

☞ When installing the new blade, ensure that it's in the [correct orientation and direction](#).

## Step 8 — Remove the blade key adapter



- Remove the left blade key adapter.

To reassemble your device, follow these instructions in reverse order.