

# How to Apply a Screen Protector for iPhone11 Pro Max

Apply a screen protector without leaving bubbles on your iPhone11 Pro Max.

Written By: Qiyuan Feng



#### INTRODUCTION

This guide will guide you through how to apply a screen protector to the iPhone11 Pro Max.

You will need to buy a screen protector that matches your mobile phone model online. The tools you need for this guide are basically included when purchasing the screen protector.


You can choose **an ordinary screen protector** or **anti-peek screen** at the time of purchase. **The ordinary screen protector** only protects the mobile phone screen from breaking. **The anti-peek screen** can ensure that others can only see the black screen but not the content when looking at the phone screen from an oblique side.




#### **TOOLS:**

 NuGlas Tempered Glass Screen Protector for iPhone XS Max/11 Pro Max (1)

### Step 1 — How to Apply a Screen Protector for iPhone11 Pro Max

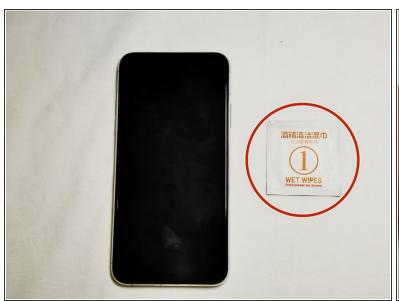

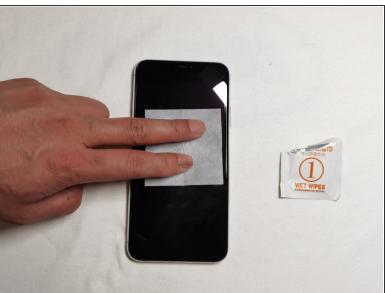

- Wipe the dust off the screen with a No. 1 alcohol cleaning wipe.
- (i) This will help to avoid bubbles when applying the screen protector.

## Step 2



 Use a dry wipe to wipe off any water stains on the screen.

#### Step 3








- Tear off one of the dust removal tape strips.
- Use the dust removal tape to clean off the fine dust.

## Step 4

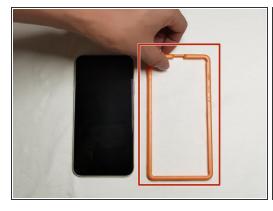






- Put the auxiliary tool on your phone.
- Push down so that the auxiliary tool is firmly attached to the phone.
- This step is not necessary, and it doesn't matter if you don't have it. The auxiliary tool is just to assist you place the screen protector straight.

#### Step 5

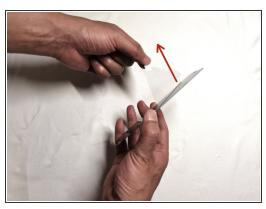





- Take out the screen protector. Tear off the release layer of the screen protector (the thinner side).
- Aim the holes of the screen protector at the holes of the auxiliary tool and then slowly lay the screen protector onto the screen.

### Step 6







 Wipe the screen surface around with a dry wipe to make the screen protector fit the phone screen better and lay flat.

## Step 7



Pull off the the auxiliary tool with your fingers.

To reassemble your device, follow these instructions in reverse order.