


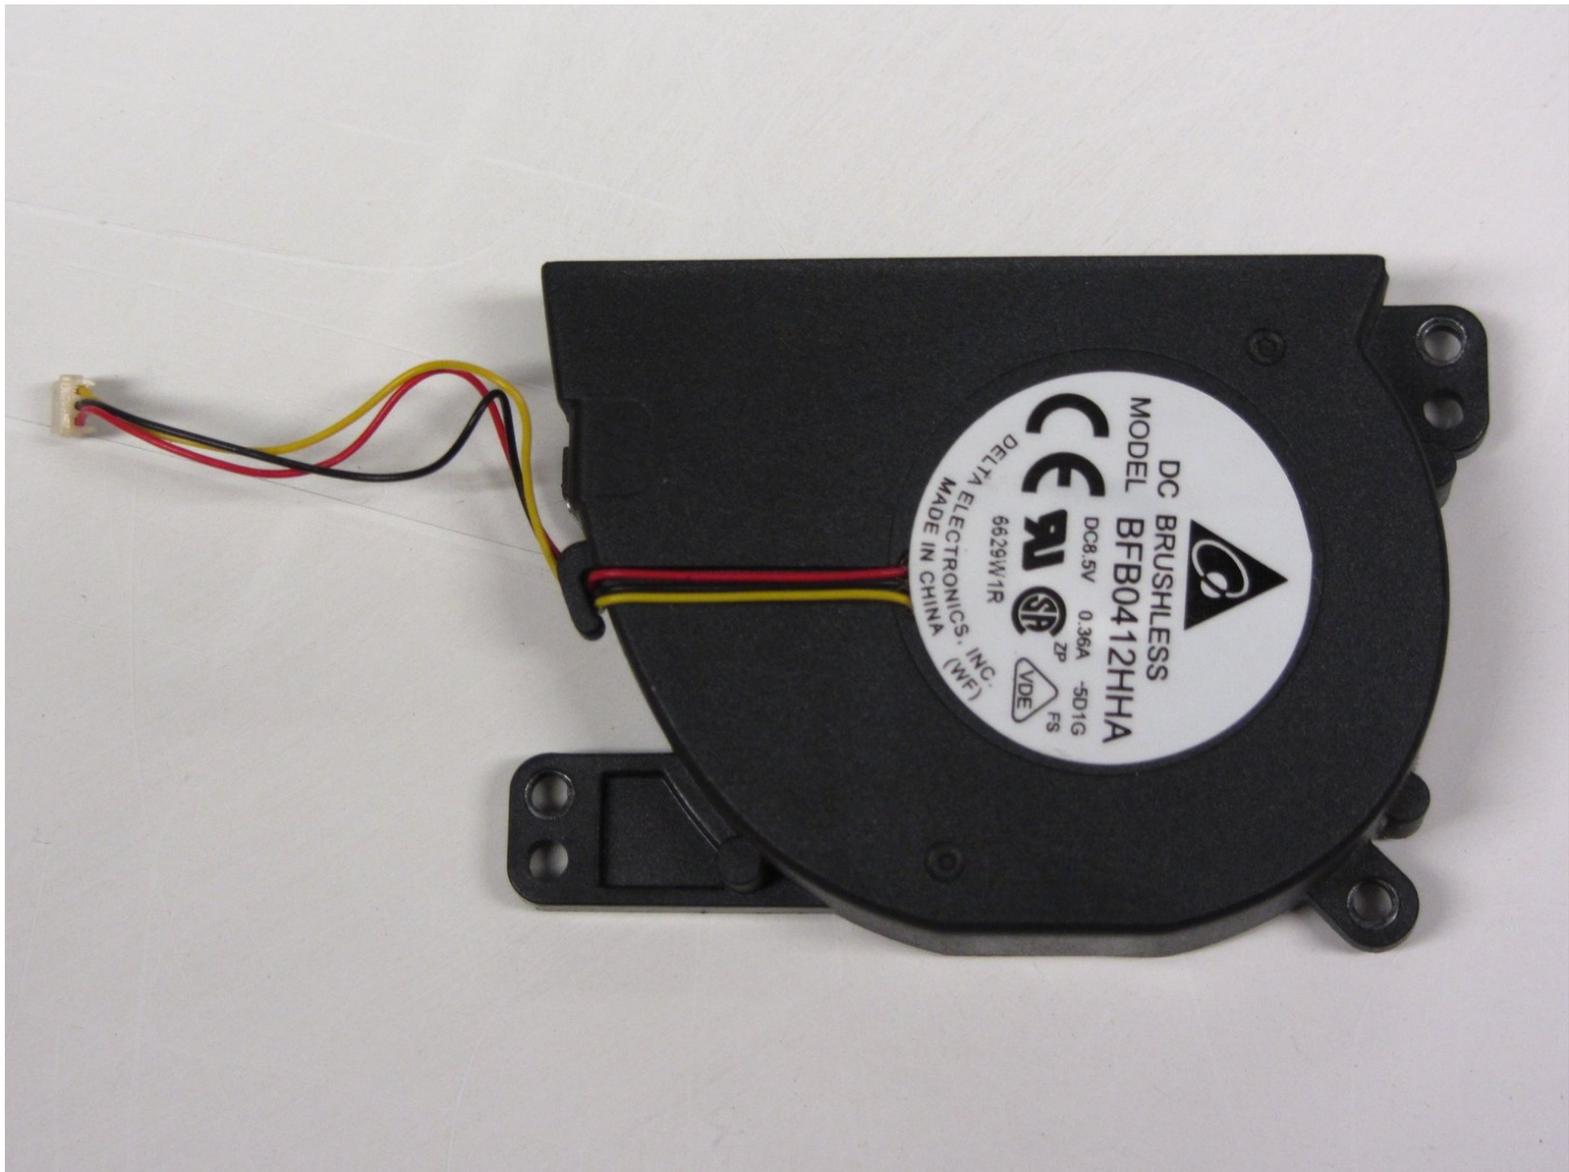

PlayStation 2 Slimline Fan Replacement

This guide will show you how to locate and replace the fan in the PlayStation 2 Slimline.

Written By: Thomas Sullivan



INTRODUCTION

This guide will show you how to locate and replace the fan in the PlayStation 2 Slimline.

TOOLS:



- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Outer Shell




- Disconnect all cables from the console and flip the unit over to reveal its base.

Step 2

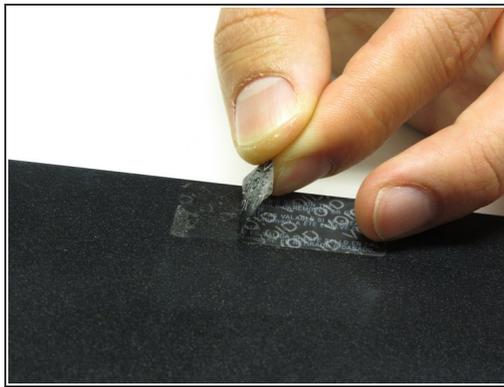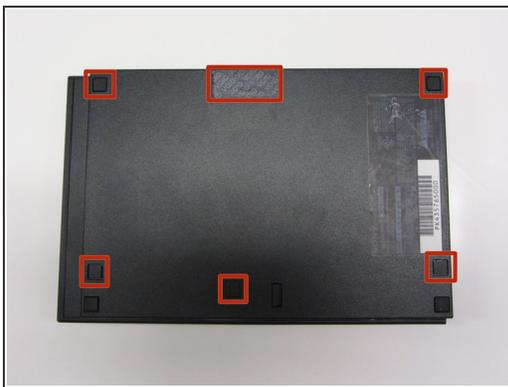


- Locate the 6 feet on the base of the unit. Pry them off using a spudger to reveal the screws.
- ⓘ Note: One of the feet is located under the sticker shown in the photo. Removing this sticker will void any warranty with Sony.

Step 3

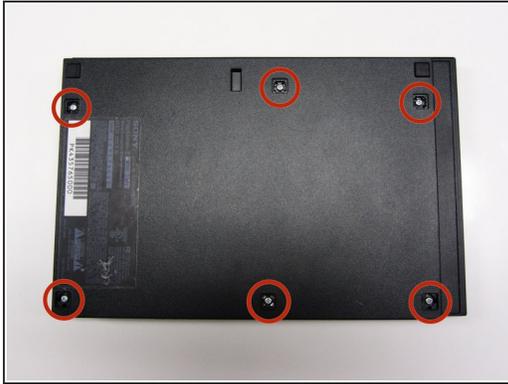

- Remove all six 4.0 mm screws from the base of the unit using a #1 Phillips screwdriver.



Step 4

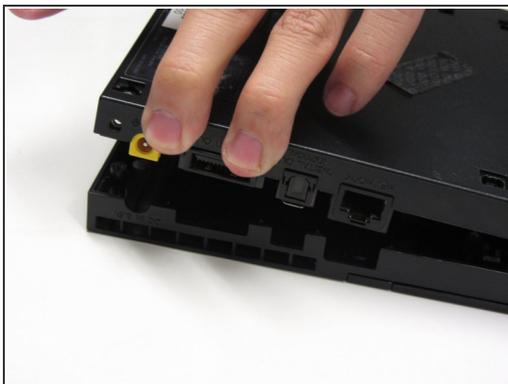

- Starting at the corner at which the power and Ethernet ports are located, pry open the outer shell using a spudger and continue around the entire unit.



i Note: You may use your hands for additional force to separate the two pieces of the outer shell.

Step 5 — Fan

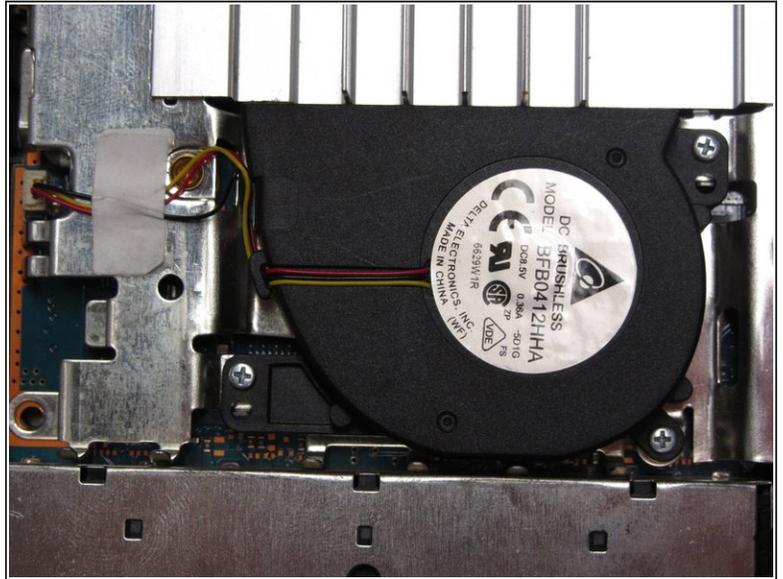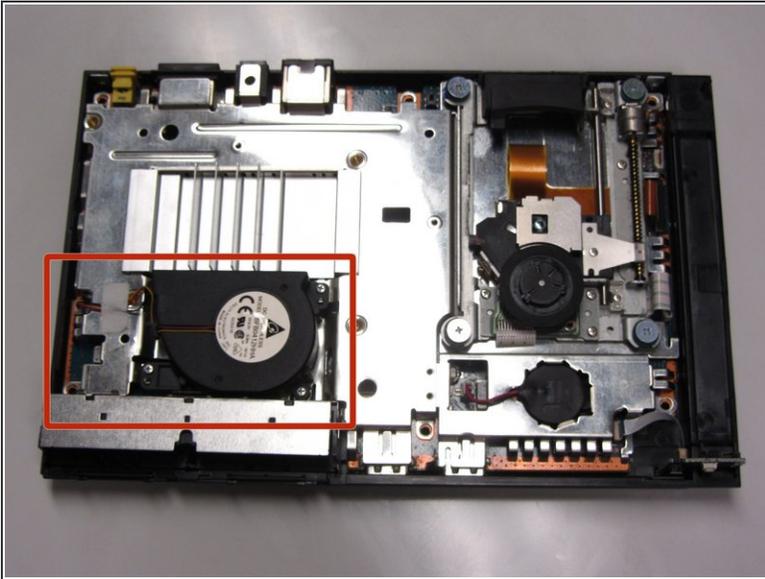


- Locate the fan at the front, left section of the unit.

Step 6

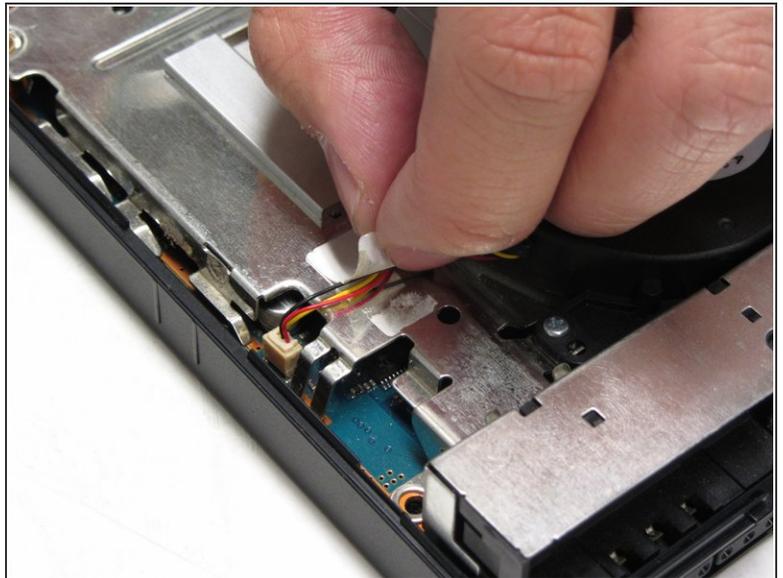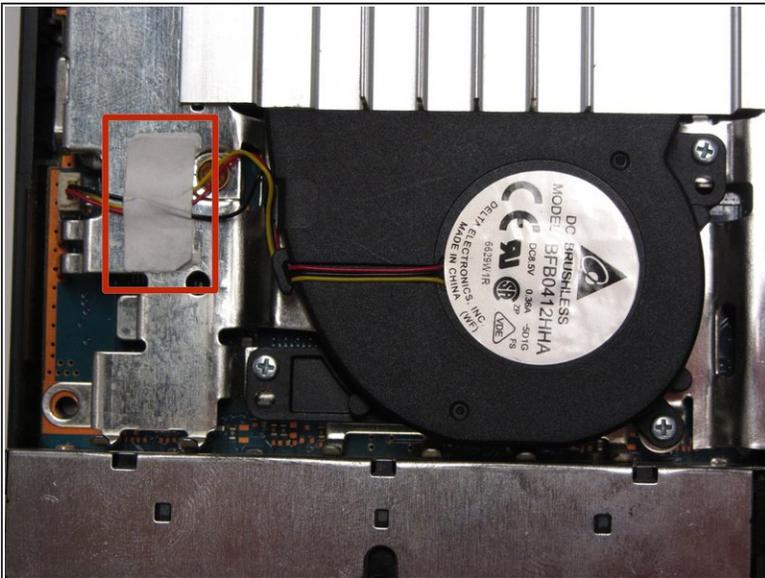


- Peel off the sticker holding the power cords to the unit.

Step 7

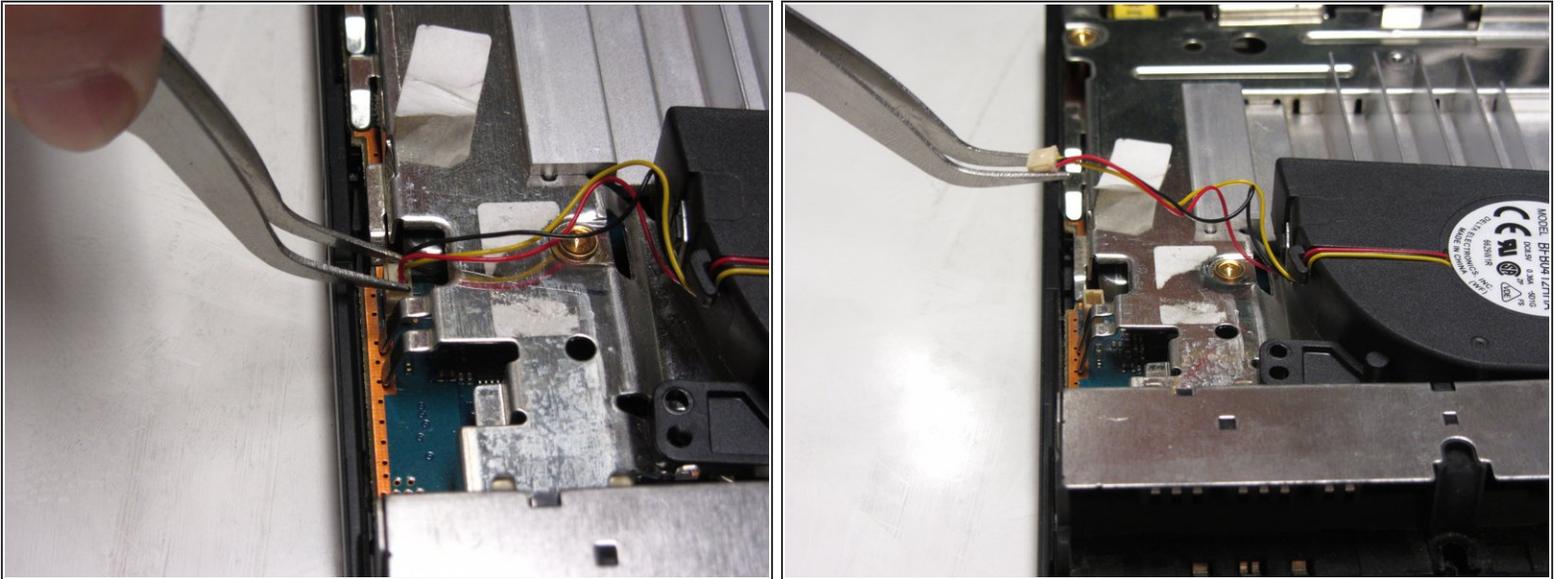

- Lift the connector from the motherboard with a pair of tweezers using a firm, upward force.

Step 8

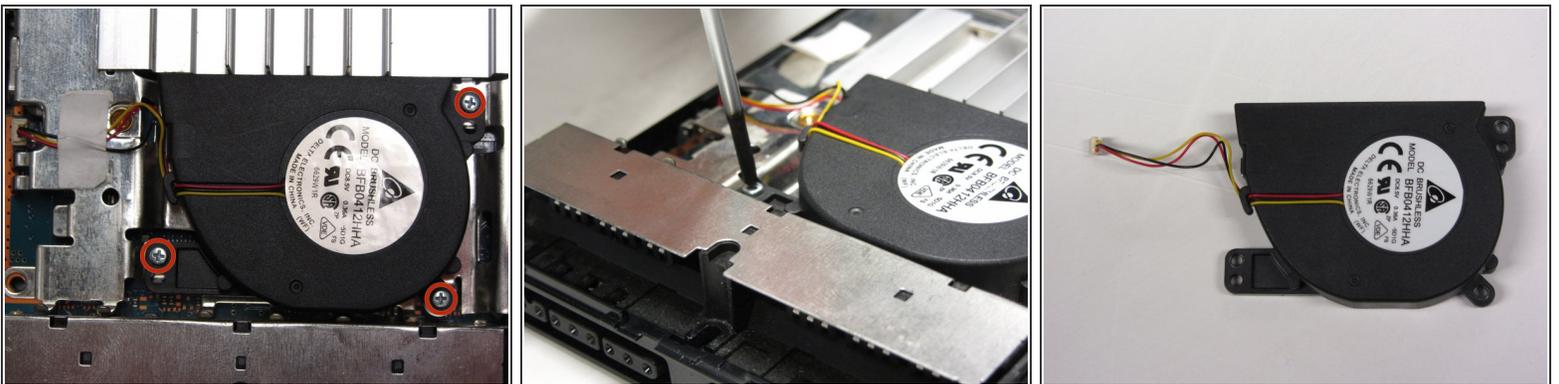

- Remove all three 1.6 mm screws fastening the fan to the unit using a #1 Phillips screwdriver.
- Gently lift and remove the fan from its compartment.

To reassemble your device, follow these instructions in reverse order.