



# Disassembling LG Vortex

The guide is designed specifically for the LG...

Written By: Jen



# INTRODUCTION

The guide is designed specifically for the LG Vortex phone. This guide gives detailed instructions on the removal of the back case and the face from the frame.

## TOOLS:

[Soft Cloth](#) (1)

[iFixit Opening Tool](#) (1)

[Phillips #00 Screwdriver](#) (1)

[Container](#) (1)



## Step 1 — Power down the Phone



- Power the phone off
- ⓘ The power button is located on top of the phone




## Step 2 — Remove the Back Cover

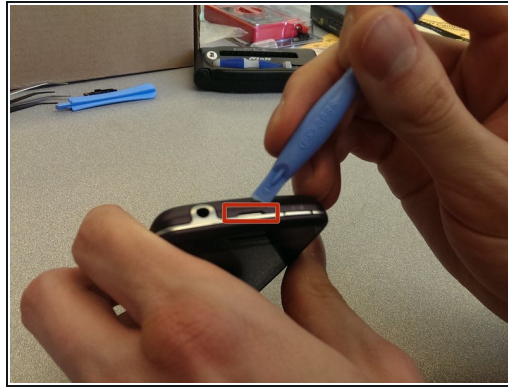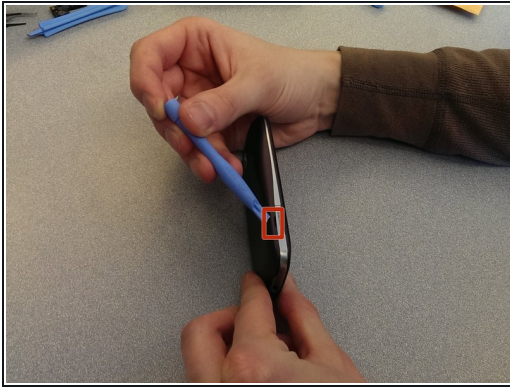

- Find the two thumbnail ridges on the side and top of the phone. One is next to the micro SD slot and the other at the top of the phone
- Once the ridges are located, use the blue plastic opening tool to pry the back cover away from the rest of the phone.
- Remove the back cover and set it to the side.

## Step 3

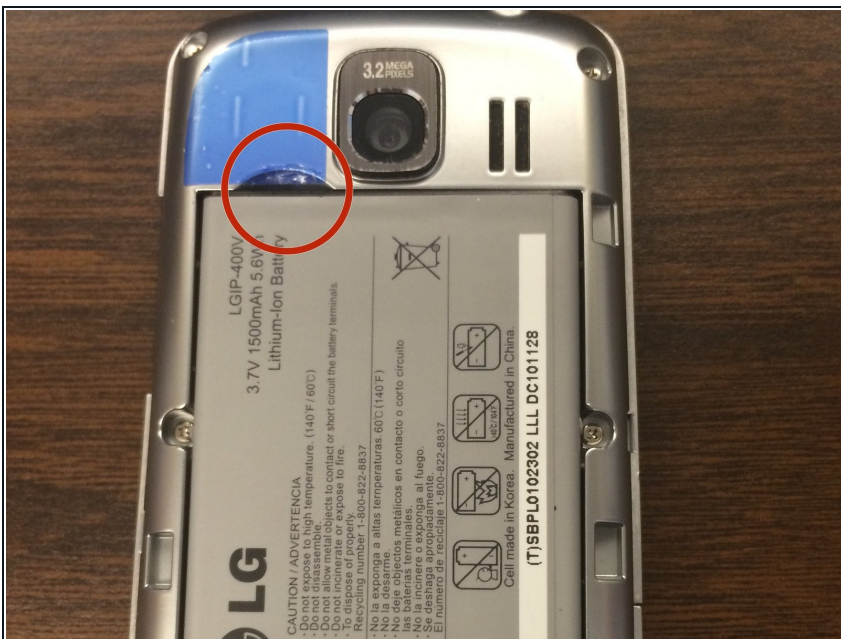



- Remove the battery using the blue plastic opening tool.
- There is a small thumbnail ridge at the top left corner of the battery for ease of removal.
- Put the battery aside.

## Step 4 — Unscrew the Back Frame



- ① All screws are the same size screwdriver head #00
- Use the precision screwdriver to remove the 6 screws along the edges of the phone.
  - There are 2 screws at the top in each corner, 2 in the middle on the sides, and 2 in the bottom corners.
- ① Place the screws in a container to ensure they aren't lost.

## Step 5 — Remove the Back Frame

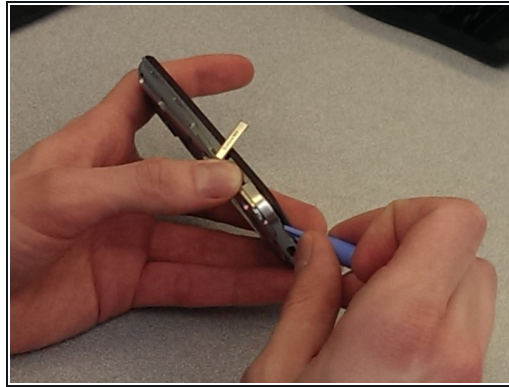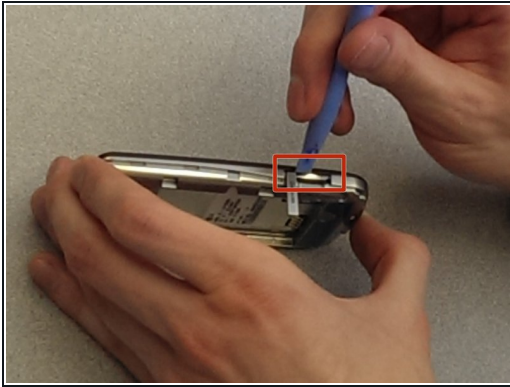

- Use the blue plastic opening tool to remove the back frame from the rest of the phone.
- Pry at the micro SD slot. Push the cover for the SD slot away from the front of the phone and pry the back frame away from the rest of the phone.
- Pry your way around the entire phone to separate the face from the frame.

---

To reassemble your device, follow these instructions in reverse order.