




Imation Superdisk USB Drive Disc Drive Casing Replacement

Written By: Caitlin Horwatt

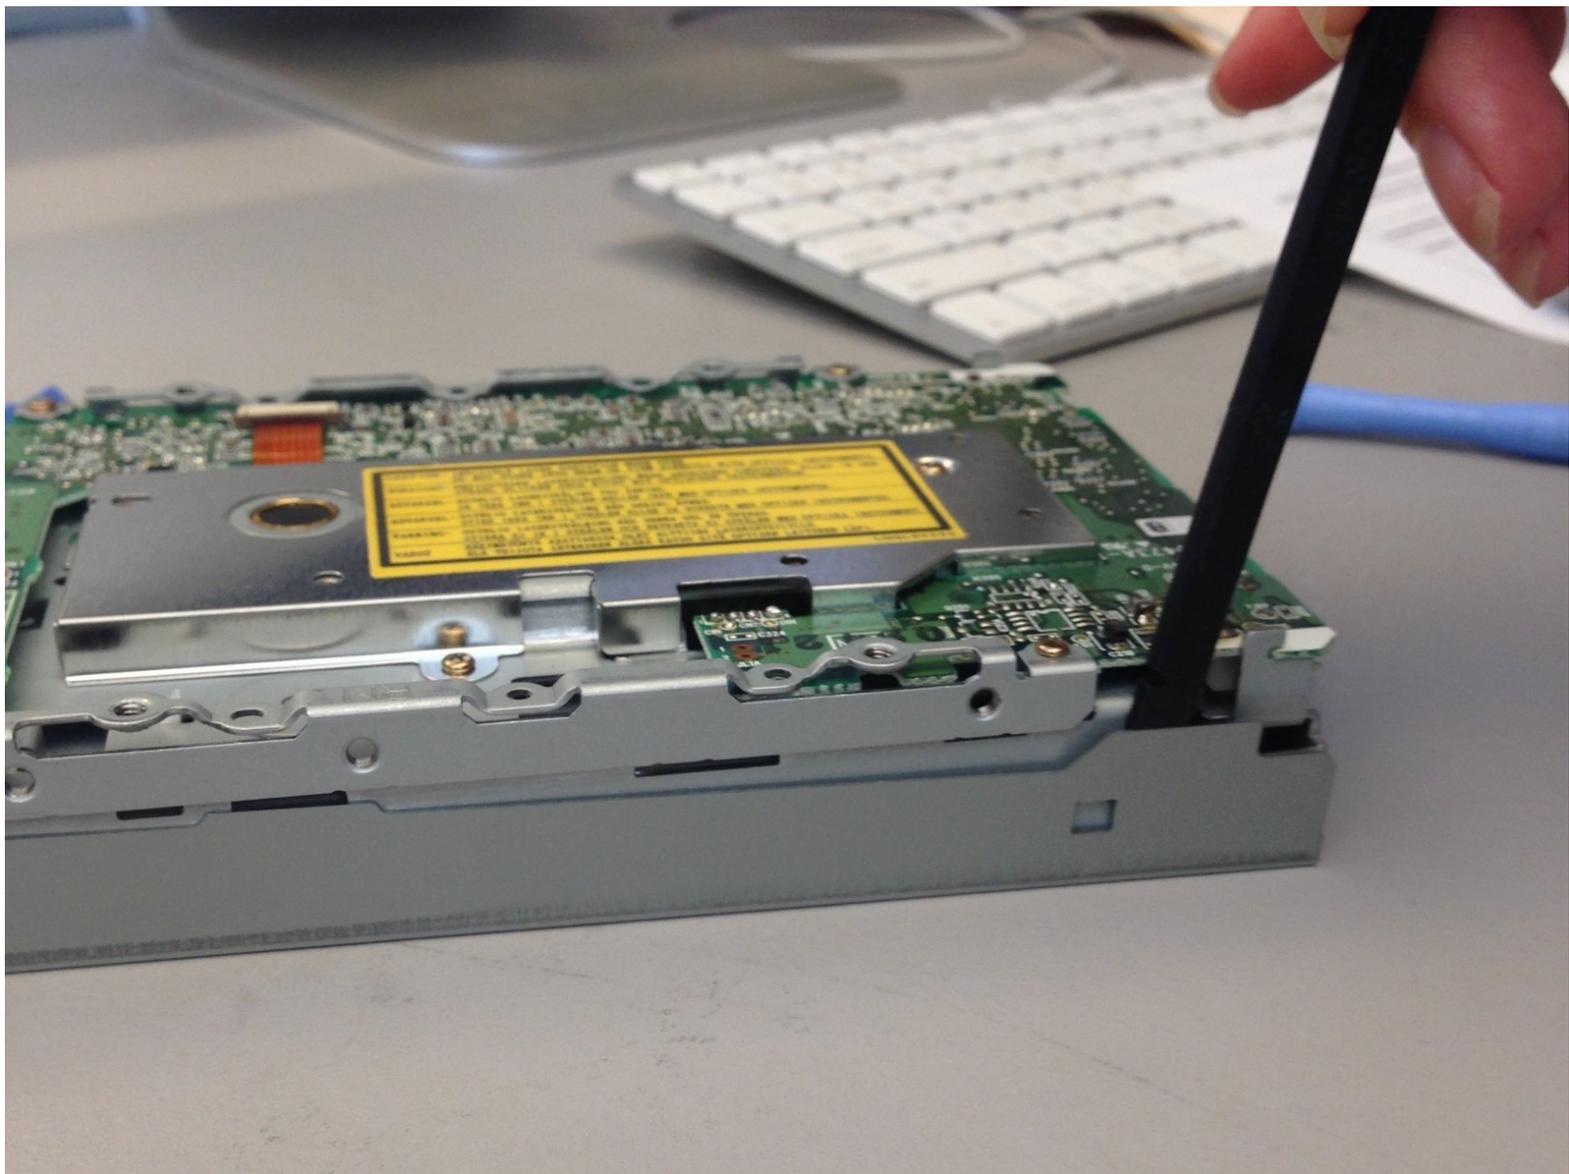

 **TOOLS:**


- [Spudger](#) (1)
-

Step 1 — Plastic Housing



- Flip the device over so the bottom is facing up.
- You will know it is the bottom because there will be six silver screws visible.

Step 2

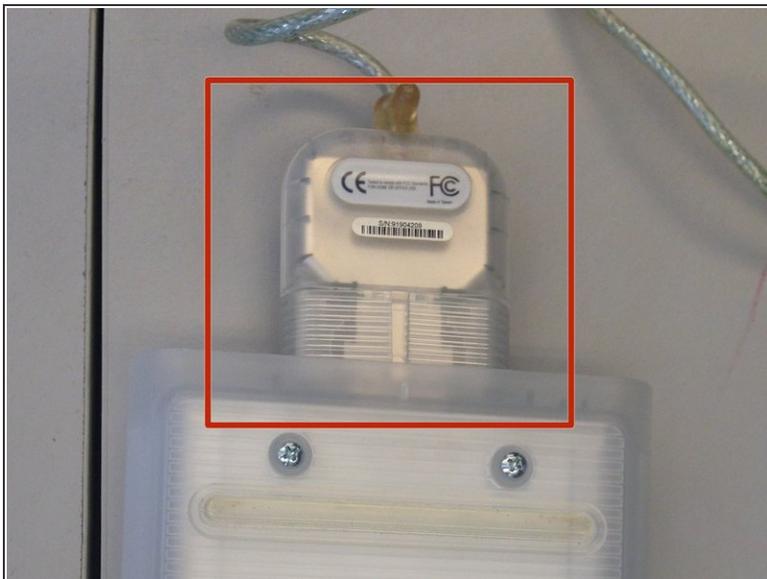

- Remove the USB converter device by gently pulling it out.


⚠ Do not pull the converter device out by the cord.

Step 3




- Remove the six silver screws using a small Phillips head screwdriver.

Step 4

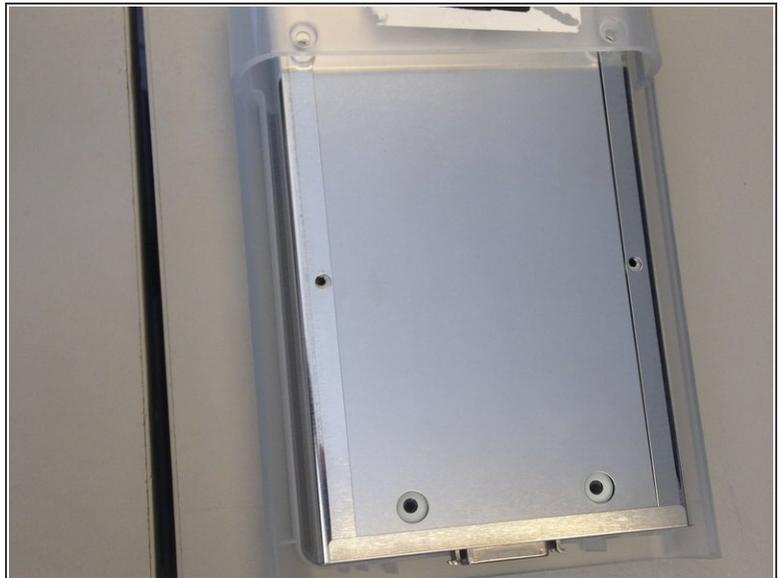


- Slide the bottom plastic panel of the shell down so it is free of the end cap and the top panel.
- Lift panel free of device.

Step 5

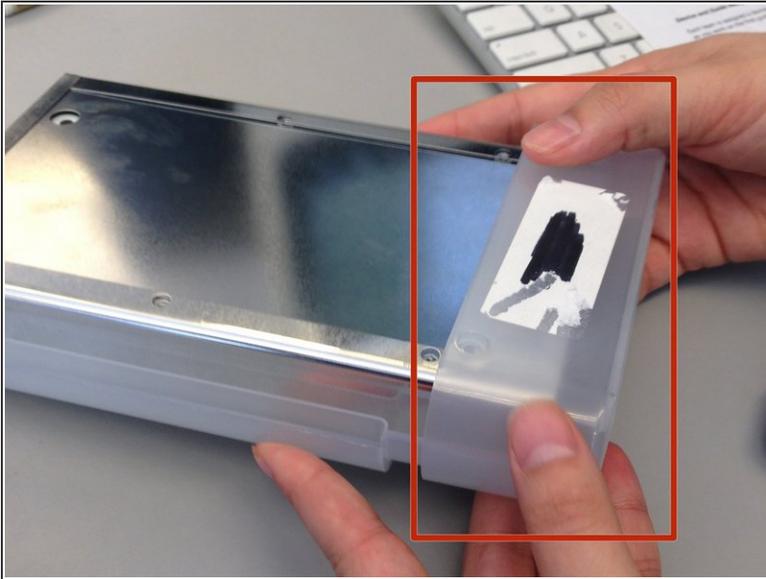

- Remove the plastic end cap by sliding it forward, freeing from the rest of the device.
- You can identify the end cap by noting the label "SuperDisk Drive" above where you would insert a floppy disk.

Step 6

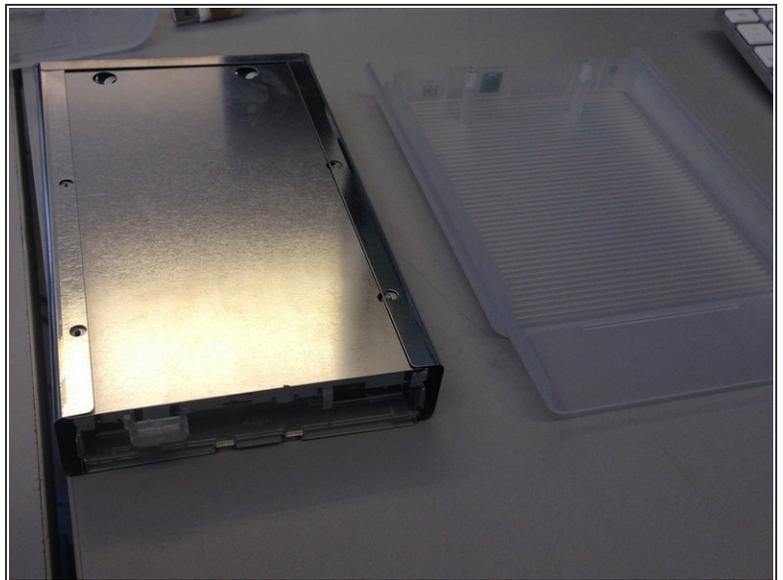


- Slide the metal housing out of the plastic shell.

Step 7 — Metal Casing




- Slide metal panel out of the metal casing.

Step 8

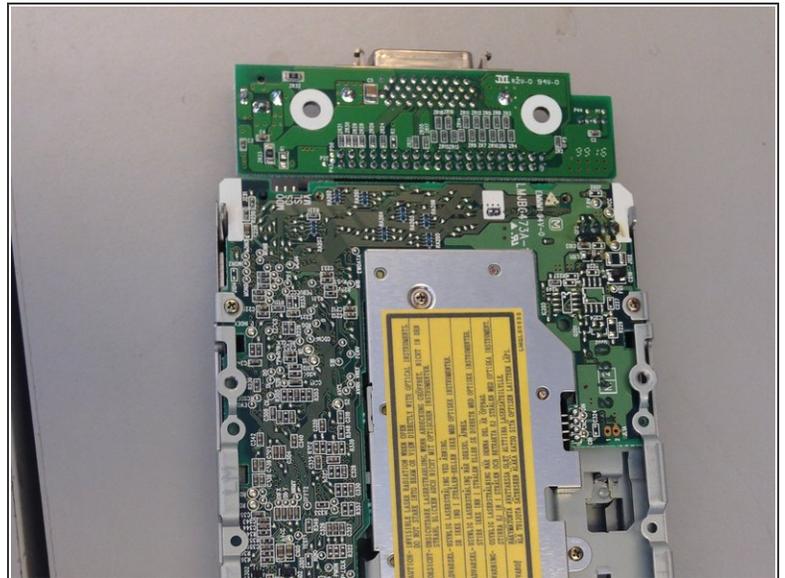



- Slide disk drive out of metal casing.

Step 9 — Daughter Board

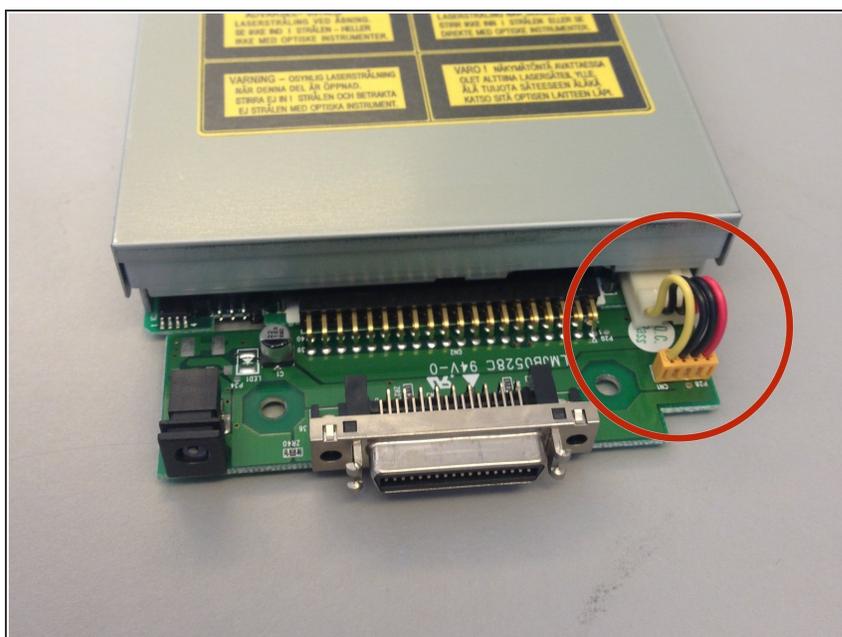


- Flip the disk drive over so the the plug on the daughter board is visible.

Step 10

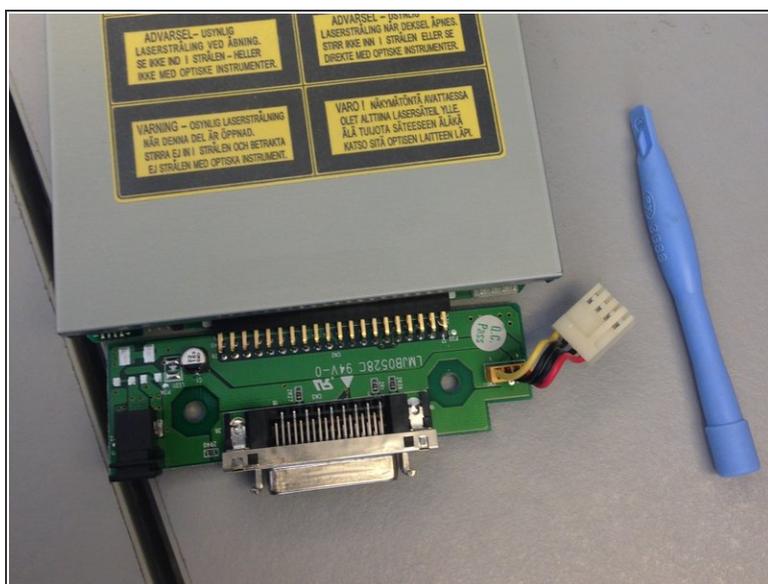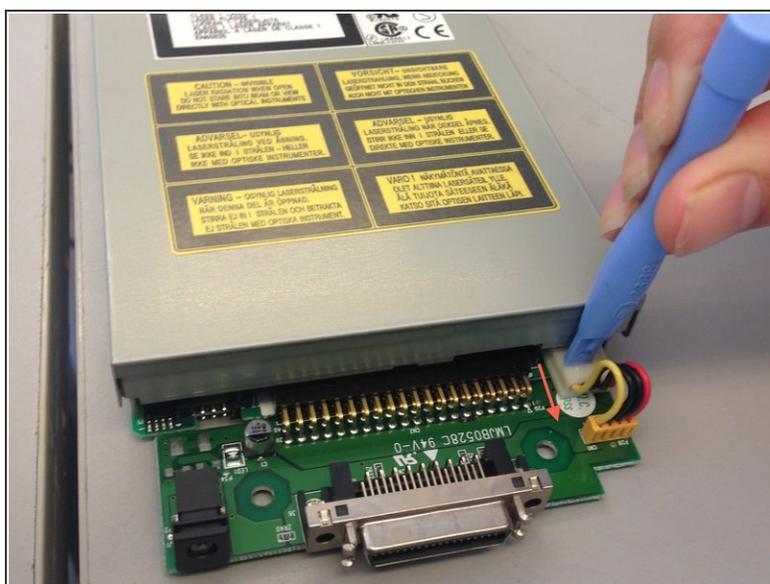


- Using an iPod opener put pressure on the white plug and pull backwards until the daughter board unplugs from the main unit.

Step 11

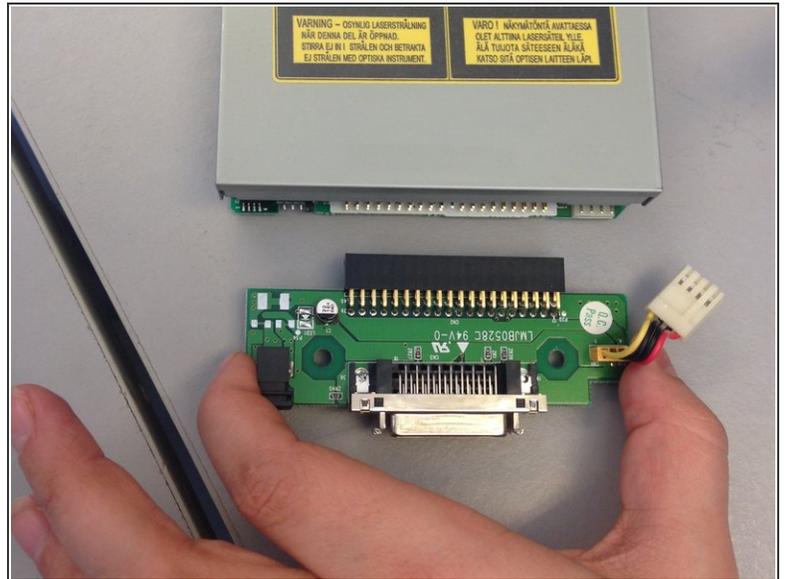


- Gently pull on the daughter board until it separates from the device.

Step 12 — Disc Drive Casing

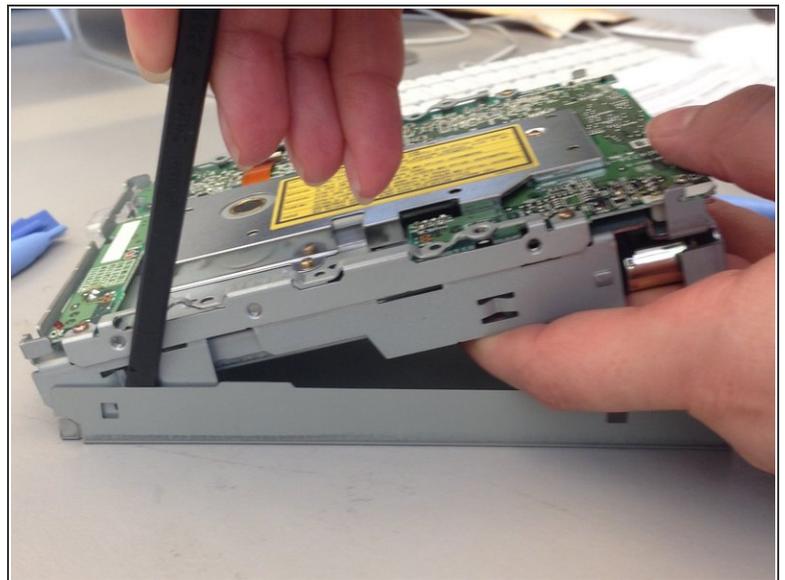

- Place a **plastic spudger** in between the disk drive and its metal casing. Use the spudger as a lever until the metal casing detaches from the disk drive.
- ⓘ You may have to use the plastic spudger in several spots along the metal casing.

Step 13

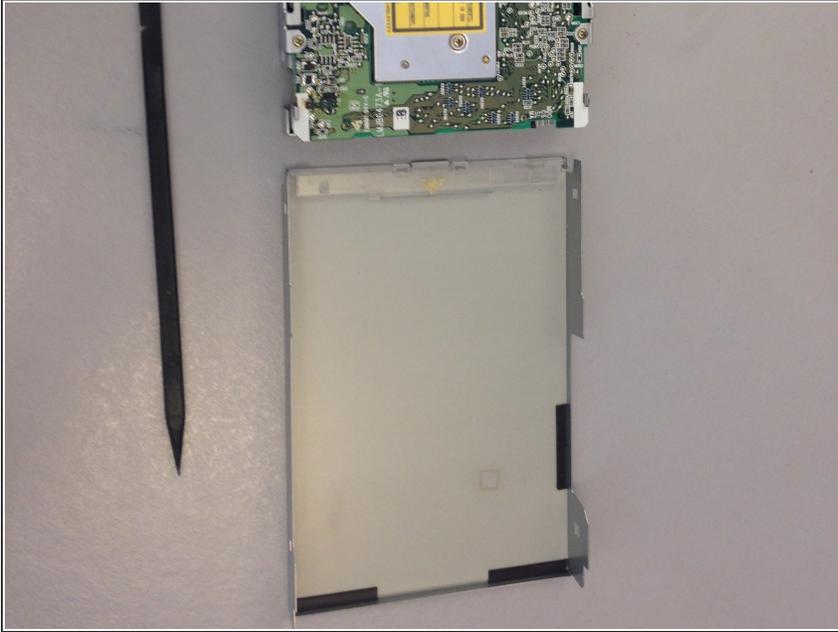

- lift the disk drive completely out of the metal casing and set it aside.

To reassemble your device, follow these instructions in reverse order.