




iPod Touch 4th Generation Blank Screen

This is a guide to try and short the battery if your device is dead after a screen repair or is not recognised by iTunes

Written By: con

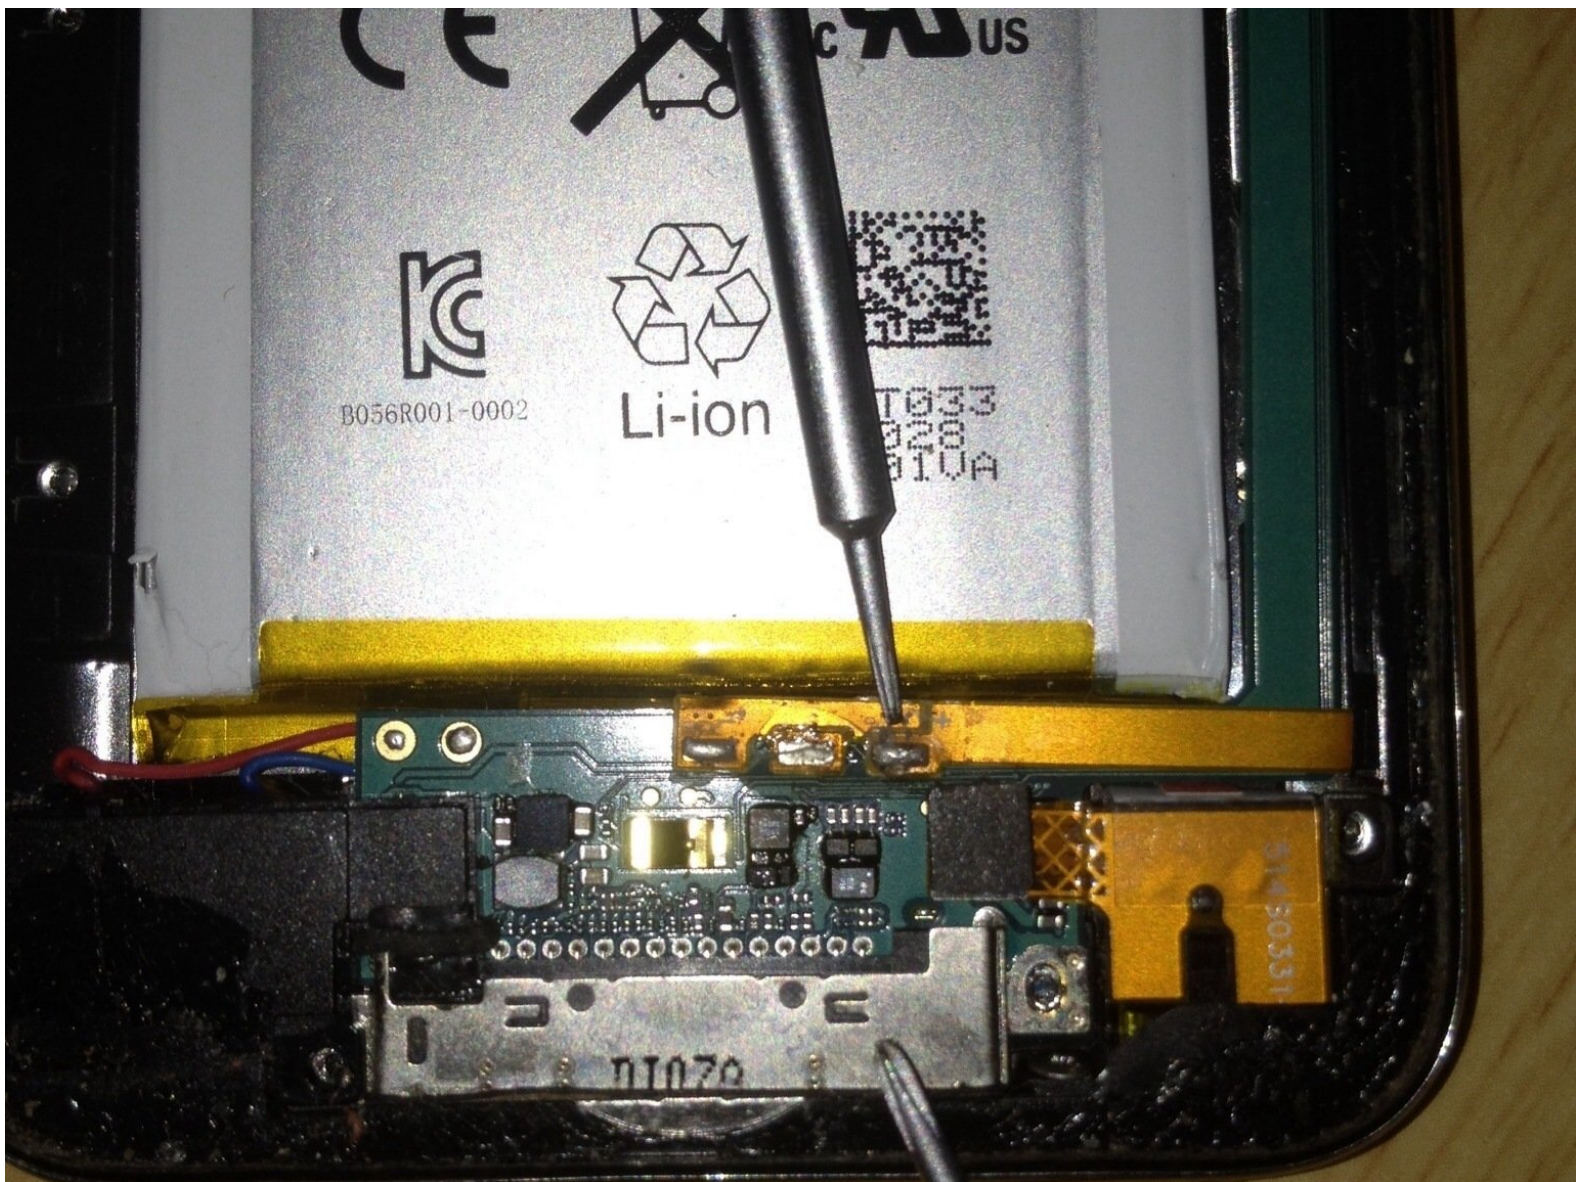

INTRODUCTION


WARNING: Batteries can be dangerous. When using this guide, exercise extreme caution to avoid injury.



TOOLS:

- [Pro Tech Toolkit](#) (1)
-

Step 1 — iPod Touch 4th Generation Blank Screen

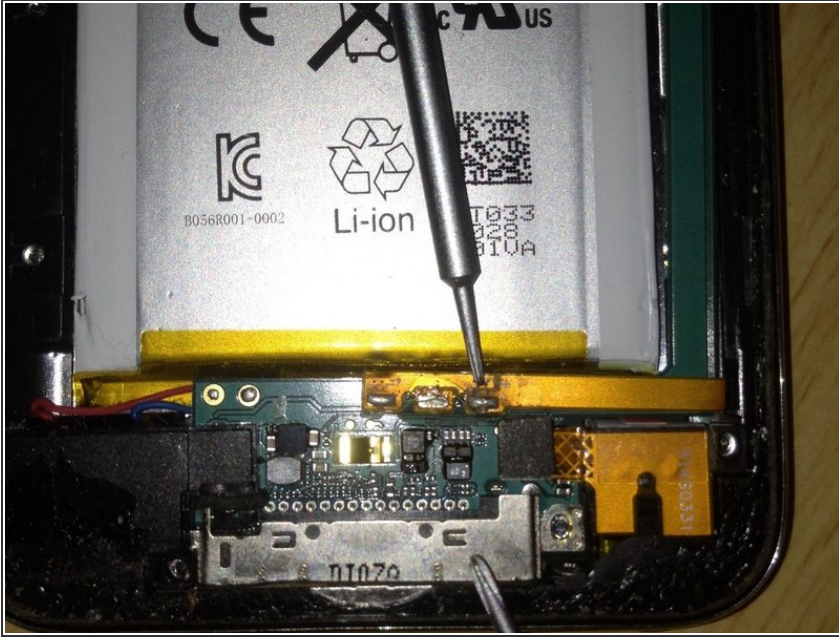

- Ground the the battery terminal indicated by the screwdriver.
- Ground the dock connector

Step 2



- Touch battery terminal 3 and the dock connector metal with the metal part of a screw driver.
- This should short the battery and restore the iPod.

Step 3



- Reattach the screen.
- Plug the iPod into a wall charger.
- Turn on the device.
 - The Apple sign should appear.

To reassemble your device, follow these instructions in reverse order.