



HP Pavilion DV2160BR Webcam Replacement

To replace a broken webcam in a HP Pavilion DV2160BR.

Written By: Brandon MacDonald



 **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery



- Start with the bottom of the laptop facing up.

Step 2



- Locate the battery compartment at the rear of the device.
- There is a slider button located under the left side of the battery compartment. It is indicated by a battery symbol. Move the slider to the left and lift the battery out.

Step 3 — Webcam



- Flip over the laptop and open it.

Step 4




- Remove the 6 rubber screw covers from the screen panel using the plastic opener tools by applying firm pressure to the edges.
 - ⓘ The 4 screw covers on top are attached by an adhesive backing.
 - ⓘ The 2 screw covers on the bottom are rubber plugs.

Step 5



- Remove the 4 M2.5x4-Lg #0 Phillips screws from the top of the screen panel.
- Remove the 2 M2.5x8-Lg #1 Phillips screws from the bottom of the screen panel.

Step 6

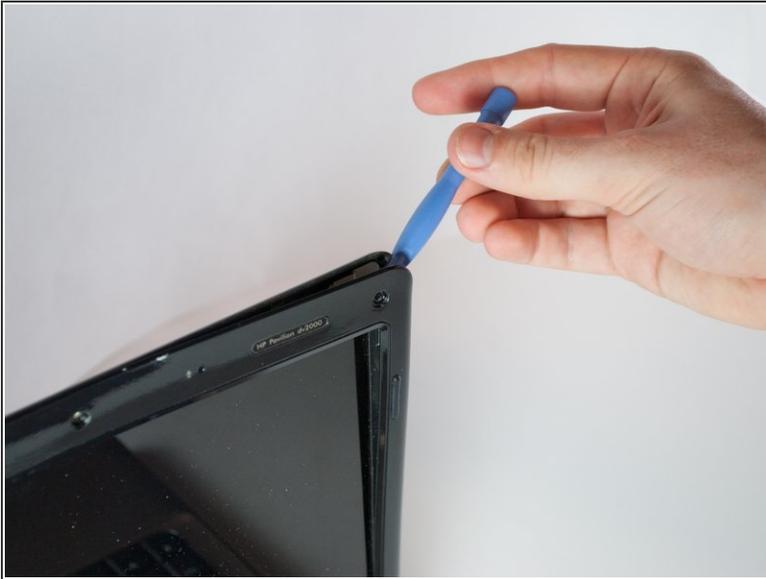


- Slide a plastic opener tool along the outside edges of the front screen panel to start to separate it from the back screen panel.
 - ⓘ You may need to apply some firm pressure to get it started.
- Once it has started to separate, gently pull off the screen panel by working along the edge, and set it aside.

Step 7




- Locate the screw on the left side of the cameras mounting bracket.
- Remove the M2.5x4-Lg #0 Phillips screw

Step 8

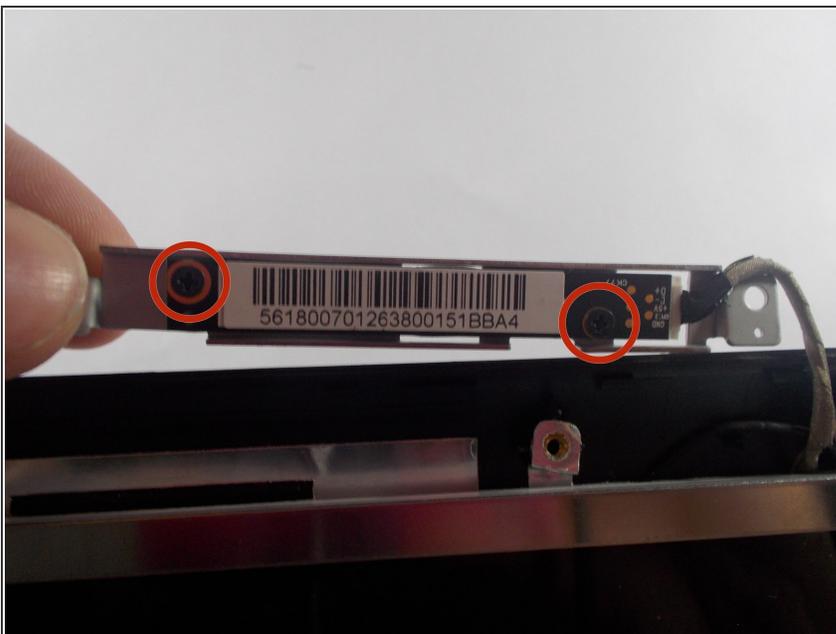

- Pull the camera from the back screen panel and rotate it so you are looking at the back.
- Remove the 2 M2x3-Lg #00 Phillips screws and place the mounting bracket aside.

Step 9

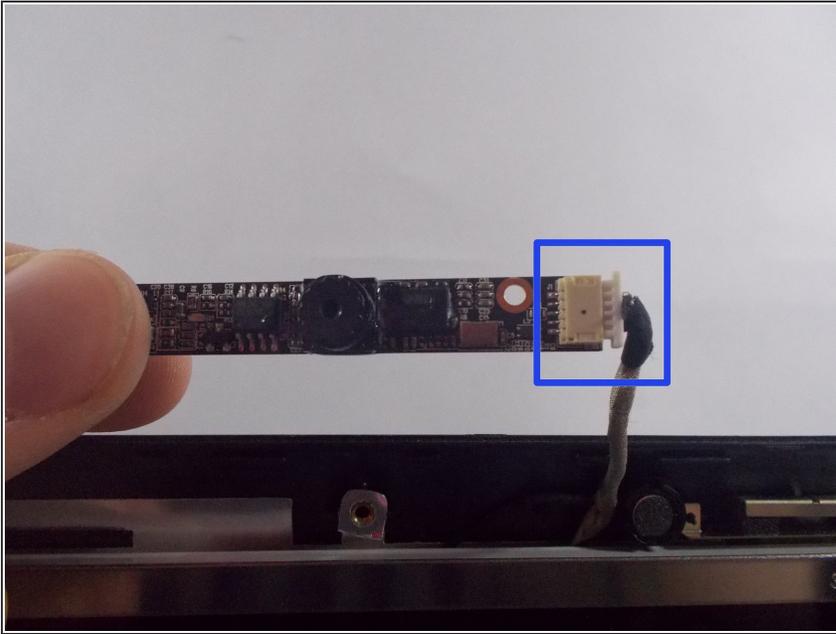

- Disconnect the cable on the right side of the camera board by pulling firmly on the connector.

To reassemble your device, follow these instructions in reverse order.