


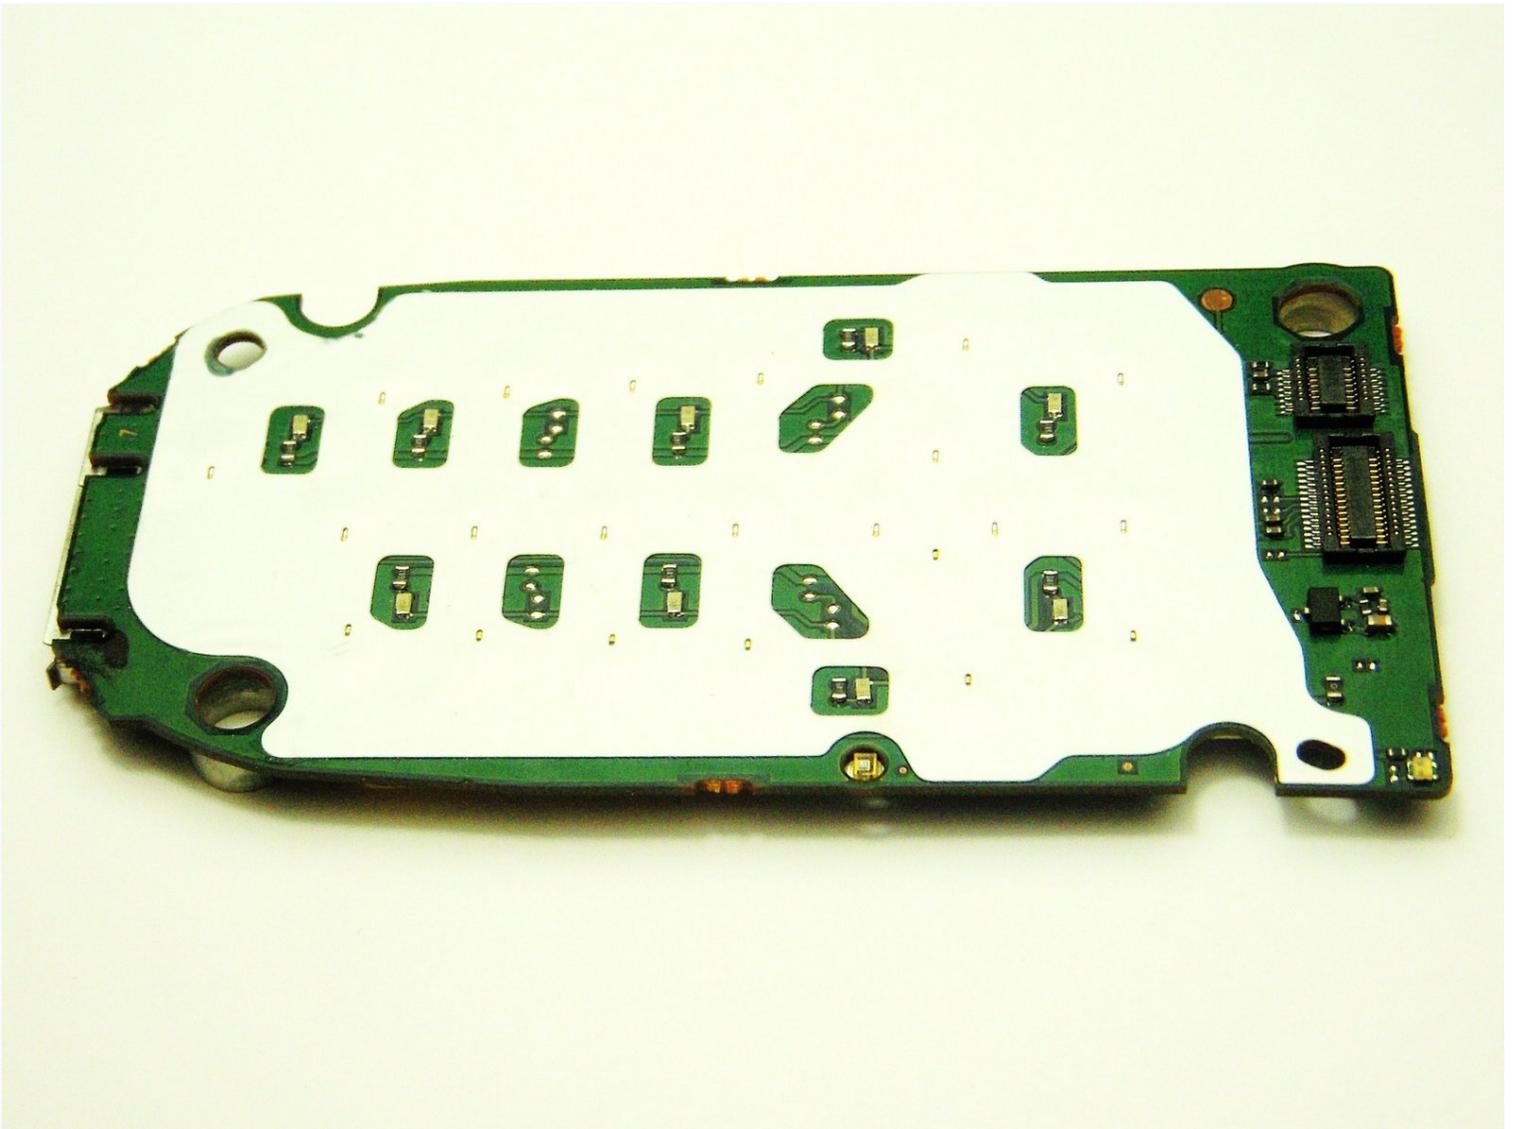

# Disassembling Motorola i90c Keypad

Today we are going to take you to a step by...

Written By: Jorge



# INTRODUCTION

Today we are going to take you to a step by step guide on how to install a new keypad.

## TOOLS:

[Tweezers](#) (1)

[iFixit Opening Tool](#) (1)

[TR9 Torx Security Screwdriver](#) (1)

## PARTS:

[Motorola Touchpad](#) (1)

### Step 1 — Battery



- Slide the notch downward while pulling the back cover off to remove it.

## Step 2



- Use your fingers to push the battery upward from the bottom.
- Lift upwards to remove the battery.

## Step 3 — Antenna



- Unscrew the antenna in a counter-clockwise fashion.
- Remove the aluminum cover.

## Step 4 — Disassembling Motorola i90c Internal Backplate



- Unscrew the 3 screws shown.
- Lift up the right part of the Nextel logo and unscrew the screw underneath.

## Step 5



**⚠ DO NOT force the cover off as it could damage the ribbon cable!**


- Gently lift the back cover off.

## Step 6




- Carefully pry off the connection between the headphone jack and logic board.

## Step 7 — Logic Board

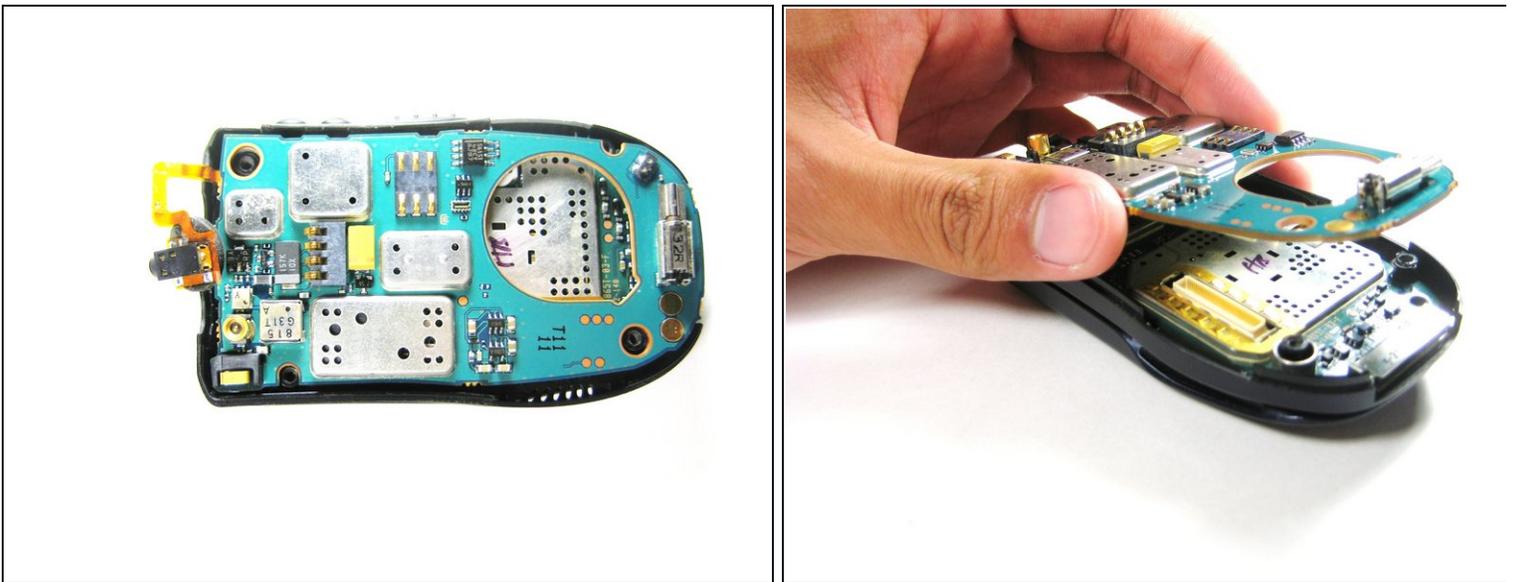

- Lift the first logic board off of the rest of the device.


## Step 8

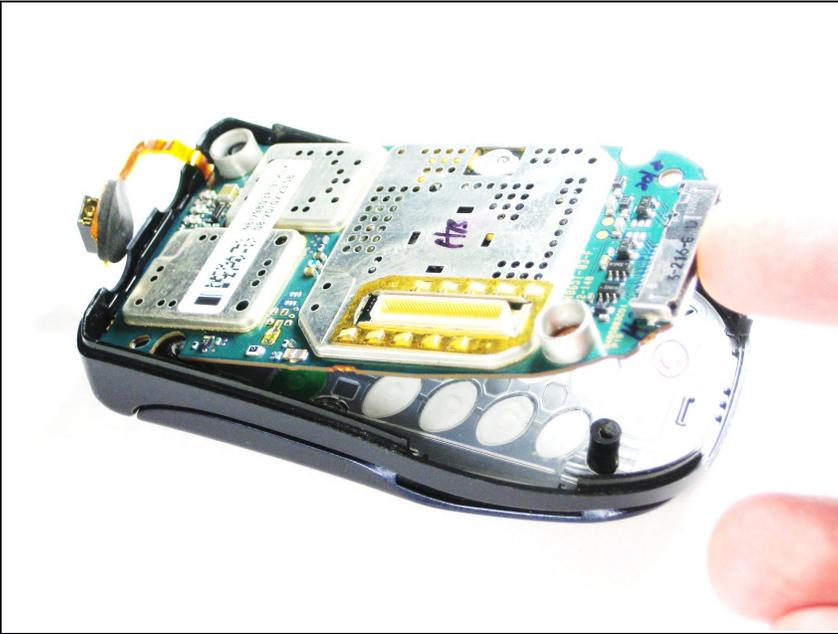

- Gently lift the second logic board from the rest of the device.


**⚠ DO NOT force the board straight off as it could damage the ribbon cable!**

## Step 9

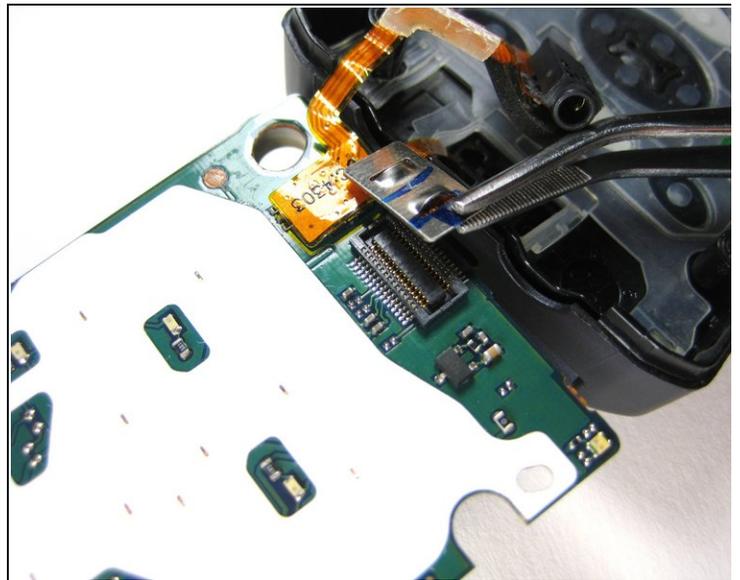

- Using tweezers, carefully pull off the connector shown.

## Step 10 — Keypad

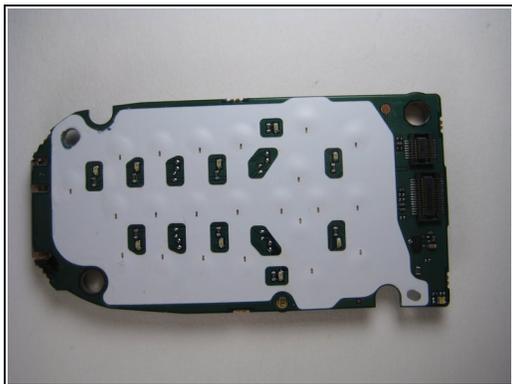

- Remove the keypad buttons off the front cover of the phone.

To reassemble your device, follow these instructions in reverse order.