




HP Pavilion dv7-1285dx Back Plate Replacement

This guide will provide instructions for a user to remove the device back plate, which allows the user access to many other device parts.

Written By: Chris Apple

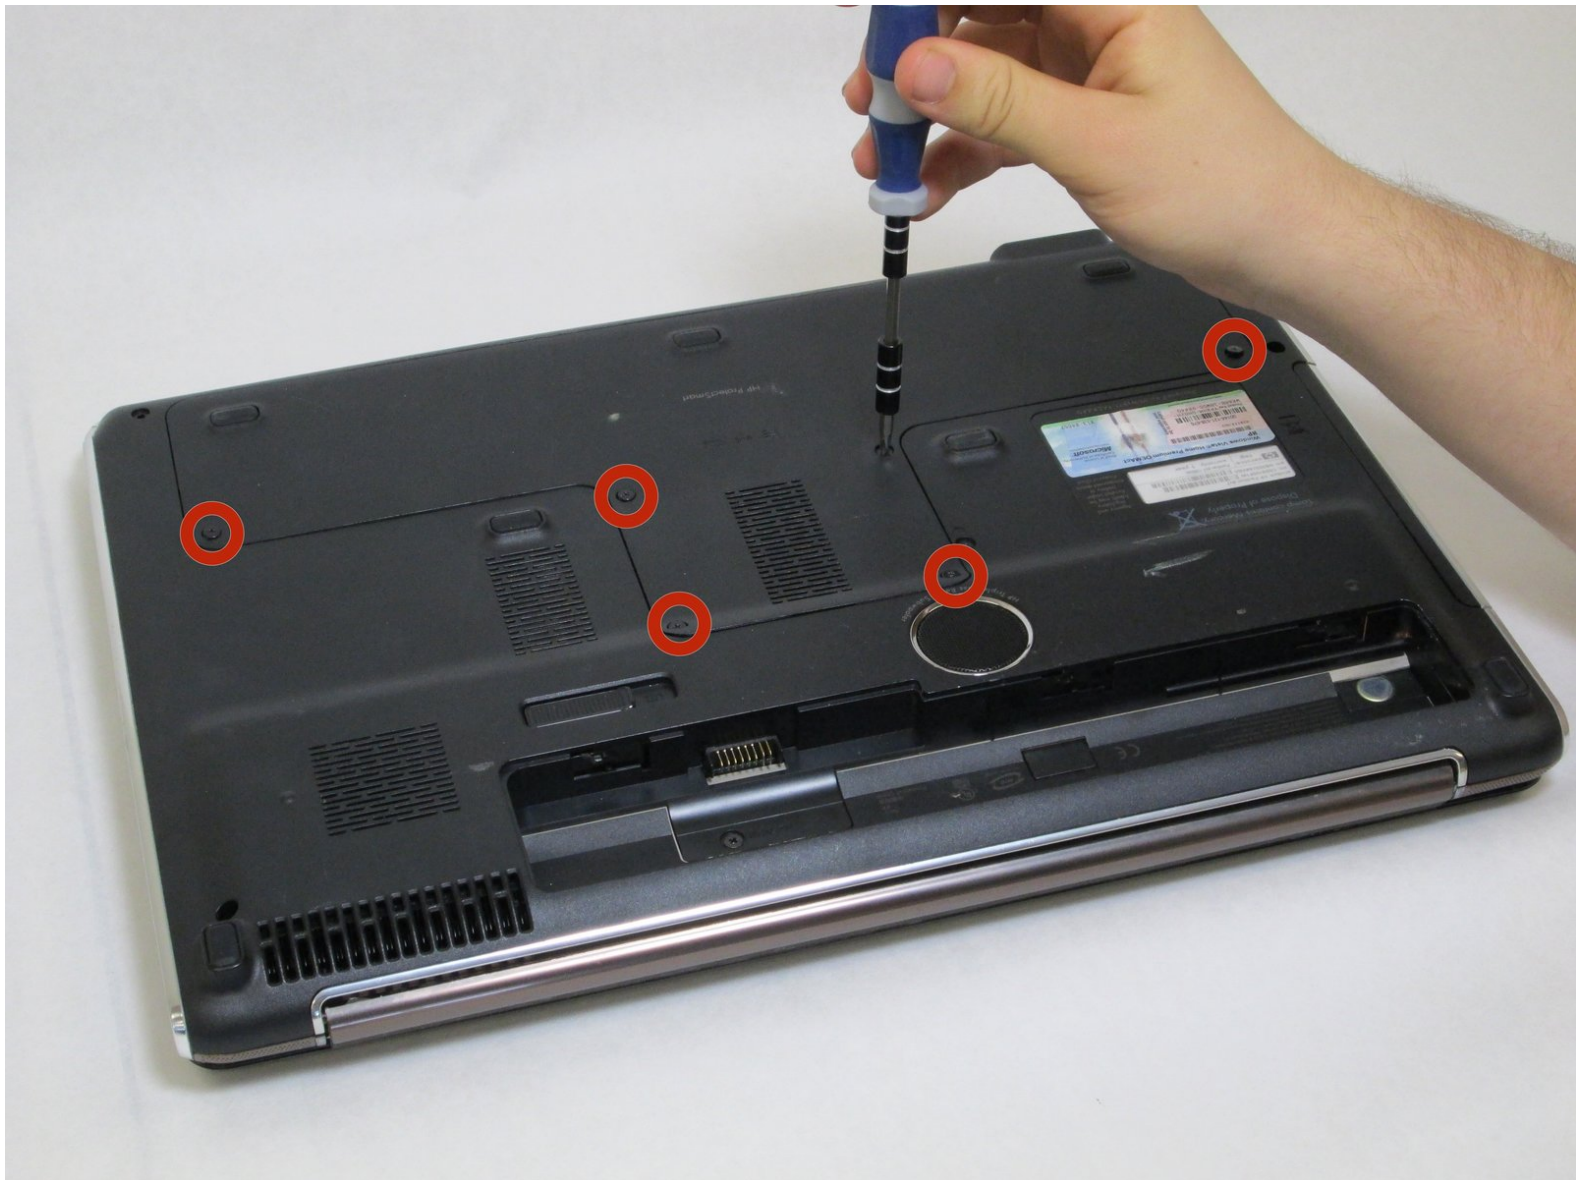

INTRODUCTION

The guide will show you how to remove the device back plate.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Ensure the device is powered down and unplugged.
- Turn the device upside down with the battery compartment facing you.
- Slide the black slider to the right and lift the battery out of its compartment.

Step 2 — Back Plate

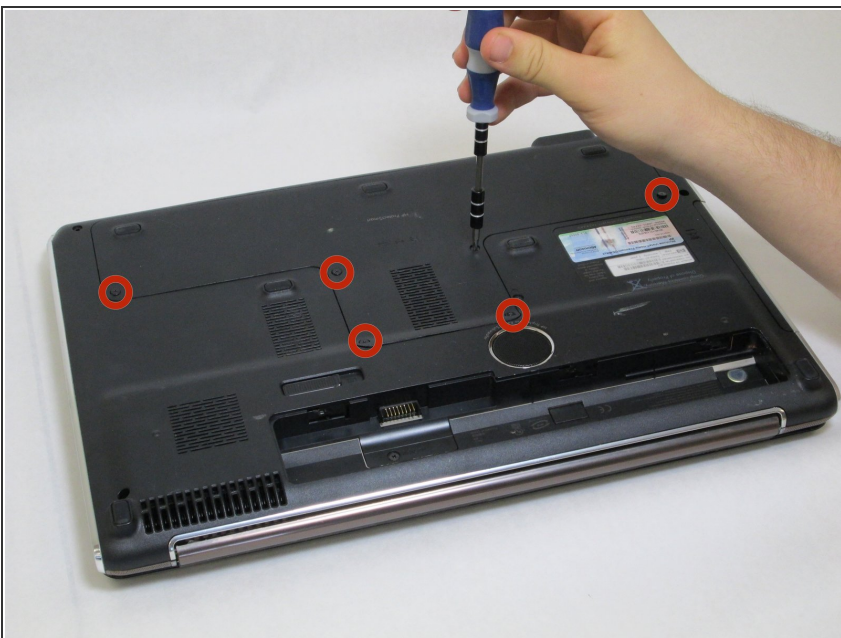

- Locate and remove the six Phillips PM2.5×7.0 screws around the perimeter of the back plate.
- ⓘ These screws do not completely detach from the device when unscrewed.

Step 3



- Use the plastic opening tool to lift up the back plate and set it aside.

To reassemble your device, follow these instructions in reverse order.