




# Lenovo IdeaTab A2109 Digital Board Replacement

Replace the digital board in your Lenovo IdeaTab A2109.

Written By: Brian

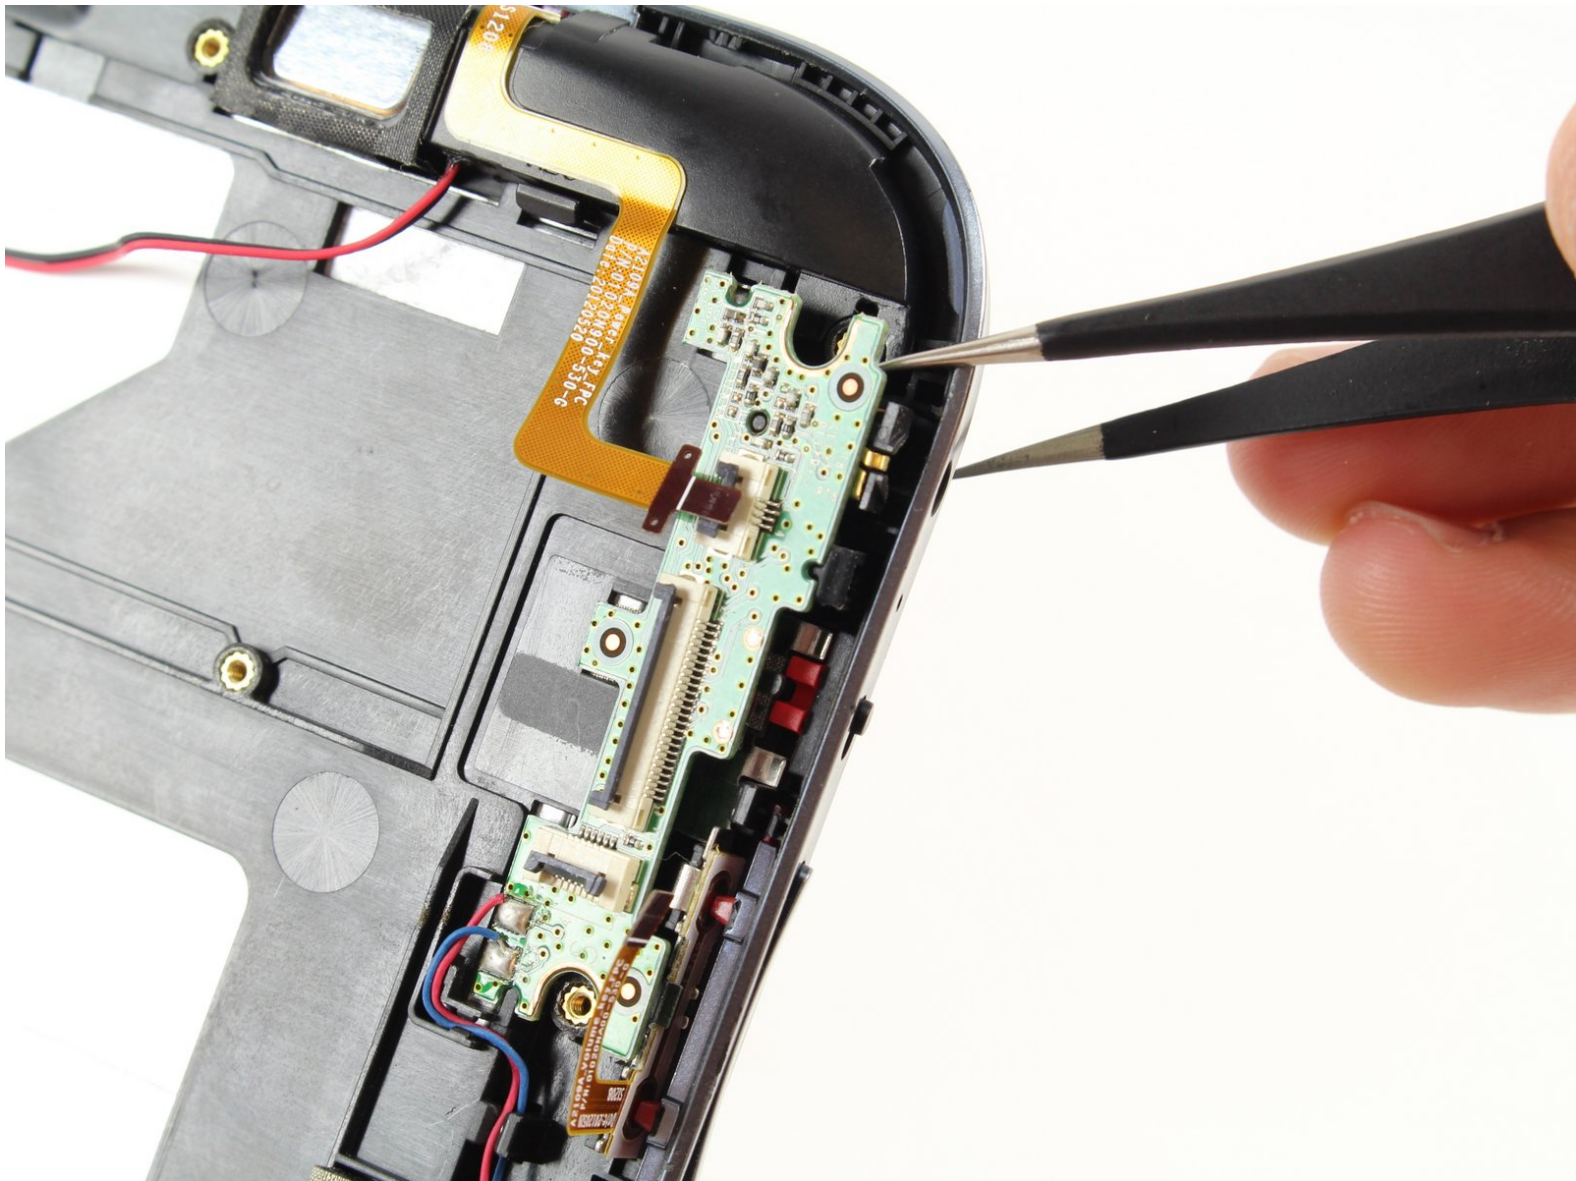

---

# INTRODUCTION

Use this guide to replace the digital board.



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Digital Board



- Look at the back of the tablet and locate the speakers on top of the rear cover.
- There is a smaller plastic cover that runs across the top of the device.
- Wedge the blue opening tool, under the middle of the cover as shown, then push up and the cover will pop off.

## Step 2



- Remove the following two screws:
  - M3.0 x 3.0 mm #00 phillips screws (black)




### Step 3





- Once it is unscrewed, remove the rear cover
  - This may take a little force to get off but with enough force it should pop right off
- Use a blue opening tool to pry it open
  - Slide the tool to one corner then grab another tool and slide it to the opposite corner
- Pull the cover up and it will come off

### Step 4

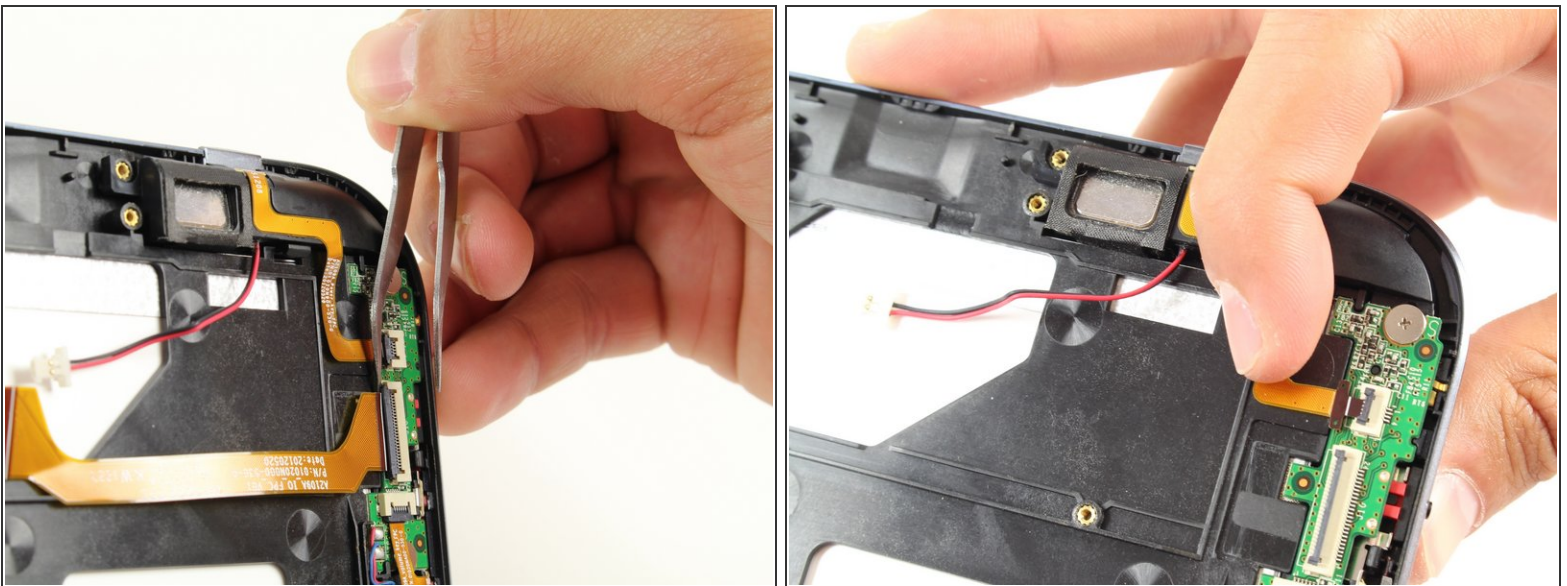


- Use the tweezer tool to flip up the three small plastic locks attached to the digital board.
- Then, slide newly exposed ribbons out.

## Step 5

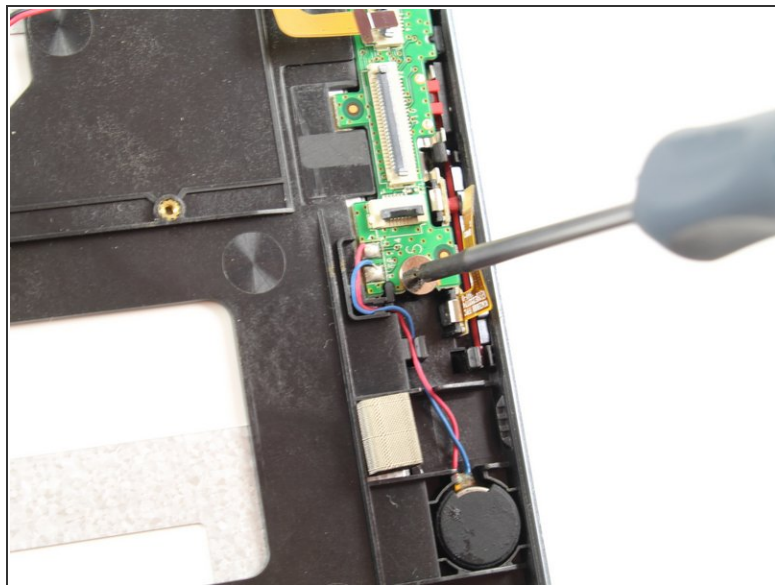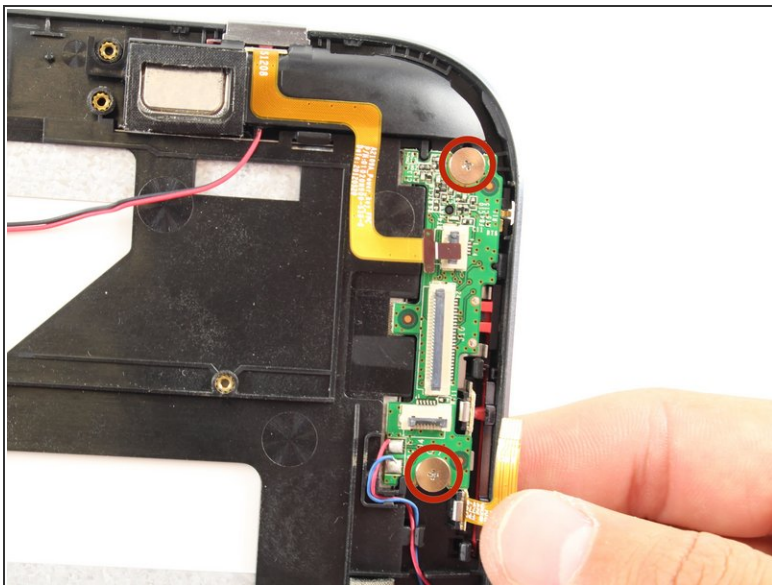

- Remove the following two screws:
  - M5.3 x 1.75 mm #00 phillips screws (silver)

## Step 6

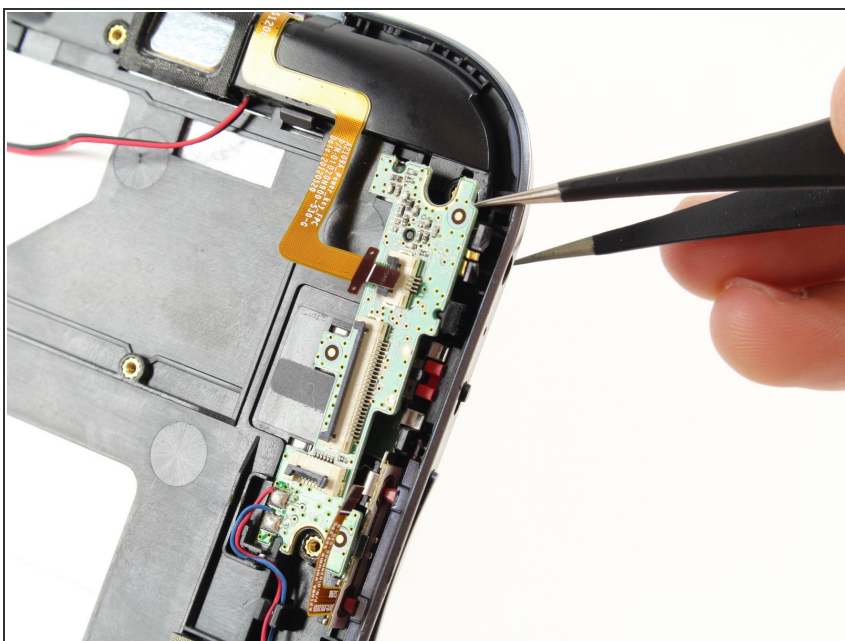

- Once it is unscrewed, use the tweezer tool to pull the digital board straight out.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-18 04:38:34 PM (MST).

