




Samsung Galaxy Tab 3 10.1 - Factory Reset Password Removal

Written By: ZFix

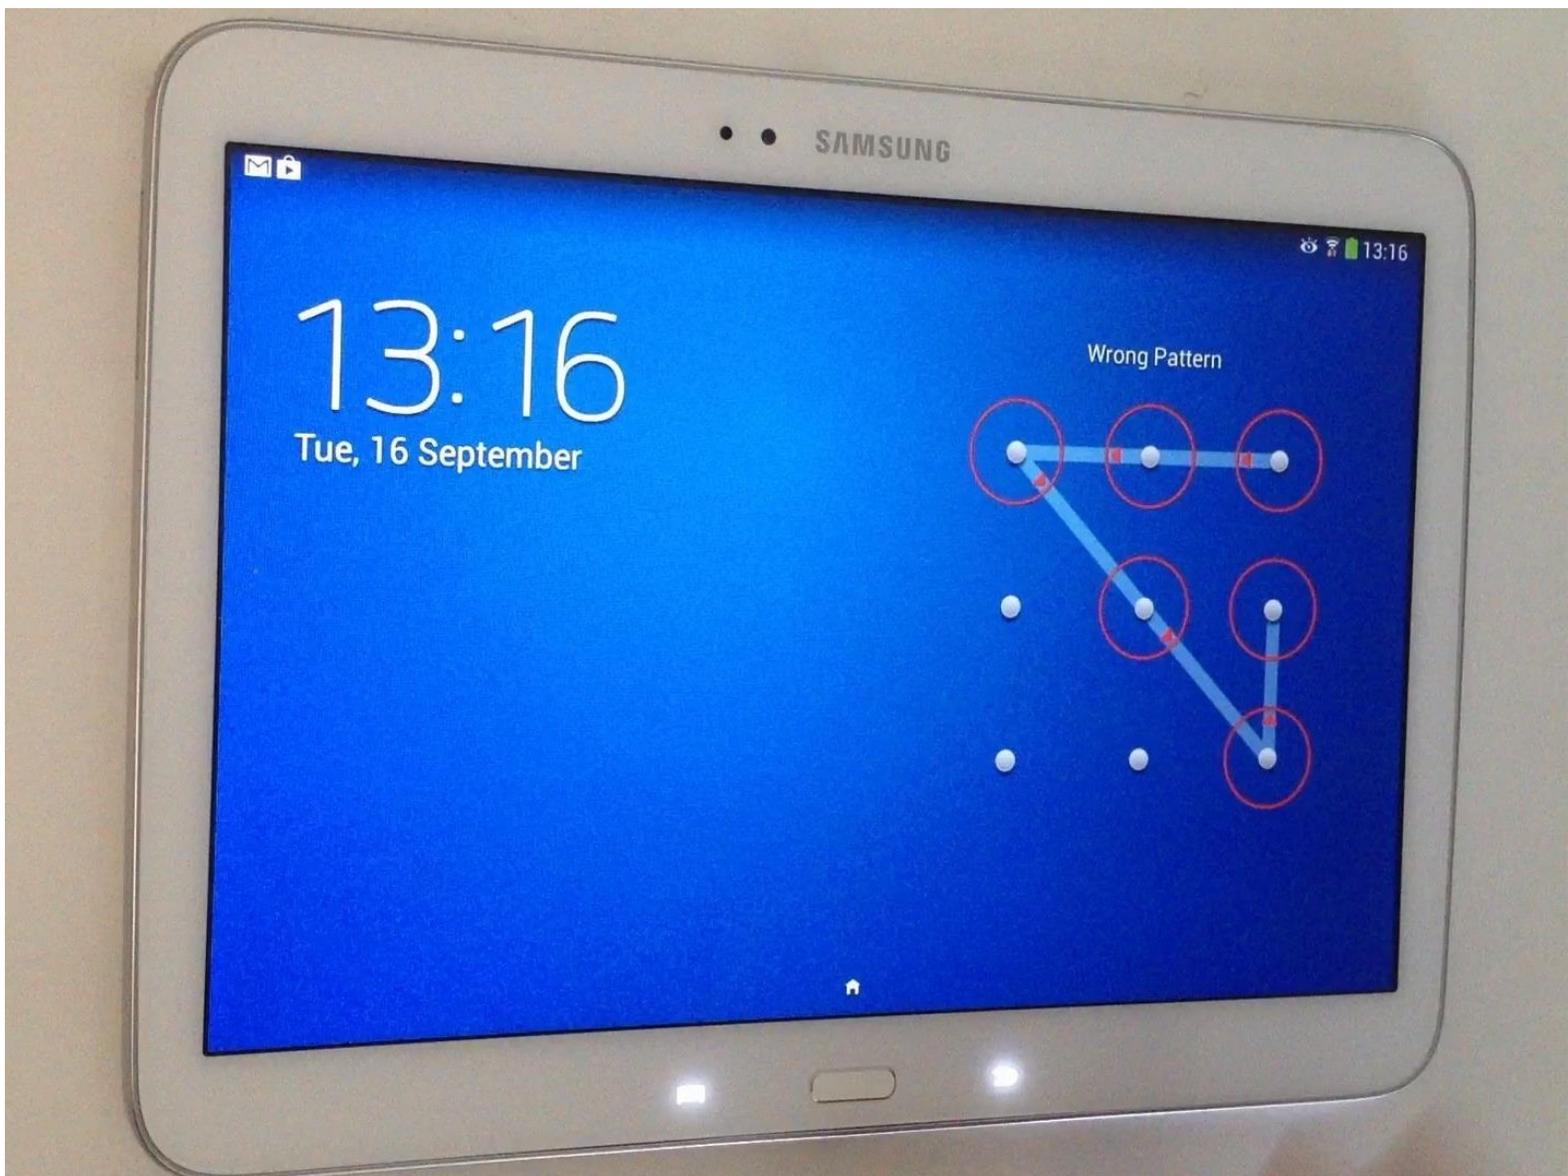

INTRODUCTION

If you forgot your password, pattern drill, you can log-in with your Google account, registered in this tablet or by entering Backup Pin.

If you can't do this, you can do factory reset. This will erase all your personal information (include password).

[Please SUBSCRIBE to my channel ツ](#)


[video: <http://youtu.be/i3r87wqo06s>]

Step 1 — Samsung Galaxy Tab 3 10.1 - Factory Reset Password Removal




- If you forgot your password, pattern drill, first you can try to sign in on your device by entering your Google account.
- ⚠ You must be in range of a network that already used.
- The last step is factory reset.
- ⚠ This will erase all your private information.

Step 2

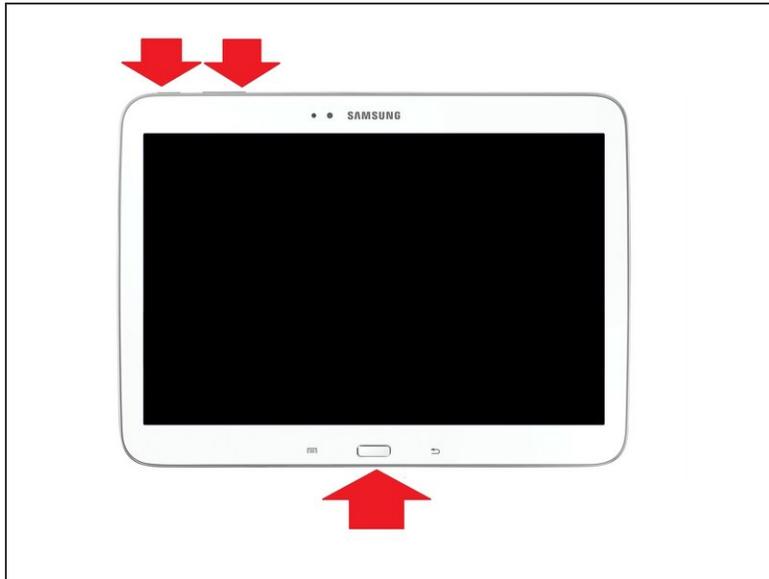

- Switch off the tablet.
- Press and hold the Home, Volume Up and Power On buttons.
- When you see the Galaxy logo, release the power On button

Step 3

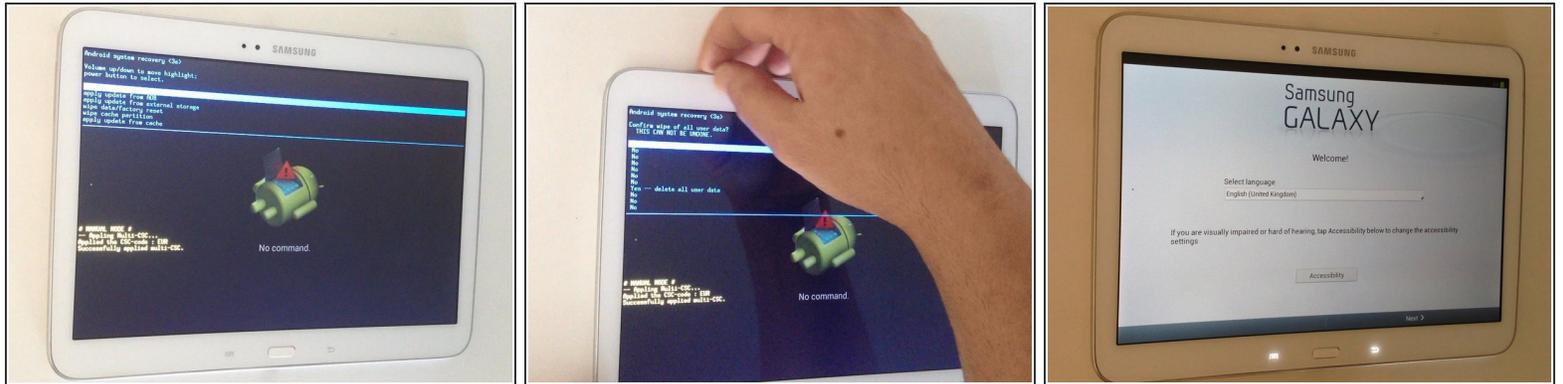

- Now you are in the Android System Recovery menu.
- Use Volume Up/Down keys for navigation and Power On for selection.
- Select one by one:
 - wipe data/factory reset
 - Yes -- erase all user data
 - reset system now
- **Did you do it successfully?**

 [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.