



Acer Iconia B1 (Tablet) Battery Replacement

Written By: ZFix



INTRODUCTION

How to open the tablet and replace the battery pack.

This video is for replacing the touch screen and LCD display but in the beginning you can see how to open the back cover and how to separate the battery from the tablet. You don't need to remove the mother board.


[Please SUBSCRIBE to my channel ツ](#)

[video: <https://www.youtube.com/watch?v=-0BSN2RipOQ>]

TOOLS:

- [knife-cutter](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery

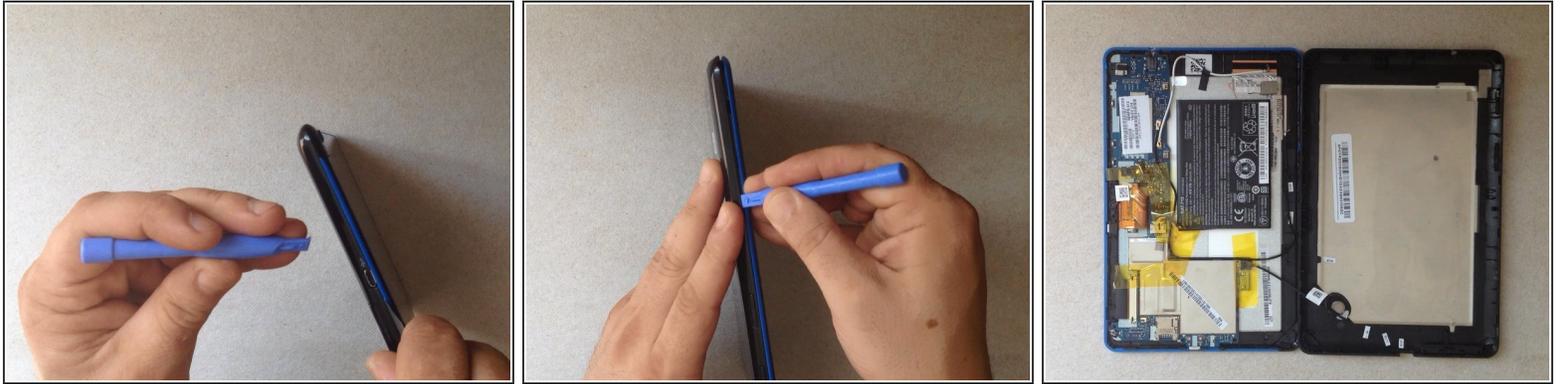


- Switch-off the tablet.

⚠ If you have a memory card inside, don't forget to remove it!

- Use a cutter and a plastic tool to remove the back cover.

Step 2

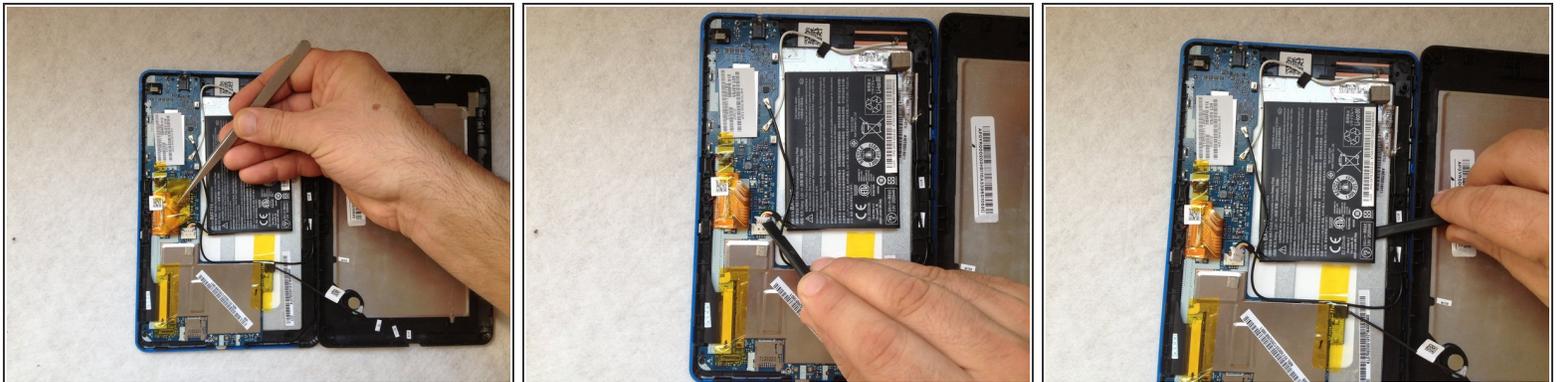

- Disconnect the battery connector.
- The battery is stuck to the LCD metal frame with a double side adhesive tape. With a plastic tool carefully separate it .

Step 3



- Li-ion Battery Pack, 3.8V, 2640mAh
- .
- **Did you do it successfully?**
- [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.