



TiVo Series 2 TCD540080 Hard Drive Replacement

Replace a TiVo hard drive.

Written By: Svyatoslav Markeyev



 **TOOLS:**

- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Removal of TiVo Series 2 TCD540080 Case



- Power down the TiVo and detach the power cable from the rear of the unit.
- ⚠ Wait 5 minutes for the unit to fully discharge before proceeding to the next step.

Step 2




- Remove the five T10 screws from the rear of the case using the Torx screwdriver.

Step 3



- Lift up and pull back the outer casing towards the rear of the unit.

Step 4 — Hard Drive

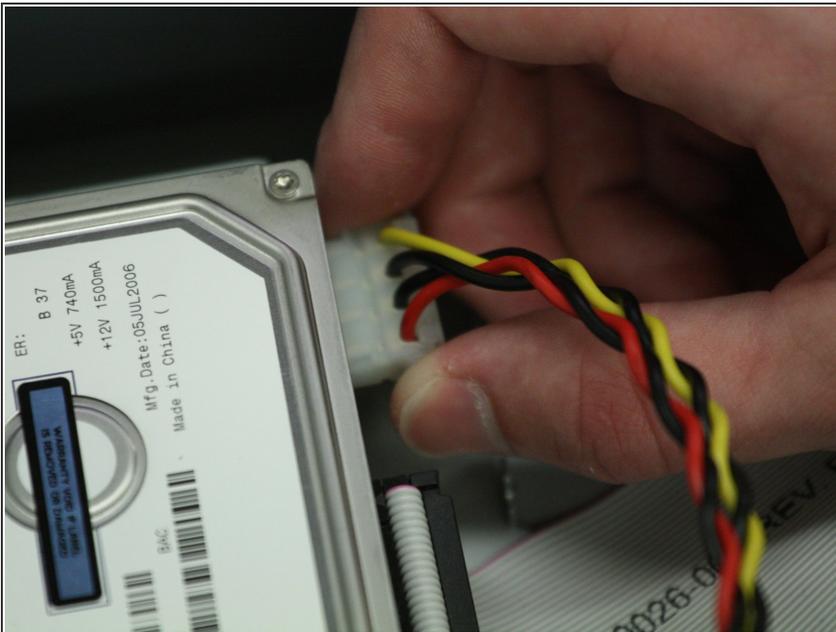

- Disconnect the power to the hard drive.

Step 5



- Grab the hard drive data cable from both sides of the connector and unplug it from the hard drive.
- ⚠ Use extreme caution when unplugging connector and do **not** disconnect the data cable by pulling on the cable itself.

Step 6



- Unscrew the two screws on the case of the hard drive with a T10 screwdriver.
- Pull the hard drive up and out of the TiVo unit.

Step 7



- Unscrew the four screws, shown in the picture, with a T-10 screwdriver.
- Remove the hard drive from the case.

To reassemble your device, follow these instructions in reverse order.