



Zoom Q3HD Handy Video Recorder Lens Cleaning

The Zoom Q3HD is a handy video/audio recording...

Written By: Grace Bently




INTRODUCTION

The Zoom Q3HD is a handy video/audio recording device released in 2010 How to clean the lens from inside

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Zoom Q3HD Handy Video Recorder Lens Cleaning

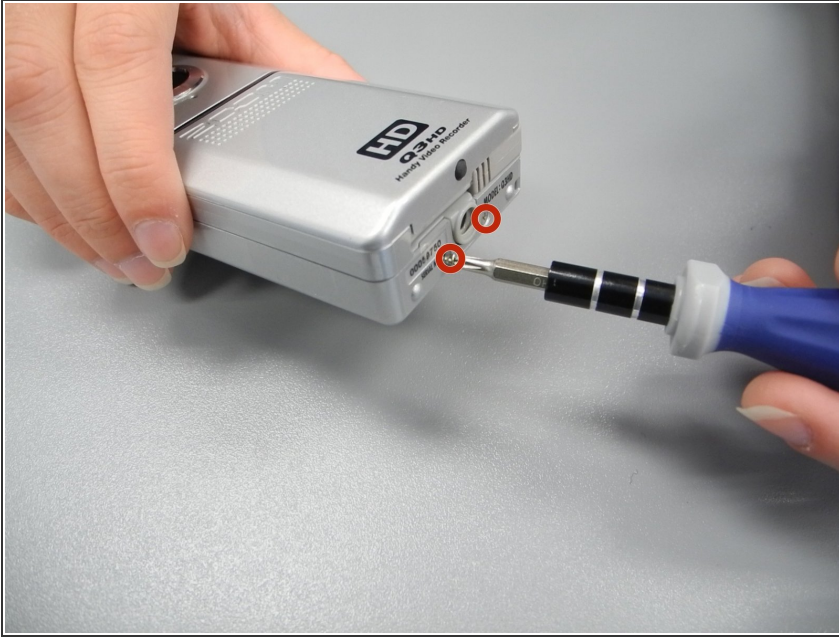

- Remove the two screws from the bottom of the device.
- ⓘ Make sure to put your screws in a safe place.

Step 2

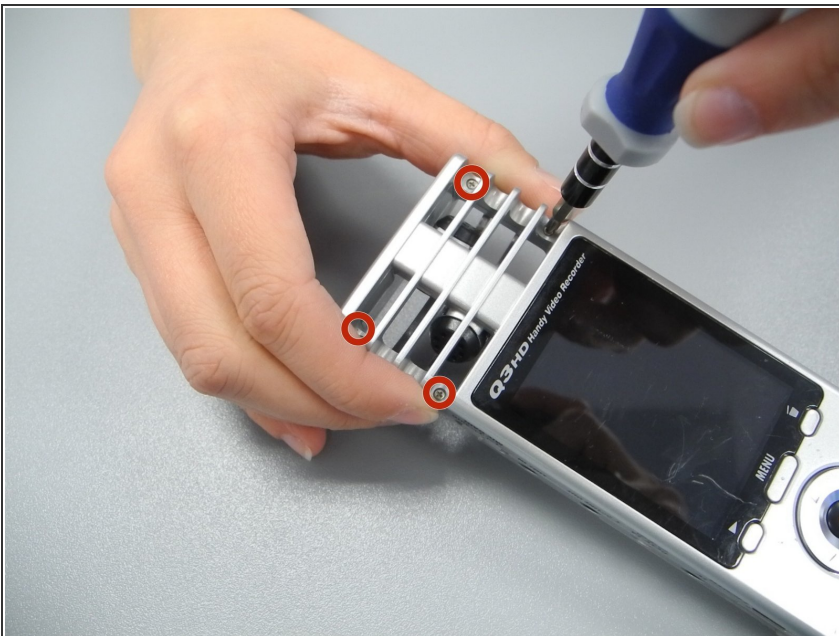

- Flip the device over and remove the four screws bordering the grate of the device.

Step 3



- On the front of the device, slide the battery compartment cover off by pushing inward and sliding downward.

Step 4



- Remove the two screws from the lip of the battery compartment.

Step 5





- Remove the final screw from the bed of the battery compartment.

Step 6



- ⚠ **WARNING:** Pieces may become loose when you separate the device in half!
- Run the pry tool along the edges of the device to begin separating the device in two halves.


Step 7

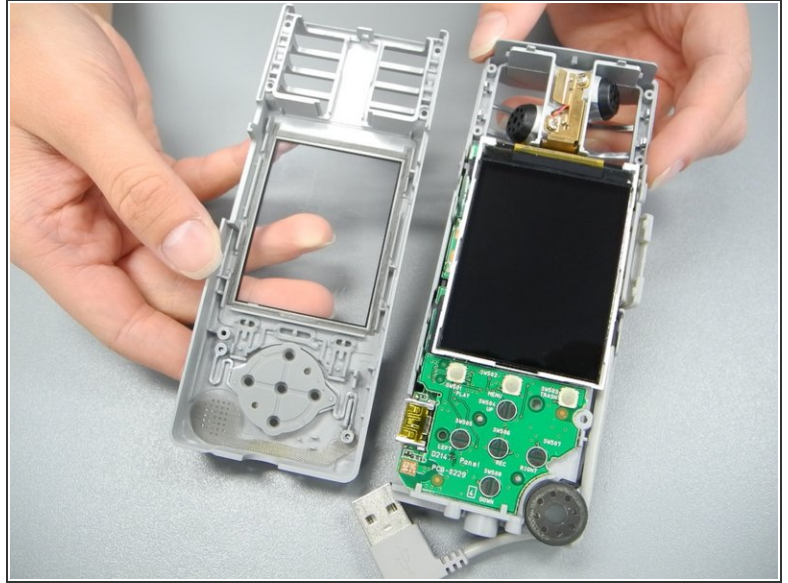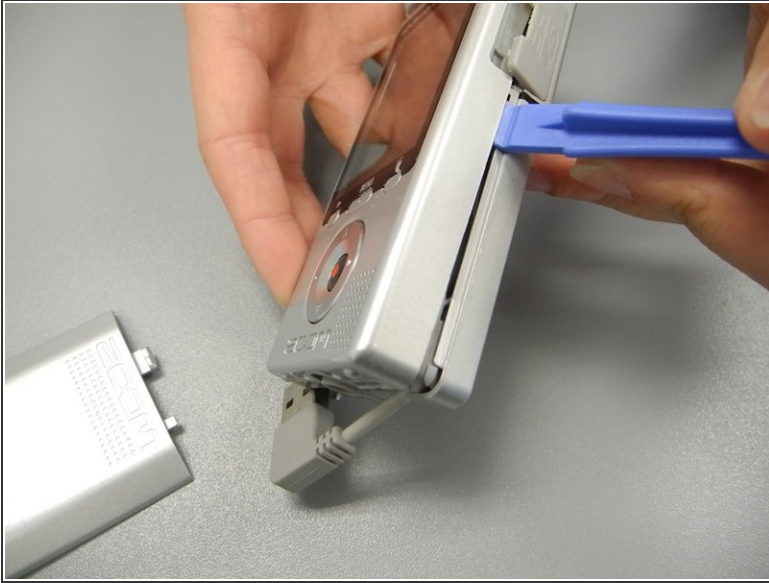

☒ REMINDER: Pieces may become loose when you separate the device in half!

- Apply upward pressure to fully separate the device into two halves.


Step 8

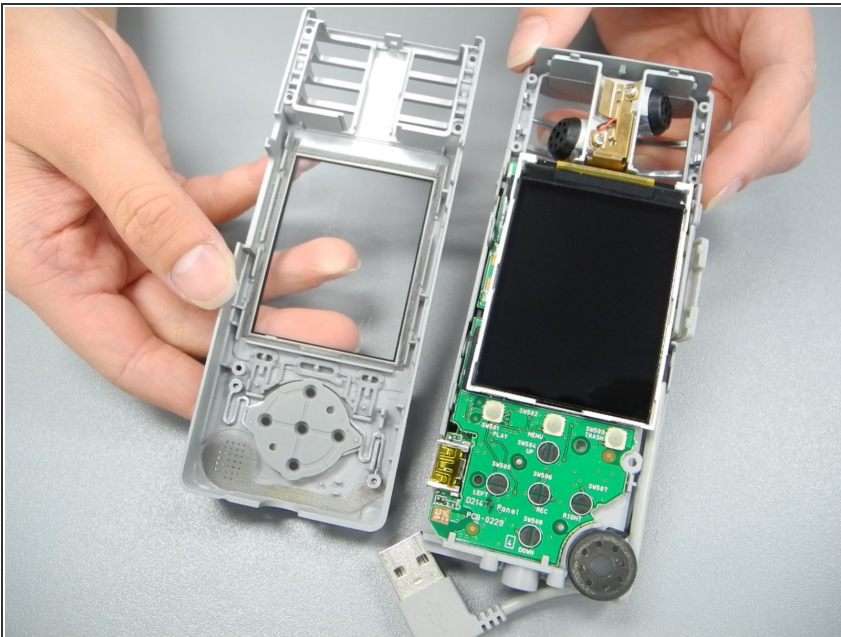

⚠ WARNING: If you're not careful with keeping the screen close to the board, you will rip off the ribbon attaching the screen to the circuit board.


- Lift display screen keeping the top half close to the board.

Step 9

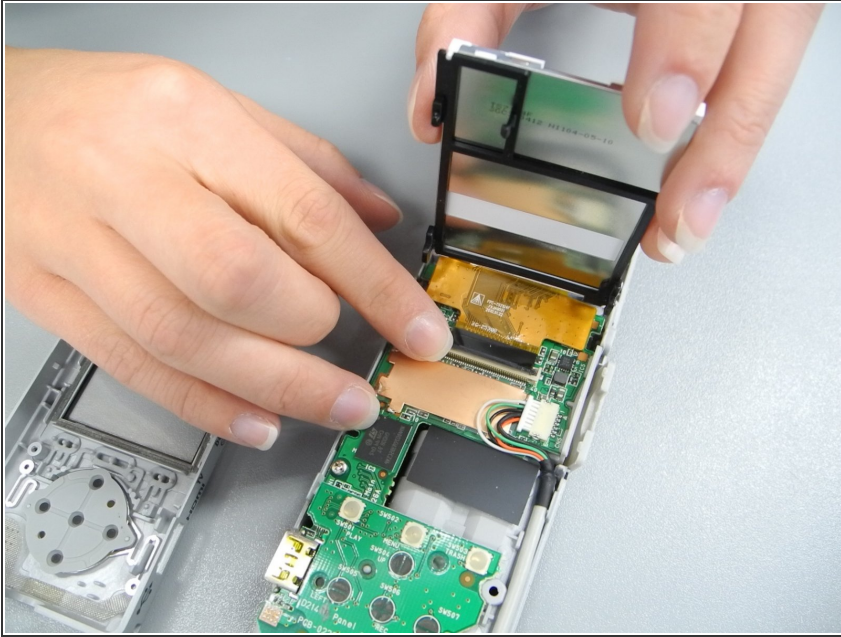

- Gently flip the black clip up attaching the ribbon of the screen to the circuit board.

Step 10

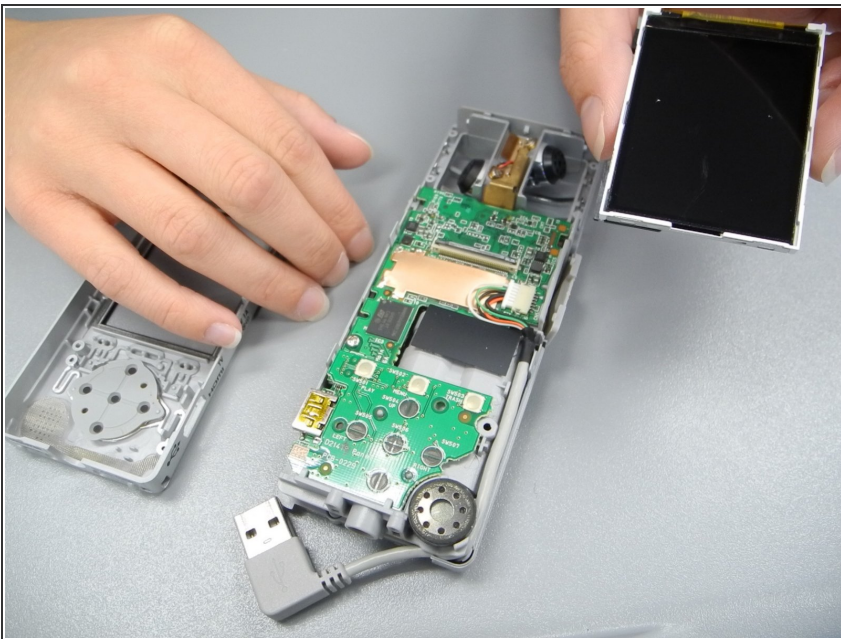

- Gently slide the ribbon from the circuit board, removing the screen.

To reassemble your device, follow these instructions in reverse order.