



# PlayStation 3 Slim Power Supply Replacement

Replace a burned-out power supply on your PlayStation 3 Slim.

Written By: Andrew Bookholt



## INTRODUCTION

Use this guide to replace your power supply.



### TOOLS:

- [Metal Spudger](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [T8 Torx Security Bit Screwdriver](#) (1)



### PARTS:

- [Sony PlayStation 3 Slim DC-In Cable](#) (1)
- [Sony PlayStation 3 Slim Power Supply](#) (1)

## Step 1 — Top Cover



- Turn the PS3 over and lay it on its backside.
- Carefully peel the warranty sticker up off the lower case to reveal a hidden screw cover.
- ☒ To avoid activating the **VOID** that may come up, heat the sticker carefully to remove and replace it cleanly.

## Step 2




- Use the flat end of a metal spudger to pry up the seven screw covers around the edge of the lower case.

### Step 3



- Remove the seven 37 mm Phillips screws securing the top cover to the lower case.

### Step 4

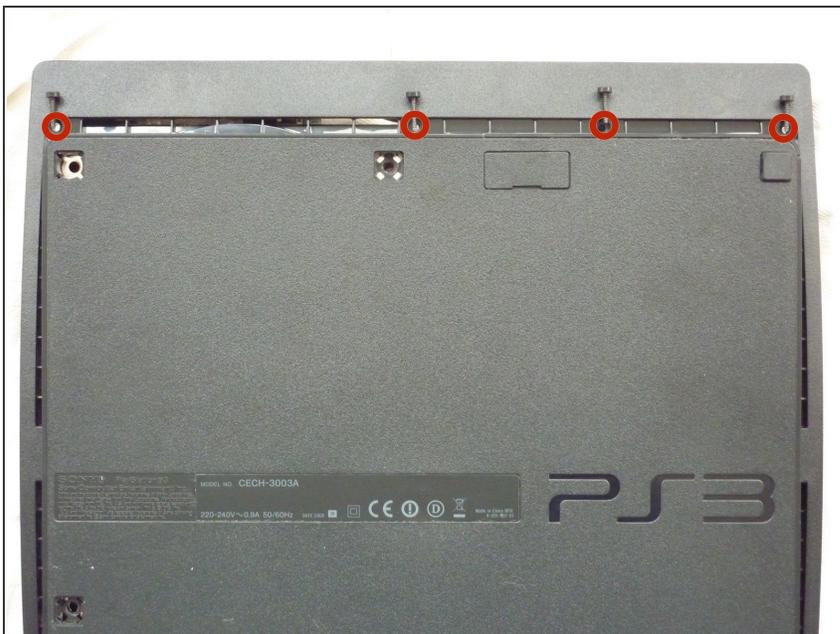

- Remove the four 13.3 mm T8 security Torx screws beneath the Blu-ray drive opening. (Some models may only have three screws)

## Step 5



- Lift the top cover from its rear edge and rotate it toward the front of the PS3.
- Lift the top cover off the PS3.

## Step 6 — Power Supply



- Squeeze the AC inlet connector's locking mechanism and pull straight up to disconnect it from the power supply.

## Step 7



- Pull the DC-Out cables straight up to lift their connector up and out of its socket on the power supply.

## Step 8




- Remove the two 7.6 mm Phillips screws securing the power supply to the lower case.

## Step 9



- Lift the power supply upward from its left edge as viewed from the front of the PS3.

## Step 10

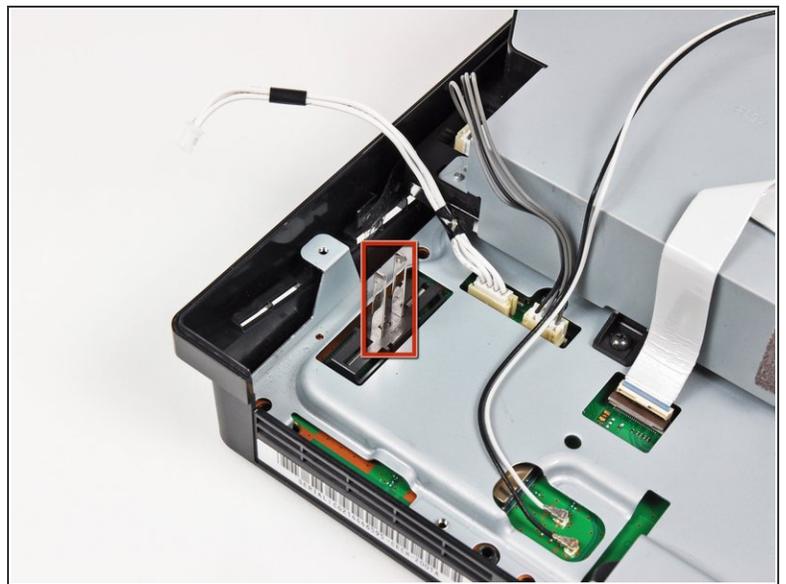

- Continue to lift the left edge of the power supply until it lifts off the two metal posts shown in the second picture.
- Remove the power supply from the PS3, minding any cables that may get caught.

To reassemble your device, follow these instructions in reverse order.