

Nokia Lumia 635 Headphone Jack Replacement

How to replace the headphone jack of your Nokia Lumia 635.

Written By: Benjamin



INTRODUCTION

This guide serves the purpose of replacing the Nokia Lumia 635 headphone jack when the user (you) cannot hear anything when headphones or other media devices are plugged.

TOOLS:


- iFixit Opening Tools (1)
- T5 Torx Screwdriver (1)

Step 1 — Battery Removal



- Open the back case of the phone using the plastic opening tool.
- Remove the battery.

Step 2 — Screw Removal

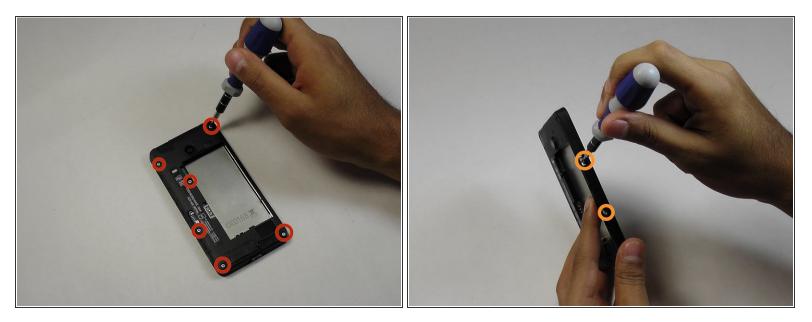

- Remove the six screws shown in the photo using the torx Screwdriver 5mm.
- Turn your phone sideways and you will find two more screws that you will need to remove using the Torx Screwdriver 5mm.

Step 3 — Remove Hidden Screw



- Remove the black sticker on the bottom left side (As shown in the picture).
- Remove the screw that was under the black sticker using the Torx Screwdriver 5mm.

Step 4 — Separating Back Cover From Screen



- Using the plastic opening tool separate the plastic cover from the screen.
- On the top left corner you will see the screens flex attached to the mother bothered, watch out when separating them.

Step 5 — Audio Jack Replacement



- Carefully retrieve the audio jack's flex that is attached to the mother board as shown in the picture.
- Attach the new audio jack's flex to the mother board.

To reassemble your device, follow these instructions in reverse order.