



# LG Optimus L9 P769 Rear Facing Camera Replacement

This guide will allow you to remove the camera from under the motherboard and separate it from the phone.

Written By: Paul



---

## INTRODUCTION

For this guide make sure that you have correctly removed the back and the speaker before you begin the guide.



### TOOLS:




- [iFixit Opening Tools](#) (1)
-

## Step 1 — Removing the Back Panel






- Pry the back panel from the frame of the phone to reveal the motherboard.

## Step 2 — Unplugging the Motherboard

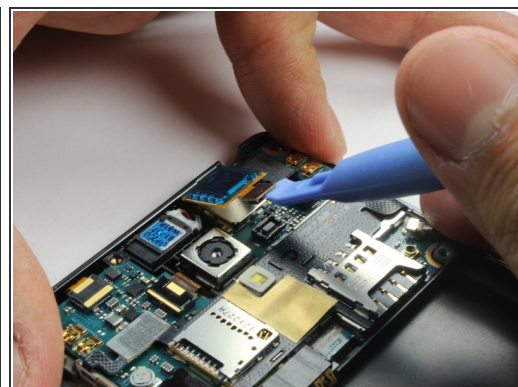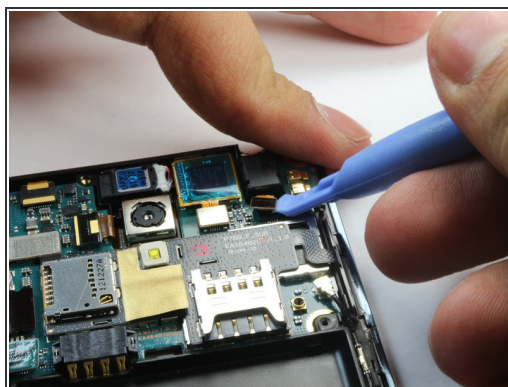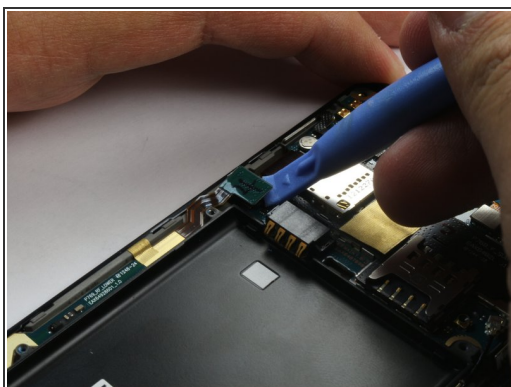


- Detach the connectors on the motherboard.

### Step 3 — Unplugging the Motherboard Cont.

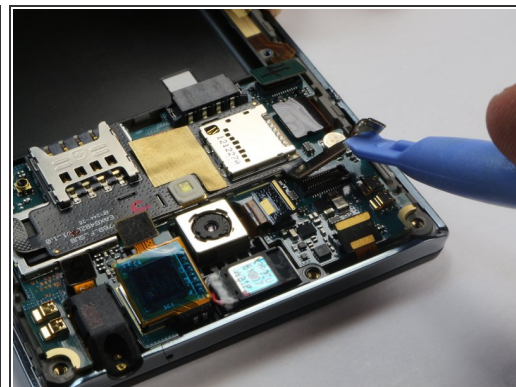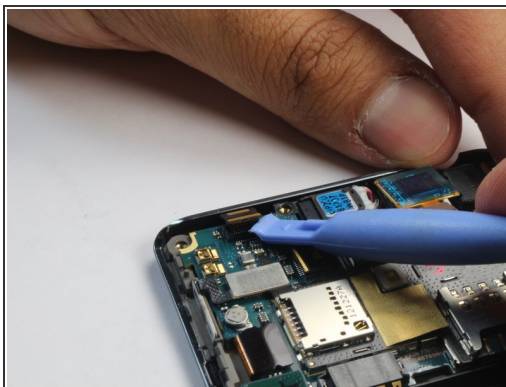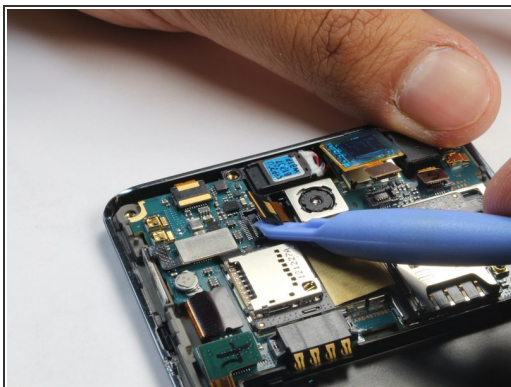



- Continue to lift the connectors off the motherboard.

### Step 4 — Lifting Motherboard from the Phone

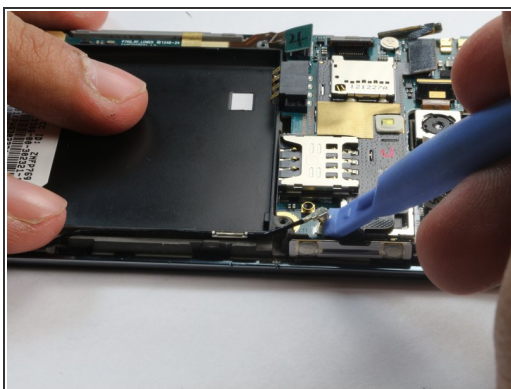

- Lift the speaker cable off the motherboard.
- Lift the motherboard up. It will Still be connected to the frame.

## Step 5 — Pry and remove the camera

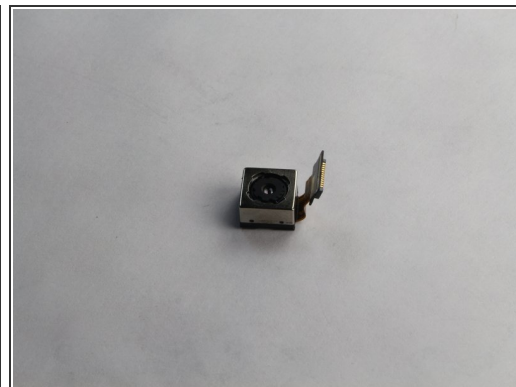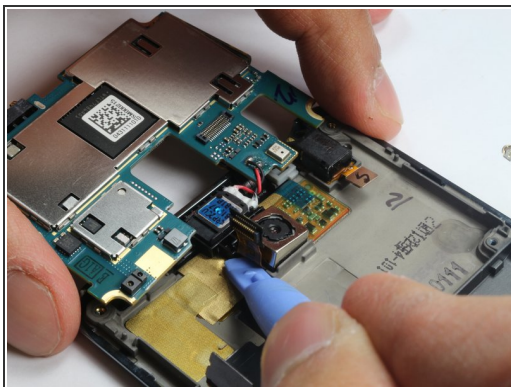

- Pry under the camera to lift it off the frame.
- There is some adhesive that will keep it attached to the frame, pulling the camera off will not damage the phone.
- The camera should now be entirely separated from the phone.

To reassemble your device, follow these instructions in reverse order.