




MacBook Pro 17" Unibody Left Speaker Assembly Replacement


Written By: Andrew Bookholt

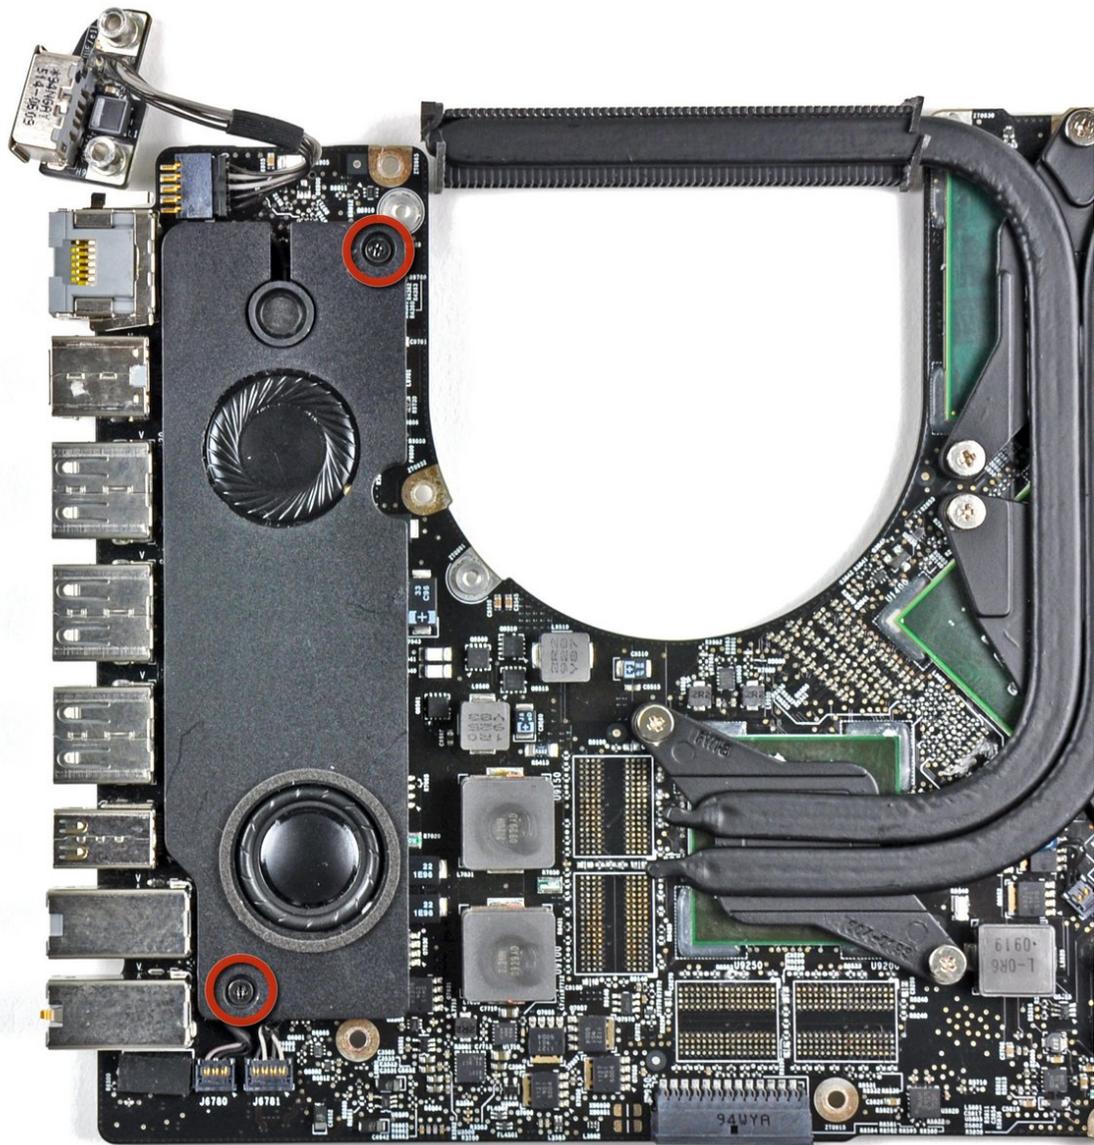

 **TOOLS:**


- Phillips #00 Screwdriver (1)
 - Spudger (1)
-

Step 1 — Left Speaker Assembly

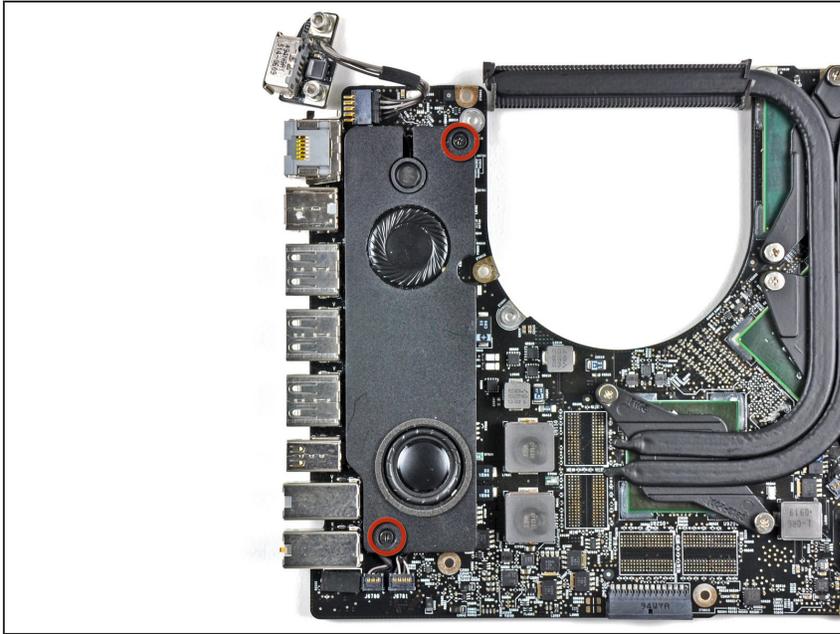

- Remove the two 7.9 mm Phillips screws securing the left speaker assembly to the logic board.

Step 2

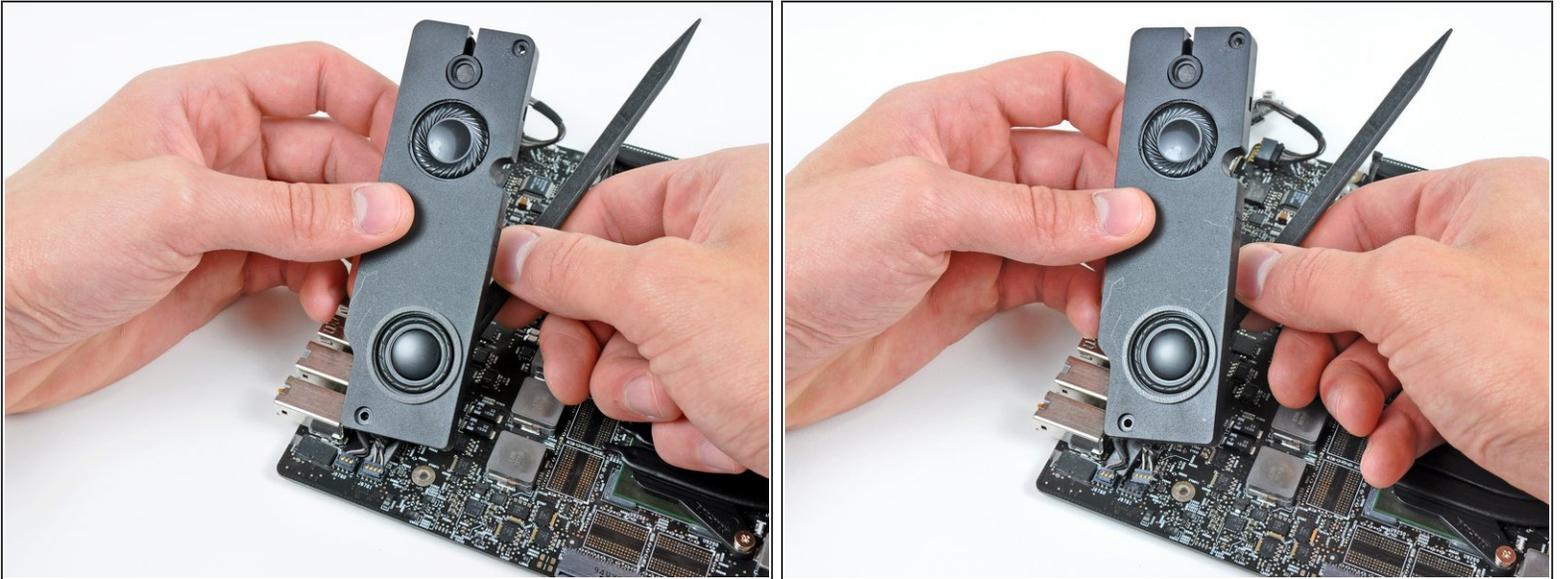

- Slightly lift the left speaker assembly off the logic board.
- Use the flat end of a spudger to lift the microphone and left speaker connectors out of their sockets on the logic board.
- ⓘ Pry up from beneath the wires.
- Remove the left speaker assembly from the logic board.

To reassemble your device, follow these instructions in reverse order.