




# Nokia 6590i Speaker Replacement

This guide will show you how to remove the...

Written By: Colby Leslie

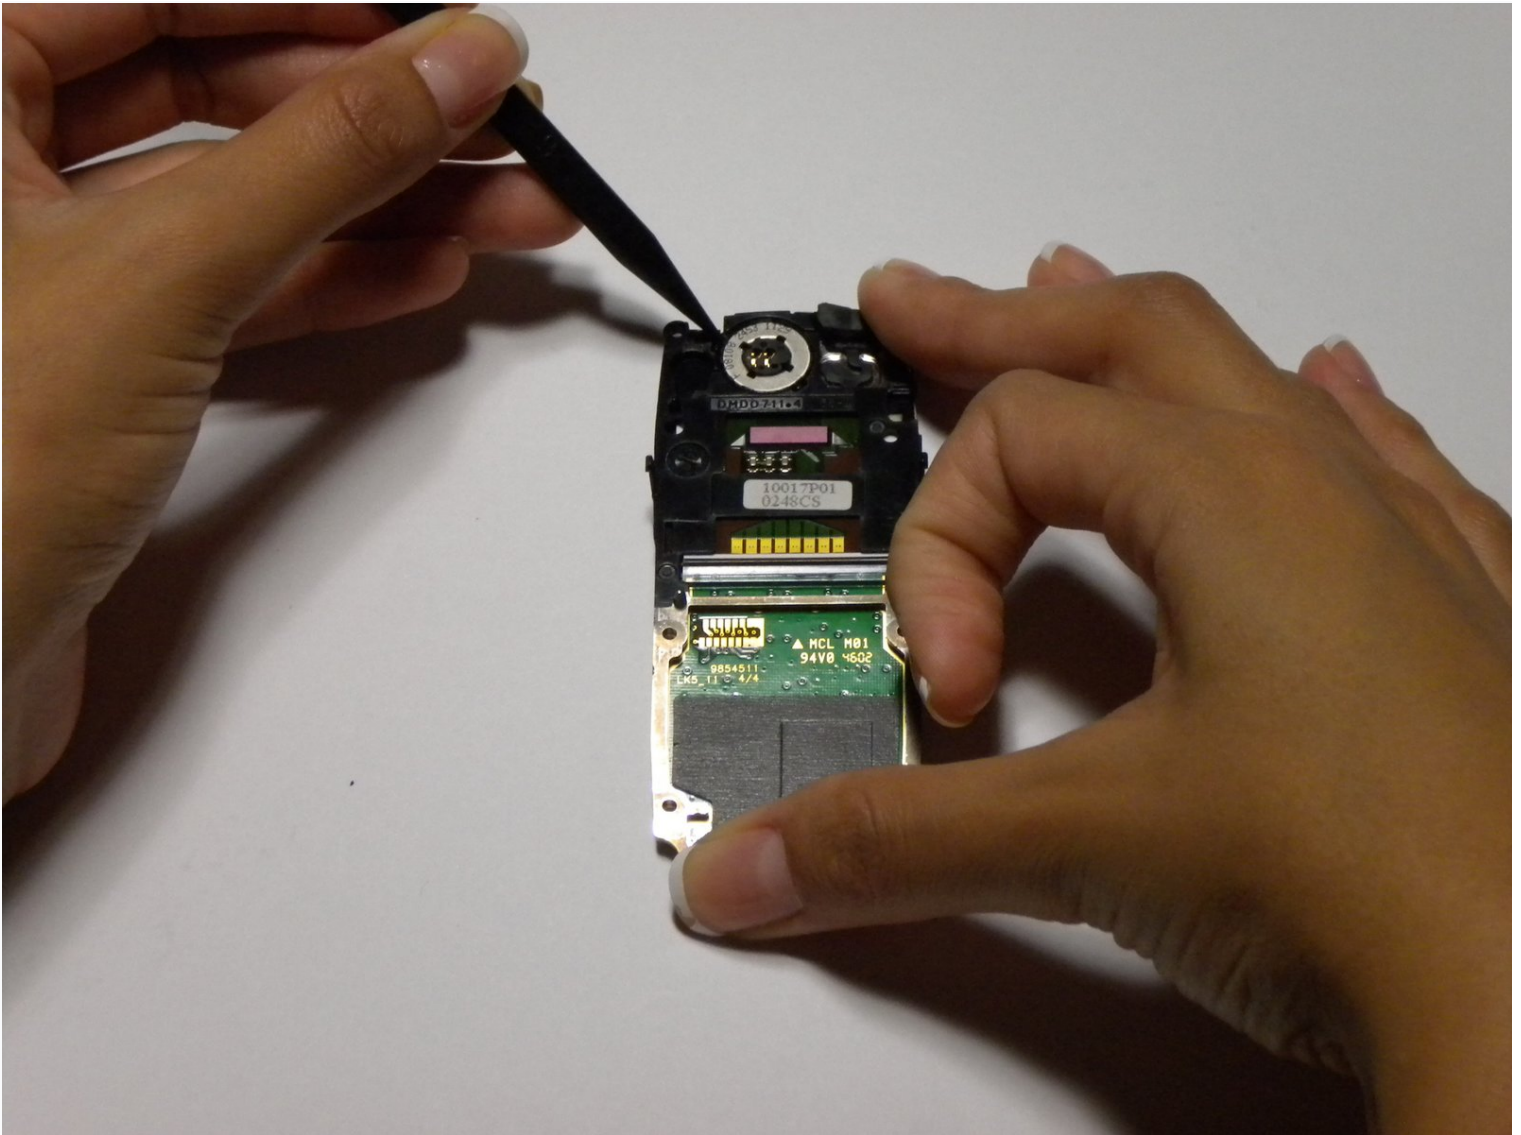

# INTRODUCTION


This guide will show you how to remove the Speaker from the phone.

## TOOLS:

Spudger (1)

T6 Torx Screwdriver (1)

### Step 1 — Battery

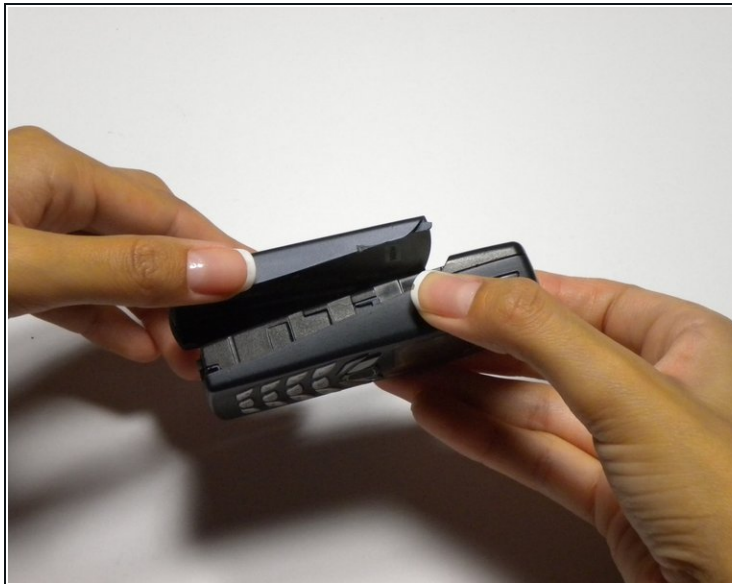

- Press the button on the bottom of the rear cover.
- Keep the button pressed while pulling the cover downward to remove the back cover.
- Lift the cover off.

## Step 2



- To remove the battery, push it down from the top and pull it out.

## Step 3 — Disassembling Nokia 6590i Keypad, Speaker, and Screen Assembly



- Grip the front cover from the bottom.



## Step 4



- Lift the front cover off.

## Step 5




- Remove the six screws using a T6 torx screwdriver.

## Step 6



- Insert spudger along edge of assembly and gently lift assembly away from case

## Step 7

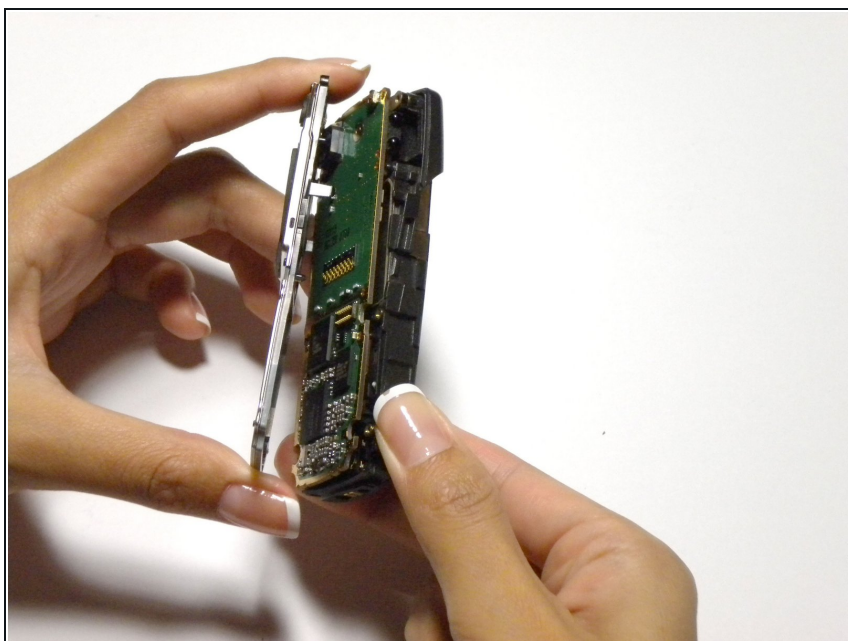


- Remove assembly from phone

## Step 8 — Speaker



- Flip assembly over


## Step 9

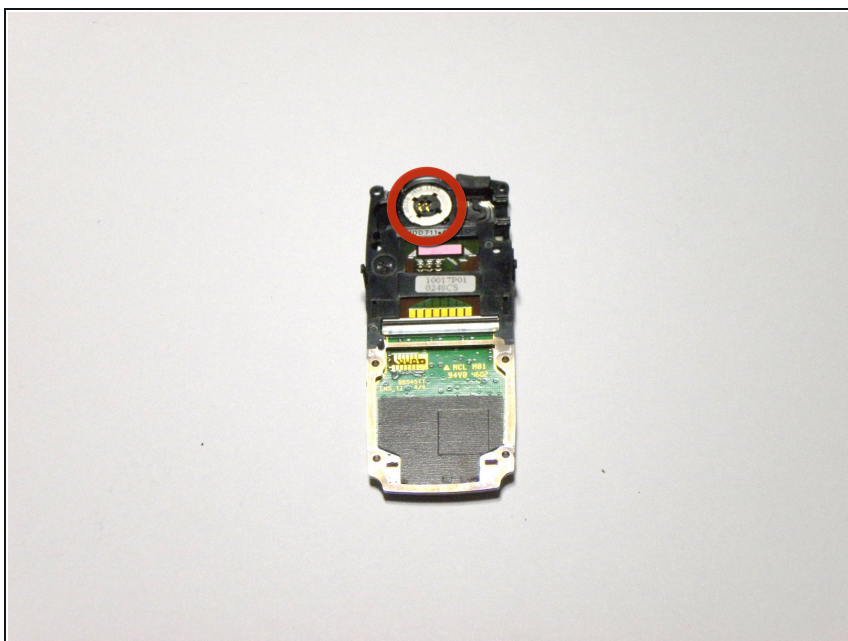

- Locate speaker on the back of the assembly.




## Step 10

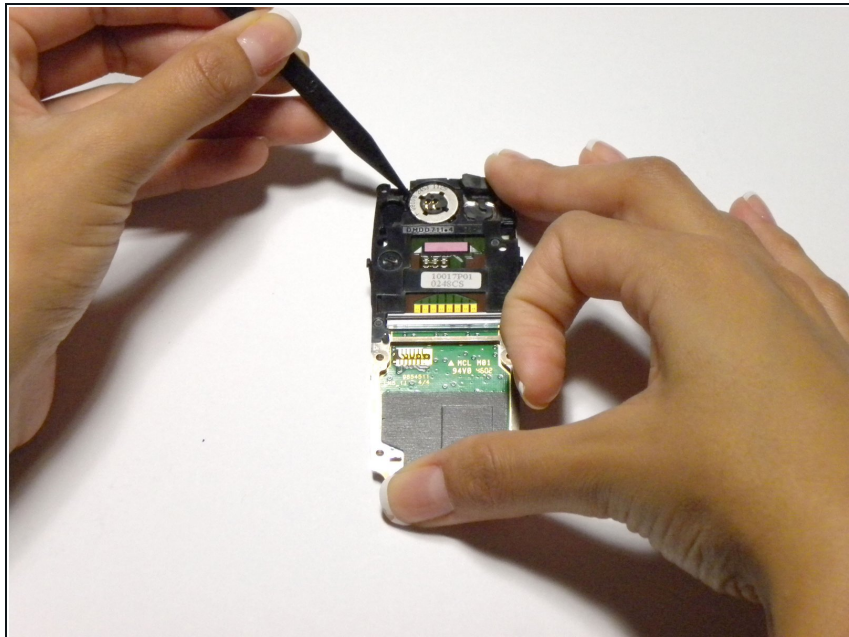

- Insert spudger under upper left side of speaker and gently lift to remove

## Step 11

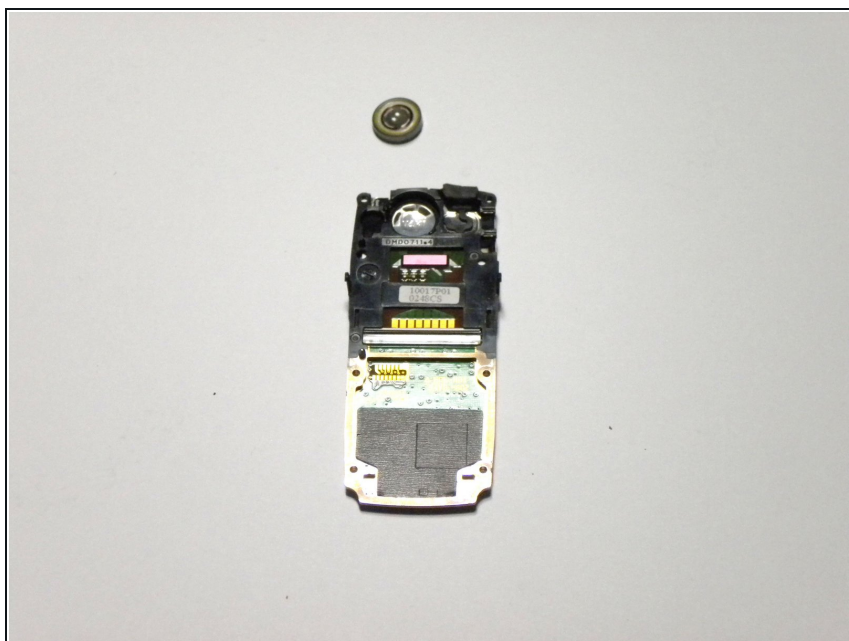

- Remove speaker.

To reassemble your device, follow these instructions in reverse order.