


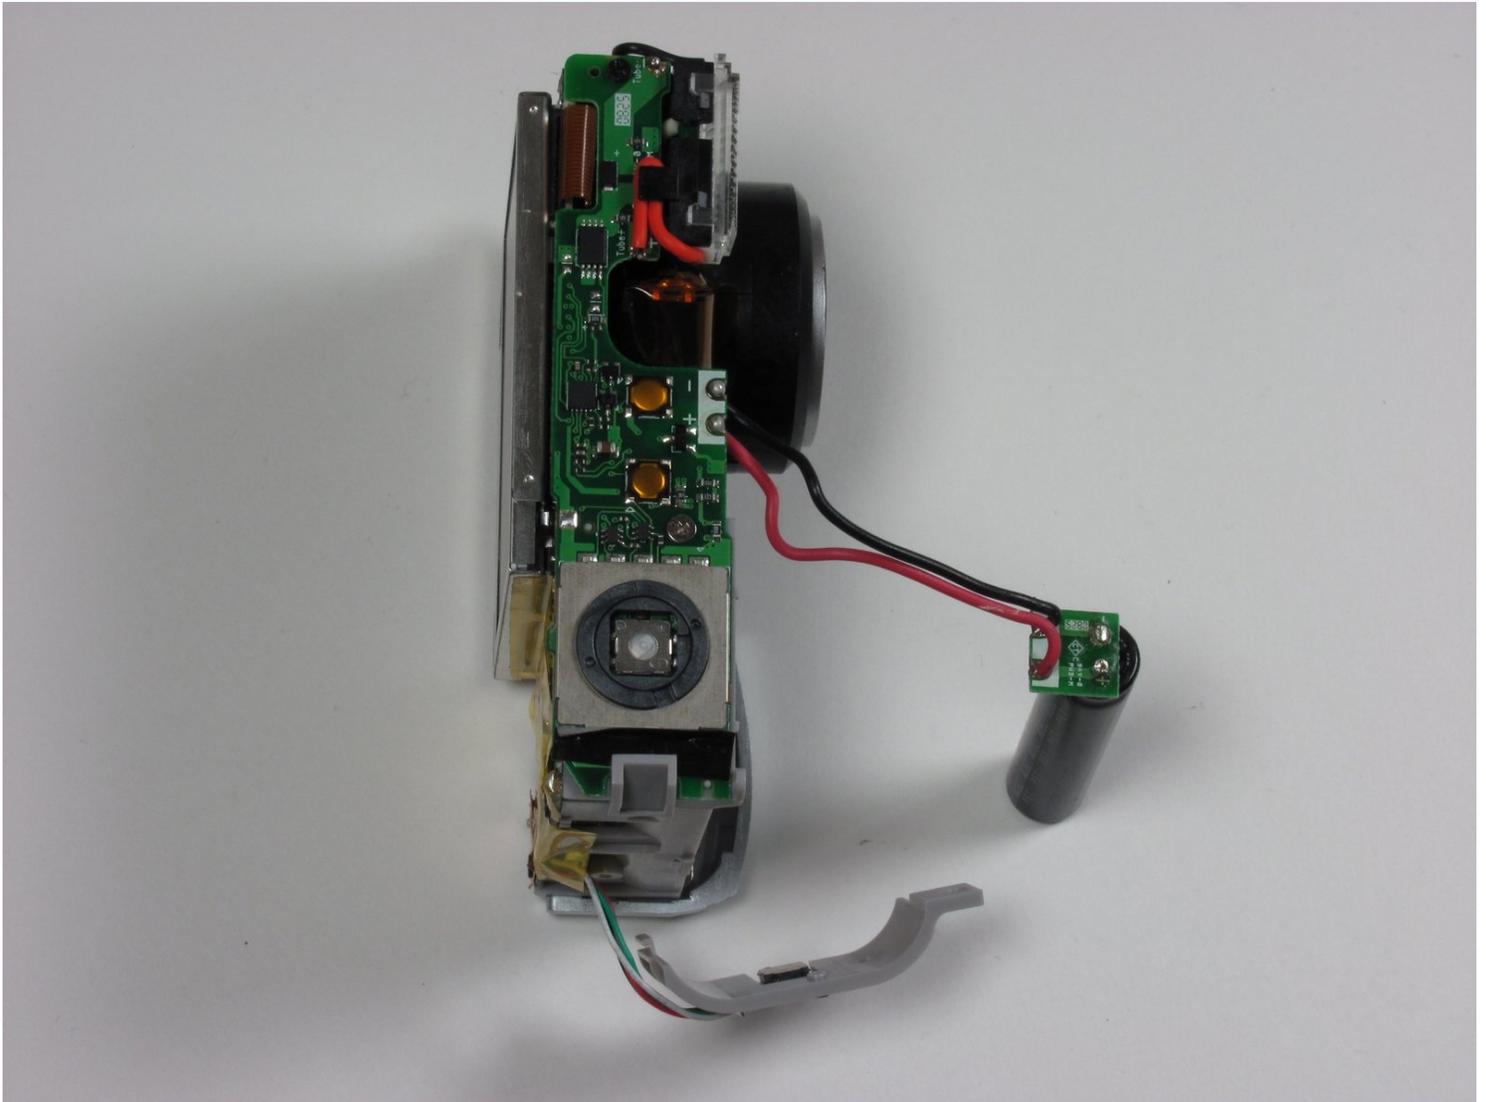

Kodak EasyShare C913 Capacitor Replacement

Use this guide to remove the capacitor.

Written By: Alan Galarza



INTRODUCTION

Use this guide to remove the capacitor.

TOOLS:

Phillips #00 Screwdriver (1)

Step 1 — Batteries



- Position the camera with the bottom facing up.
- Slide the battery cover in the direction of the arrow with your finger gently.
- Remove the batteries

Step 2 — Back Case



- Remove the seven 4.5mm screws with a Phillips #00 screwdriver.
 - 2 on the left
 - 2 on the right
 - 3 on the bottom

Step 3




- Firmly grasp the back of the camera and pull the away the casing.

Step 4 — Front Case




- Keep the battery door open
- Firmly grasp the front casing and pull away from the camera.

Step 5 — Capacitor

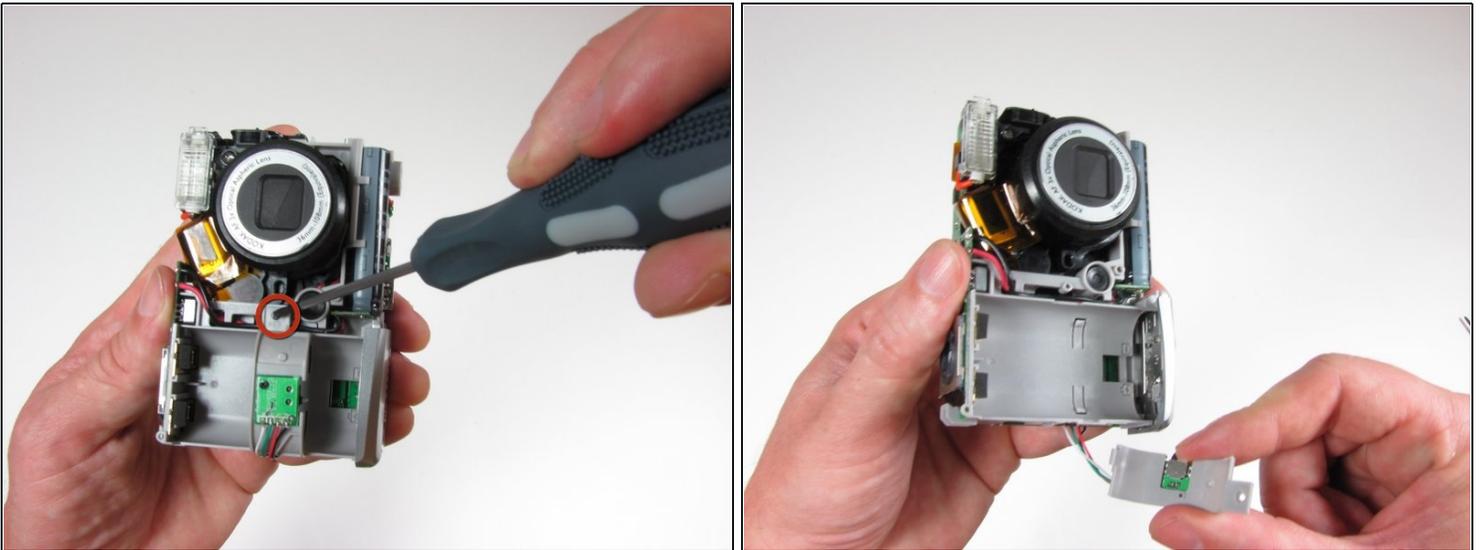




- Orient the camera with the lens facing you.
- Use a Phillips #00 screwdriver to remove the one 2.2mm screw on the plastic bridge.
- Lift the plastic bridge off and place it to the side.

Step 6

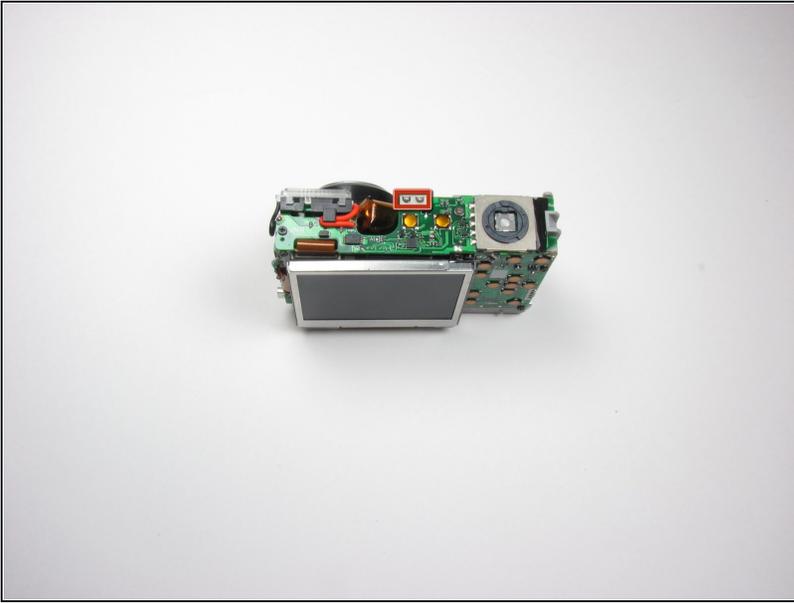


⚠ Do not touch the capacitor contact points for any reason. This will result in a severe shock.

Step 7

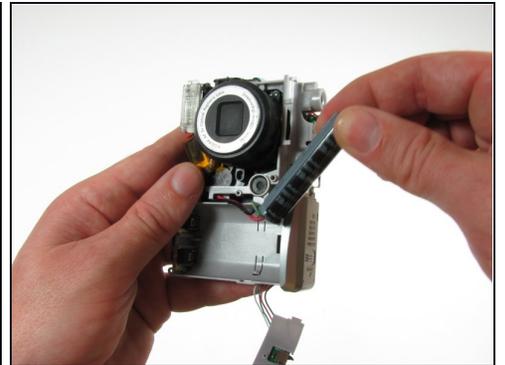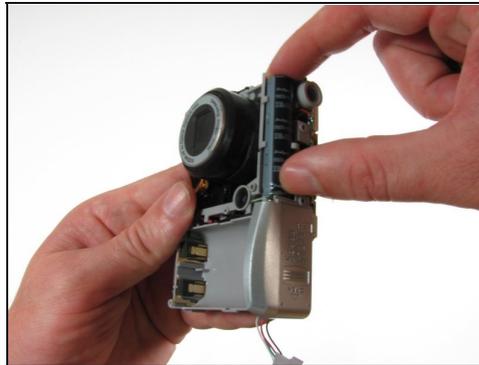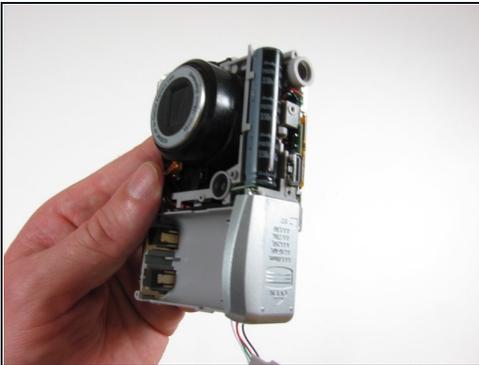

- Grasp the capacitor, carefully remove it from its holder, and place it off to the side.

Step 8

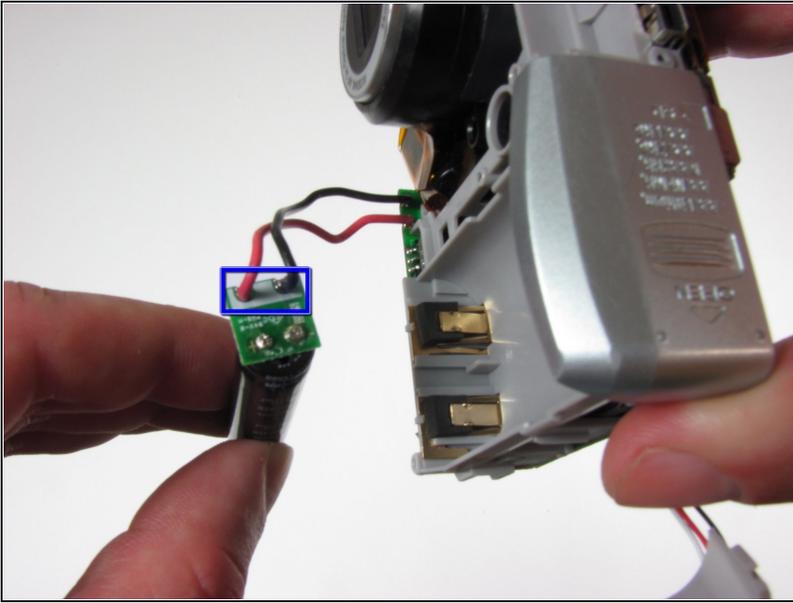

- De-solder the connections at the base of the capacitor

To reassemble your device, follow these instructions in reverse order.