


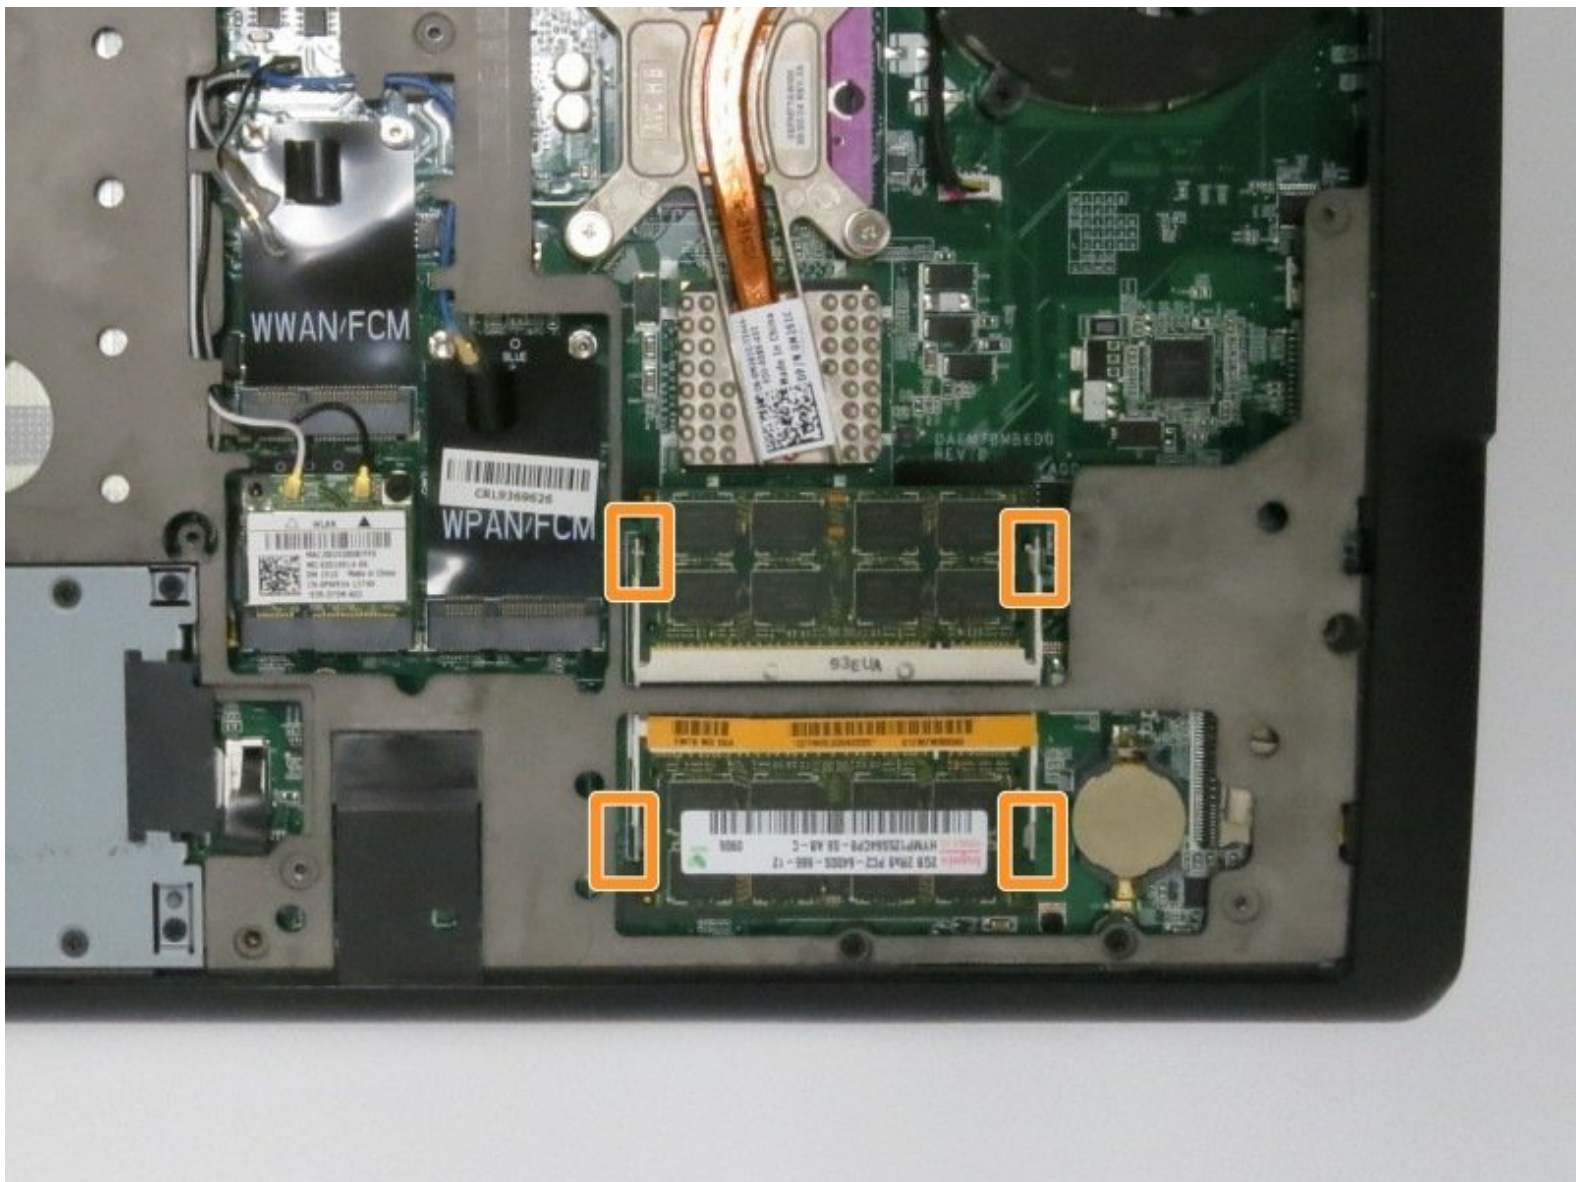

Dell Studio 1537 RAM Replacement

Replace your faulty or underpowered RAM to breath new life into your Dell Studio 1537 laptop.

Written By: Zach Dylag






TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery

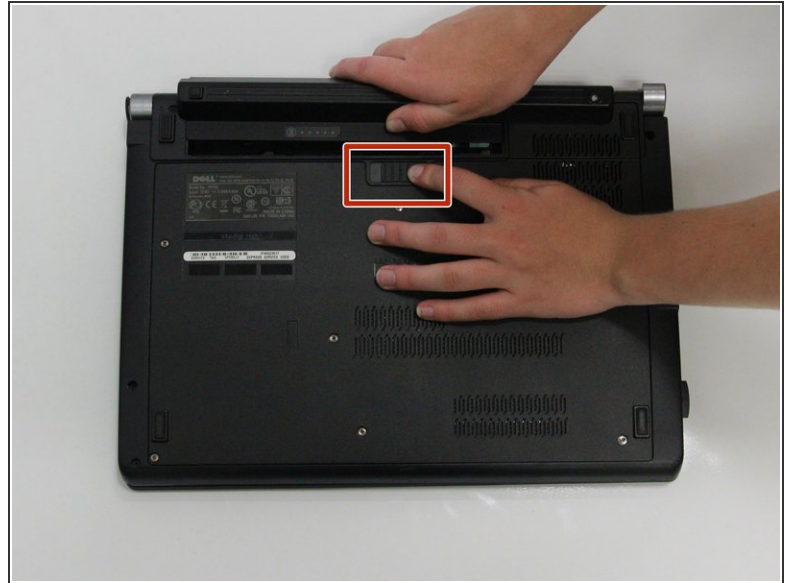

⚠ Ensure the laptop is turned off and unplugged before attempting to remove any piece.

- Place the laptop lid down so the underside is visible.
- Pull battery release switch and gently pull the battery directly away from the switch.

Step 2 — Back Cover



- Identify the back cover of the laptop.

Step 3





- Unscrew and remove all of the 6.0mm screws with a Phillips #1 screwdriver.

Step 4



- Lift the back cover off of the laptop.


Step 5 — RAM

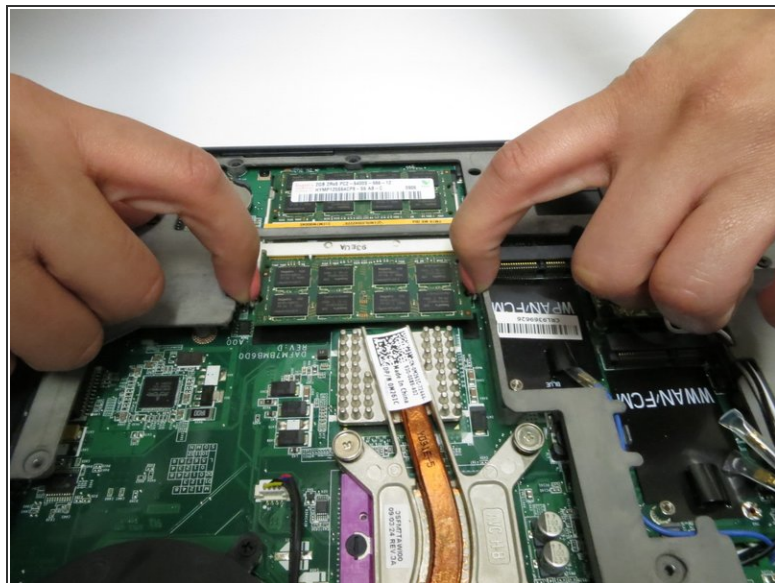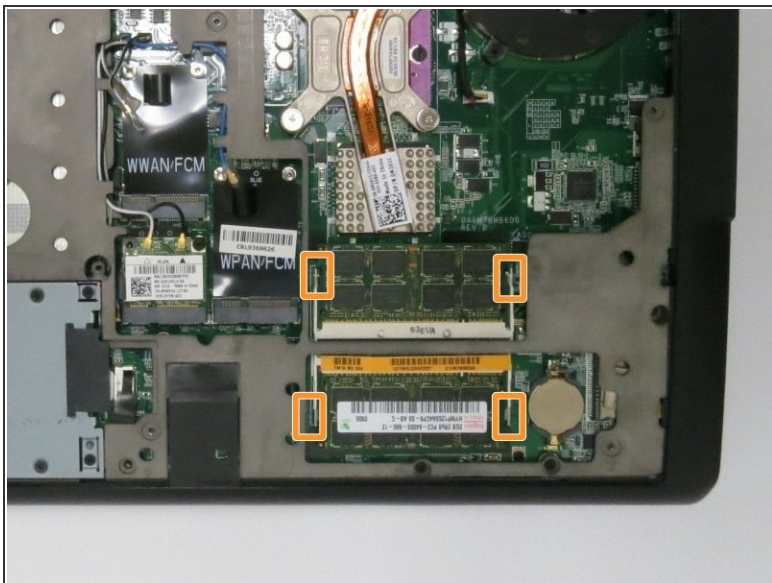

- Pull outwards on both of the tabs for one of the RAM slots.

i The RAM stick should pop up at an angle after this.

Step 6

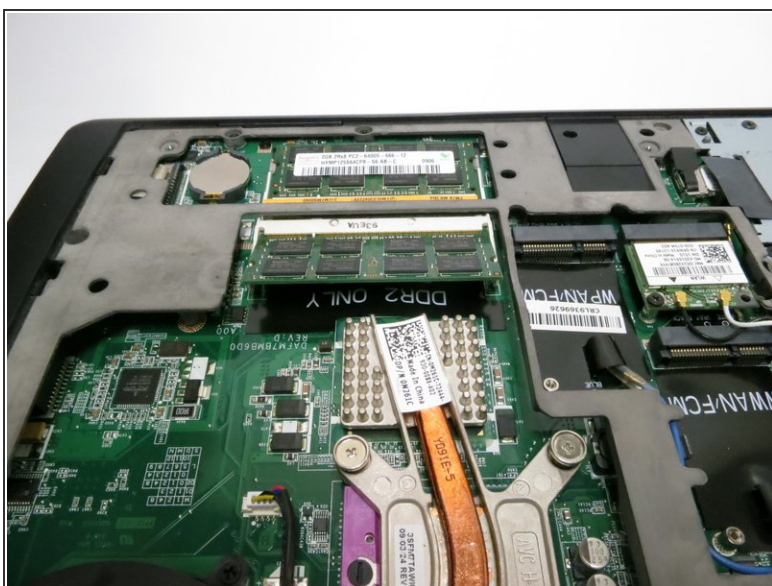

- Pull the RAM stick out of the slot.
- Repeat with the remaining RAM stick.

To reassemble your device, follow these instructions in reverse order.