



Sony VAIO PCG-3E2L RAM Replacement

The purpose of this guide is to help the reader replace the RAM of the device.

Written By: Chengyang Chen



INTRODUCTION

This guide will aid readers to replace battery of the device when the RAM is not functioning properly.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)



PARTS:


- [4GBPC2-6400\(2GBx2\) RAM](#) (1)

Step 1 — RAM



- Using a #00 Phillips screwdriver, remove the screw
- Remove the cover

Step 2

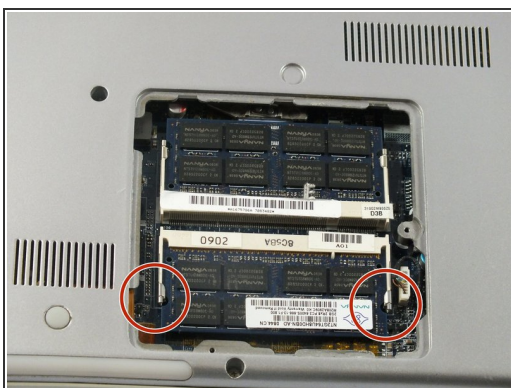

- Use two thumbs to push two plastic around RAM outward.
- Remove the popped up RAM

Step 3



- Use two thumbs to push two plastic around the other RAM outward.
- Remove the popped up RAM

To reassemble your device, follow these instructions in reverse order.